



Accessories for Network Interfaces CAN/LIN/IO/Ethernet/FlexRay

Version 10.1 | English

Imprint

Vector Informatik GmbH
Ingersheimer Straße 24
D-70499 Stuttgart

The information and data given in this user manual can be changed without prior notice. No part of this manual may be reproduced in any form or by any means without the written permission of the publisher, regardless of which method or which instruments, electronic or mechanical, are used. All technical information, drafts, etc. are liable to law of copyright protection.

© Copyright 2026, Vector Informatik GmbH. All rights reserved.

Contents

1 Introduction	10
1.1 About this User Manual	11
1.1.1 Warranty	12
1.1.2 Registered Trademarks	12
1.2 Important Notes	13
2 Accessories Finder	14
2.1 Accessories for VN0601	16
2.2 Accessories for VN1150	16
2.3 VN1500 Interface Family	17
2.3.1 Accessories for VN1530	17
2.3.2 Accessories for VN1531	17
2.4 VN1600 Interface Family	18
2.4.1 Accessories for VN1610	18
2.4.2 Accessories for VN1611	18
2.4.3 Accessories for VN1630A	18
2.4.4 Accessories for VN1640A	19
2.4.5 Accessories for VN1630 log	19
2.4.6 Accessories for VN1641	20
2.4.7 Accessories for VN1670	20
2.5 Accessories for VN2640	22
2.6 Accessories for VN4610	23
2.7 VN5000 Interface Family	24
2.7.1 Accessories for VN5240	24
2.7.2 Accessories for VN5430	24
2.7.3 Accessories for VN5601	25
2.7.4 Accessories for VN5610A	25
2.7.5 Accessories for VN5611	25
2.7.6 Accessories for VN5612	25
2.7.7 Accessories for VN5620	26
2.7.8 Accessories for VN5620A	26
2.7.9 Accessories for VN5631	27
2.7.10 Accessories for VN5632	27
2.7.11 Accessories for VN5640 Option 1000BASE-T1	28
2.7.12 Accessories for VN5640	29
2.7.13 Accessories for VN5650	29
2.8 VN7500 Interface Family	31
2.8.1 Accessories for VN7570	31

2.8.2 Accessories for VN7572	32
2.9 VN7600 Interface Family	33
2.9.1 Accessories for VN7610	33
2.9.2 Accessories for VN7640	33
2.10 VN8900 Interface Family	35
2.10.1 Accessories for VN8911	35
2.10.2 Accessories for VN8917	36
2.10.3 Accessories for VN8970	36
2.10.4 Accessories for VN8972	36
3 Transceiver - Products	38
3.1 Piggybacks	39
3.1.1 CAN High-Speed	40
3.1.2 CAN SIC XL	40
3.1.3 CAN Low-Speed (fault tolerant)	40
3.1.4 LIN	40
3.1.5 Single Wire CAN	41
3.1.6 Truck & Trailer CAN	41
3.1.7 Digital/Analog IO	41
3.1.8 J1708	41
3.1.9 FlexRay	41
3.1.10 Sensors	42
3.1.11 Vehicle Electrics and Ground/Earth	43
3.1.12 Electrical Isolation	46
3.2 Compatibility	48
4 Transceiver - Technical Data	49
4.1 D-SUB Pin Assignment	50
4.2 CAN High-Speed	52
4.2.1 General Information	52
4.2.2 1057Gcap	52
4.2.3 1462BT	53
4.2.4 1041Amag	54
4.3 CAN SIC XL	56
4.3.1 General Information	56
4.3.2 ALBI02	58
4.4 CAN Low-Speed (fault tolerant)	59
4.4.1 General Information	59
4.4.2 1055cap	60
4.5 LIN	62

4.5.1 General Information	62
4.5.2 7259	63
4.6 Single Wire CAN	65
4.6.1 General Information	65
4.6.2 7356cap	65
4.7 J1708	68
4.7.1 General Information	68
4.7.2 65176opto	68
4.8 Truck & Trailer CAN	69
4.8.1 General Information	69
4.8.2 10011opto	70
4.9 FlexRay	71
4.9.1 General Information	71
4.9.2 1082cap	72
4.10 Sensors	73
4.10.1 SENT (Single Edge Nibble Transmission)	73
4.10.2 UART	75
4.10.3 UARToverCAN	76
5 IO Piggybacks	77
5.1 IOPiggy 8642	78
5.1.1 General Information	78
5.1.2 Digital Inputs and Outputs	79
5.1.3 Analog Inputs and Outputs	81
5.1.4 PWM Outputs (PWM0/PWM1)	83
5.1.5 PWM Input (PWM0)	83
5.1.6 Analog Comparator	83
5.1.7 D-SUB15 Pin Configuration Examples	84
5.1.8 Technical Data	85
5.2 VNpiggy30 IO 8644	87
5.2.1 General Information	87
5.2.2 Digital Inputs and Outputs	88
5.2.3 Analog Inputs and Outputs	91
5.2.4 PWM Outputs (PWM0/PWM1)	92
5.2.5 PWM Input (PWM0)	92
5.2.6 D-SUB15HD Pin Configuration Examples	93
5.2.7 Technical Data	94
6 Cables and Connectors	96
6.1 CAN/LIN	98

6.1.1 CANcable0	98
6.1.2 CANcable1	98
6.1.3 CANcableA	99
6.1.4 CANcable TnT (D-SUB9 to Bunch Plugs)	99
6.1.5 CANcable TnT Term	100
6.1.6 CANcableY	100
6.1.7 CANcable 2Y	101
6.1.8 CANterm 120	102
6.1.9 CANcable Set Pro	102
6.2 Ethernet	103
6.2.1 AEcable 2Y Family	103
6.2.2 AEcable MultiGig Family	109
6.2.3 AEcable ix/DSUB9 Family	111
6.2.4 10BASEterm	118
6.2.5 BRcable 2Y	119
6.2.6 VNCable D-SUB9 HSD Z Male	120
6.2.7 VNCable D-SUB9 HSD Z Female	121
6.2.8 Ethernet Cables	122
6.3 MOST	126
6.3.1 ECL Cable	126
6.3.2 Fiber Optic Cable	126
6.3.3 Fiber Optic Cable Coupling	127
6.4 FlexRay	128
6.4.1 FRcable Set	128
6.4.2 FRcable A	128
6.4.3 FRcable AB	129
6.4.4 FRterm	130
6.4.5 FR/CANcable 2Y	131
6.5 OBDcables	132
6.5.1 OBDcable CAN	132
6.5.2 OBDcable OEM GM	133
6.5.3 OBDcable OEM01	134
6.5.4 OBDcable DoIP/CAN B1	135
6.6 USB Cables and Hub	137
6.6.1 USB Cable 2.0	137
6.6.2 USB Cable 2.0 (C-B, 1.8m)	137
6.6.3 USB Cable 3.0 (A-B, 1.8m)	138
6.6.4 USB Cable 3.0 (Type-B Conn. with Screws)	138
6.6.5 USB Cable 3.1 Type A-C (Dual Screw Lock)	139
6.6.6 USB Cable 3.1 Type C-C (Dual Screw Lock)	139
6.6.7 USBcable 3.2 Gen 2 C-C SDSL	140

6.6.8 USBcable 3.2 Gen 2 C-C DDSL	140
6.6.9 USBcable 3.2 Gen 2 C-B DDSL	141
6.6.10 USBadapter 3.2 Gen 1 C-A SDSL	141
6.6.11 USB 3.2 Gen2x1 Hub	142
6.7 Miscellaneous	144
6.7.1 Cable Binder 3pol Connector with Pigtail	144
6.7.2 Power Sync Cable 2xBinder <=> Banana Plugs	145
6.7.3 Breakout Box D62Y9	146
6.7.4 VNCable DSUB62	148
6.7.5 VNCable DSUB62 A	149
6.7.6 VNCable DSUB62 B	150
6.7.7 VNCable D62Y9	151
6.7.8 VNCable DSUB37	152
6.7.9 VNCable 3Y	153
6.7.10 VNCable 4Y	155
6.7.11 Terminal Block DSUB37	157
6.7.12 VX1362B CAN Cable LEMO/Banana Plugs 1.5M	157
7 Power Supply	159
7.1 Vector Power Supply Units	160
7.1.1 Vector Power Supply 12V/1.5A	160
7.1.2 Vector Power Supply ODU Mini-Snap	161
7.1.3 Power Supply 24V/2.5A DC Coaxial Plug	164
7.1.4 Power Supply USB-C Basic	165
7.2 On-Board Power Supply	166
7.2.1 Car Power Supply Cable 12V with Binder	166
7.2.2 Cable Vehicle Input <=> ODU Mini-Snap	167
7.3 Power Supply Cable	168
7.3.1 Cable Banana Plug <=> Binder 3-pin	168
7.3.2 Cable Banana Plug <=> ODU Mini-Snap	169
7.3.3 Power Adapter OBDII – ODU Mini Snap	169
8 Time Synchronization	170
8.1 Time Synchronization	171
8.1.1 General Information	171
8.1.2 Software Sync	173
8.1.3 Hardware Sync	174
8.2 SYNCcables	176
8.2.1 Vector SYNCcableXL	176
8.2.2 Vector SYNCcable50	177

8.3 SYNCboxes	178
8.3.1 Multi SYNCbox External	178
8.3.2 Multi SYNCbox Internal	179
8.3.3 Multi SYNCbox Active	180
9 Miscellaneous	181
9.1 Mounting Equipment	182
9.1.1 VSH Cable Guard 216	182
9.1.2 VSH Cable Guard 216 Clip	185
9.1.3 VSH Connection Kit 19"	186
9.1.4 VSH Connection Kit Horizontal	188
9.1.5 VSH Connection Kit Vertical	189
9.1.6 VSH Equipment Foot Kit	190
9.1.7 VSH Mounting Flange Kit	191
9.1.8 Fix Kit 32mm Device	192
9.1.9 Fix Kit 42mm Device	193
9.1.10 Fix Kit Large Device	194
9.2 Antennas	195
9.2.1 2.4 & 5 GHz Antenna SMA-R Std.	195
9.2.2 2.4 & 5.2 GHz Antenna SMA-R Asia	195
9.2.3 5.9 GHz DSRC Antenna SMA	196
9.2.4 GNSS Antenna SMA	196
9.3 SDHC/SDXC Memory Cards	197
9.3.1 SDHC Memory Card (XQI8C016Z) 32 GB	197
9.3.2 SDXC Memory Card (GXQI8C016Z) 128GB	197
9.4 CFast Card Reader USB 3.0 (external)	198
9.5 Ser2K	198
9.6 Protection	199
9.6.1 USB Protector Type 1	199
9.6.2 Front Panel for VN8900	200
9.6.3 Protection Kit 1040	201
10 Important Notes - Details	204
10.1 Safety Instructions and Hazard Warnings	205
10.2 Disclaimer	206
10.3 Disposal of Vector Hardware	207
11 Wichtige Hinweise	208
11.1 Sicherheits- und Gefahrenhinweise	209

11.2 Haftungsausschluss	210
11.3 Entsorgung von Vector Hardware	211

1 Introduction

In this chapter you find the following information:

1.1 About this User Manual	11
1.1.1 Warranty	12
1.1.2 Registered Trademarks	12
1.2 Important Notes	13

1.1 About this User Manual

Conventions

In the two following charts you will find the conventions used in the user manual regarding utilized spellings and symbols.

Style	Utilization
bold	Blocks, surface elements, window and dialog names of the software. Accentuation of warnings and advices. [OK] Push buttons in brackets File Save Notation for menus and menu entries
Source Code	File name and source code.
Hyperlink	Hyperlinks and references.
<CTRL>+<S>	Notation for shortcuts.

Symbol	Utilization
	This symbol calls your attention to warnings.
	Here you can obtain supplemental information.
	Here you can find additional information.
	Here is an example that has been prepared for you.
	Step-by-step instructions provide assistance at these points.
	Instructions on editing files are found at these points.
	This symbol warns you not to edit the specified file.

1.1.1 Warranty

Restriction of warranty

We reserve the right to change the contents of the documentation and the software without notice. Vector Informatik GmbH assumes no liability for correct contents or damages which are resulted from the usage of the documentation. We are grateful for references to mistakes or for suggestions for improvement to be able to offer you even more efficient products in the future.

1.1.2 Registered Trademarks

Registered trademarks

All trademarks mentioned in this documentation and if necessary third party registered are absolutely subject to the conditions of each valid label right and the rights of particular registered proprietor. All trademarks, trade names or company names are or can be trademarks or registered trademarks of their particular proprietors. All rights which are not expressly allowed are reserved. If an explicit label of trademarks, which are used in this documentation, fails, should not mean that a name is free of third party rights.

- ▶ Windows, Windows 7, Windows 8.1, Windows 10, Windows 11 are trademarks of the Microsoft Corporation.

1.2 Important Notes

**WARNING!**

We provide our important notes and safety instructions in several languages, including English (EN) and German (DE). For more details, see the relevant section:

- ▶ EN: [Important Notes - Details](#)
- ▶ DE: [Wichtige Hinweise](#)

2 Accessories Finder

In this chapter you find the following information:

2.1 Accessories for VN0601	16
2.2 Accessories for VN1150	16
2.3 VN1500 Interface Family	17
2.3.1 Accessories for VN1530	17
2.3.2 Accessories for VN1531	17
2.4 VN1600 Interface Family	18
2.4.1 Accessories for VN1610	18
2.4.2 Accessories for VN1611	18
2.4.3 Accessories for VN1630A	18
2.4.4 Accessories for VN1640A	19
2.4.5 Accessories for VN1630 log	19
2.4.6 Accessories for VN1641	20
2.4.7 Accessories for VN1670	20
2.5 Accessories for VN2640	22
2.6 Accessories for VN4610	23
2.7 VN5000 Interface Family	24
2.7.1 Accessories for VN5240	24
2.7.2 Accessories for VN5430	24
2.7.3 Accessories for VN5601	25
2.7.4 Accessories for VN5610A	25
2.7.5 Accessories for VN5611	25
2.7.6 Accessories for VN5612	25
2.7.7 Accessories for VN5620	26
2.7.8 Accessories for VN5620A	26
2.7.9 Accessories for VN5631	27
2.7.10 Accessories for VN5632	27
2.7.11 Accessories for VN5640 Option 1000BASE-T1	28
2.7.12 Accessories for VN5640	29
2.7.13 Accessories for VN5650	29
2.8 VN7500 Interface Family	31
2.8.1 Accessories for VN7570	31
2.8.2 Accessories for VN7572	32
2.9 VN7600 Interface Family	33
2.9.1 Accessories for VN7610	33
2.9.2 Accessories for VN7640	33

2.10 VN8900 Interface Family	35
2.10.1 Accessories for VN8911	35
2.10.2 Accessories for VN8917	36
2.10.3 Accessories for VN8970	36
2.10.4 Accessories for VN8972	36

2.1 Accessories for VN0601

Cables and connectors

- ▶ VNCable DSUB37 (page 152)
- ▶ Terminal Block DSUB37 (page 157)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 2.0 (page 137)

2.2 Accessories for VN1150

Bus transceiver

- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ SENSORpiggies (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)

2.3 VN1500 Interface Family

2.3.1 Accessories for VN1530

- Bus transceiver
 - ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- Cables and connectors
 - ▶ VNCable 3Y (page 153)
 - ▶ CANterm 120 (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox internal (page 179)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)

2.3.2 Accessories for VN1531

- Bus transceiver
 - ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- Cables and connectors
 - ▶ VNCable 3Y (page 153)
 - ▶ CANterm 120 (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox internal (page 179)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)

2.4 VN1600 Interface Family

2.4.1 Accessories for VN1610

Cables and connectors

- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ USBadapter 3.2 Gen 1 C-A SDSL (Single Screw Lock) (page 141)

2.4.2 Accessories for VN1611

Cables and connectors

- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ USBadapter 3.2 Gen 1 C-A SDSL (Single Screw Lock) (page 141)

2.4.3 Accessories for VN1630A

Bus transceiver

- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ J1708 Piggyback (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox active (page 180)

- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 2.0 (page 137)
- Miscellaneous
 - ▶ Fix Kit 32mm Device (page 192)
 - ▶ USB Protector Type 1 (page 199)

2.4.4 Accessories for VN1640A

- Bus transceiver
 - ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
 - ▶ J1708 Piggyback (see section [Compatibility](#) on page 48)
 - ▶ SENT Piggyback (see section [Compatibility](#) on page 48)
- Cables and connectors
 - ▶ CANcable0 (page 98)
 - ▶ CANcable1 (page 98)
 - ▶ CANcableA (page 99)
 - ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
 - ▶ CANcable Y (page 100)
 - ▶ CANterm 120 (page 102)
 - ▶ CANcable Set Pro (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)
 - ▶ USB Cable 2.0 (page 137)
- Miscellaneous
 - ▶ Fix Kit 42mm Device (page 193)
 - ▶ Protection Kit 1040 (page 201)
 - ▶ USB Protector Type 1 (page 199)

2.4.5 Accessories for VN1630 log

- Bus transceiver
 - ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- Cables and connectors
 - ▶ CANcable0 (page 98)
 - ▶ CANcable1 (page 98)
 - ▶ CANcableA (page 99)
 - ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
 - ▶ CANcable TnT Term (page 100)
 - ▶ CANcable Y (page 100)
 - ▶ CANcable 2Y (page 101)
 - ▶ CANterm 120 (page 102)
 - ▶ CANcable Set Pro (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)

- ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)
 - ▶ USB Cable 2.0 (page 137)
- Power supply**
- ▶ Vector Power Supply 12V/1.5A (page 160)
 - ▶ Cable Banana Plug <> Binder 3-pin (page 168)
 - ▶ Car Power Supply Cable 12V with Binder (page 166)
- Miscellaneous**
- ▶ Fix Kit 32mm Device (page 192)
 - ▶ SD/SDHC Memory Cards (page 197)

2.4.6 Accessories for VN1641

- Bus transceiver**
- ▶ CANpiggies (see section [Compatibility](#) on page 48)
- Cables and connectors**
- ▶ CANcable0 (page 98)
 - ▶ CANcable1 (page 98)
 - ▶ CANcableA (page 99)
 - ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
 - ▶ CANcable Y (page 100)
 - ▶ CANterm 120 (page 102)
 - ▶ CANcable Set Pro (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)
 - ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
 - ▶ USB 3.2 Gen2x1 Hub (page 142)
- Power supply**
- ▶ Power Supply USB-C Basic (page 165)
- Miscellaneous**
- ▶ Fix Kit 42mm Device (page 193)
 - ▶ Protection Kit 1040 (page 201)

2.4.7 Accessories for VN1670

- Bus transceiver**
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- Cables and connectors**
- ▶ VNCable 3Y (page 153)
 - ▶ CANterm 120 (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)

- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ VSH Connecting Kit 19" (page 186)
- ▶ VSH Connecting Kit Horizontal (page 188)
- ▶ VSH Connecting Kit Vertical (page 189)
- ▶ VSH Equipment Foot Kit (page 190)
- ▶ VSH Mounting Flange (page 191)

2.5 Accessories for VN2640

Cables and connectors

- ▶ Fiber Optic Cable (page 126)
- ▶ Fiber Optic Cable Coupling (page 127)
- ▶ ECL cable (page 126)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 2.0 (page 137)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <> Binder 3-pin (page 168)
- ▶ Car Power Supply Cable 12V with Binder (page 166)

Miscellaneous

- ▶ Fix Kit 32mm Device (page 192)

2.6 Accessories for VN4610

Cables and connectors

- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 2.0 (page 137)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <> Binder 3-pin (page 168)
- ▶ Car Power Supply Cable 12V with Binder (page 166)

Miscellaneous

- ▶ Fix Kit 42mm Device (page 193)
- ▶ 5.9 GHz DSRC Antenna SMA (page 196)
- ▶ GNSS Antenna SMA (page 196)
- ▶ Protection Kit 1040 (page 201)

2.7 VN5000 Interface Family

2.7.1 Accessories for VN5240

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ VSH Cable Guard 216 (page 182)
- ▶ VSH Cable Guard 216 Clip (page 185)
- ▶ VSH Connecting Kit 19" (page 186)
- ▶ VSH Connecting Kit Horizontal (page 188)
- ▶ VSH Connecting Kit Vertical (page 189)
- ▶ VSH Equipment Foot Kit (page 190)
- ▶ VSH Mounting Flange (page 191)

2.7.2 Accessories for VN5430

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <> Binder 3-pin (page 168)
- ▶ Car Power Supply Cable 12V with Binder (page 166)

Miscellaneous

- ▶ Fix Kit 32mm Device (page 192)

2.7.3 Accessories for VN5601

Cables and connectors

- ▶ USBadapter 3.2 Gen 1 C-A SDSL (Single Screw Lock) (page 141)
- ▶ Ethernet cables (page 122)

2.7.4 Accessories for VN5610A

Cables and connectors

- ▶ BRcable 2Y (page 119)
- ▶ VNCable D-SUB9 HSD Z (page 120)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ Cable LEMO/Banana Plugs (page 157)
- ▶ USB Cable 2.0 (page 137)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <=> Binder 3-pin (page 168)
- ▶ Car Power Supply Cable 12V with Binder (page 166)

Miscellaneous

- ▶ Fix Kit 32mm Device (page 192)

2.7.5 Accessories for VN5611

Cables and connectors

- ▶ AECable 2Y (page 103)
- ▶ USBadapter 3.2 Gen 1 C-A SDSL (Single Screw Lock) (page 141)

2.7.6 Accessories for VN5612

Cables and connectors

- ▶ USBadapter 3.2 Gen 1 C-A SDSL (Single Screw Lock) (page 141)
- ▶ Ethernet cables (page 122)

2.7.7 Accessories for VN5620

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ Cable LEMO/Banana Plugs (page 157)
- ▶ USB Cable 3.1 Type A-C (Dual Screw Lock) (page 139)
- ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <=> Binder 3-pin (page 168)
- ▶ Car Power Supply Cable 12V with Binder (page 166)

Miscellaneous

- ▶ Fix Kit 32mm Device (page 192)

2.7.8 Accessories for VN5620A

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ Cable LEMO/Banana Plugs (page 157)

- ▶ USB Cable 3.1 Type A-C (Dual Screw Lock) (page 139)
 - ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
 - ▶ Ethernet cables (page 122)
- Power supply**
- ▶ Vector Power Supply 12V/1.5A (page 160)
 - ▶ Cable Banana Plug <> Binder 3-pin (page 168)
 - ▶ Car Power Supply Cable 12V with Binder (page 166)
- Miscellaneous**
- ▶ Fix Kit 32mm Device (page 192)

2.7.9 Accessories for VN5631

- Cables and connectors**
- ▶ AEcable 2Y (page 103)
 - ▶ AEcable 2Y DSUB9 10BASE-T1S (page 115)
 - ▶ CANcable1 (page 98)
 - ▶ CANcableA (page 99)
 - ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
 - ▶ CANcable Y (page 100)
 - ▶ CANcable 2Y (page 101)
 - ▶ CANterm 120 (page 102)
 - ▶ CANcable Set Pro (page 102)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox internal (page 179)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)
 - ▶ USB Cable 3.1 Type A-C (Dual Screw Lock) (page 139)
 - ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
 - ▶ Ethernet cables (page 122)
- Power supply**
- ▶ Vector Power Supply ODU Mini-Snap (page 161)
 - ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
 - ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

2.7.10 Accessories for VN5632

- Cables and connectors**
- ▶ AEcable 2Y (page 103)
 - ▶ AEcable MultiGig Family (page 109)
 - ▶ Vector SYNCcableXL (page 176)
 - ▶ Vector SYNCcable50 (page 177)
 - ▶ Multi SYNCbox external (page 178)
 - ▶ Multi SYNCbox internal (page 179)
 - ▶ Multi SYNCbox active (page 180)
 - ▶ Cable Binder 3pol Connector with Pigtail (page 144)

- ▶ USB Cable 3.1 Type A-C (Dual Screw Lock) (page 139)
- ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

2.7.11 Accessories for VN5640 Option 1000BASE-T1

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ BRcable 2Y (page 119)
- ▶ VNcable D-SUB9 HSD Z (page 120)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.0 (page 137)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ Fix Kit Large Device (page 194)

2.7.12 Accessories for VN5640

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ BRcable 2Y (page 119)
- ▶ VNCable D-SUB9 HSD Z (page 120)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.0 (page 137)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ Fix Kit Large Device (page 194)

2.7.13 Accessories for VN5650

Cables and connectors

- ▶ AEcable 2Y (page 103)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.1 Type A-C (Dual Screw Lock) (page 139)
- ▶ USB Cable 3.1 Type C-C (Dual Screw Lock) (page 139)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)

Miscellaneous

- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)
- ▶ VSH Cable Guard 216 (page 182)
- ▶ VSH Cable Guard 216 Clip (page 185)
- ▶ VSH Connecting Kit 19" (page 186)
- ▶ VSH Connecting Kit Horizontal (page 188)
- ▶ VSH Connecting Kit Vertical (page 189)
- ▶ VSH Equipment Foot Kit (page 190)
- ▶ VSH Mounting Flange (page 191)

2.8 VN7500 Interface Family

2.8.1 Accessories for VN7570

Bus transceiver

- ▶ FRpiggies (see section [Compatibility](#) on page 48)
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ IOpiggy 8642 (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ Breakout Box D62Y9 (page 146)
- ▶ VNcable DSUB62 for Breakout Box (page 148)
- ▶ VNcable DSUB62 A (page 149)
- ▶ VNcable DSUB62 B (page 150)
- ▶ VNcable D62Y9 (page 151)
- ▶ FRcable A (page 128)
- ▶ FRcable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRcable Set (page 128)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable TnT Term (page 100)
- ▶ CANcable Y (page 100)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)

2.8.2 Accessories for VN7572

Bus transceiver

- ▶ FRpiggies (see section [Compatibility](#) on page 48)
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ IOpiggy 8642 (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ Breakout Box D62Y9 (page 146)
- ▶ VNCable DSUB62 for Breakout Box (page 148)
- ▶ VNCable DSUB62 A (page 149)
- ▶ VNCable DSUB62 B (page 150)
- ▶ VNCable D62Y9 (page 151)
- ▶ FRCable A (page 128)
- ▶ FRCable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRCable Set (page 128)
- ▶ CANCable0 (page 98)
- ▶ CANCable1 (page 98)
- ▶ CANCableA (page 99)
- ▶ CANCable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANCable TnT Term (page 100)
- ▶ CANCable Y (page 100)
- ▶ CANterm 120 (page 102)
- ▶ CANCable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)

2.9 VN7600 Interface Family

2.9.1 Accessories for VN7610

Cables and connectors

- ▶ FR/CANcable 2Y (page 131)
- ▶ FRcable A (page 128)
- ▶ FRcable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRcable Set (page 128)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ USBadapter 3.2 Gen 1 C-A SD SL (Single Screw Lock) (page 141)

2.9.2 Accessories for VN7640

Bus transceiver

- ▶ FRpiggies (see section [Compatibility](#) on page 48)
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ FRcable A (page 128)
- ▶ FRcable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRcable Set (page 128)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable Y (page 100)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)
- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox internal (page 179)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 2.0 (page 137)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply 12V/1.5A (page 160)
- ▶ Cable Banana Plug <> Binder 3-pin (page 168)

Miscellaneous

- ▶ Fix Kit 42mm Device (page 193)
- ▶ Protection Kit 1040 (page 201)

2.10 VN8900 Interface Family

2.10.1 Accessories for VN8911

Cables and connectors

- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.0 (page 137)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Car Power Supply Cable 12V with Binder (page 166)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ Fix Kit Large Device (page 194)
- ▶ SD/SDHC/SDXC Memory Cards (page 197)
- ▶ Front Panel for VN8900 (page 200)
- ▶ CFast Card Reader USB 3.0 (external) (page 198)

2.10.2 Accessories for VN8917

Cables and connectors

- ▶ Vector SYNCcableXL (page 176)
- ▶ Vector SYNCcable50 (page 177)
- ▶ Multi SYNCbox external (page 178)
- ▶ Multi SYNCbox active (page 180)
- ▶ Cable Binder 3pol Connector with Pigtail (page 144)
- ▶ USB Cable 3.0 (page 137)
- ▶ USB Cable 3.0 (Type-B Conn. with Screws) (page 138)
- ▶ Ethernet cables (page 122)

Power supply

- ▶ Vector Power Supply ODU Mini-Snap (page 161)
- ▶ Car Power Supply Cable 12V with Binder (page 166)
- ▶ Cable Vehicle Input <> ODU Mini-Snap (page 167)
- ▶ Cable Banana Plug <> ODU Mini-Snap (page 169)

Miscellaneous

- ▶ Fix Kit Large Device (page 194)
- ▶ SD/SDHC/SDXC Memory Cards (page 197)
- ▶ Front Panel for VN8900 (page 200)

2.10.3 Accessories for VN8970

Bus transceiver

- ▶ FRpiggies (see section [Compatibility](#) on page 48)
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ IOpiggy 8642 (see section [Compatibility](#) on page 48)

Cables and connectors

- ▶ FRcable A (page 128)
- ▶ FRcable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRcable Set (page 128)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable TnT Term (page 100)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)

2.10.4 Accessories for VN8972

Bus transceiver

- ▶ FRpiggies (see section [Compatibility](#) on page 48)
- ▶ CAN-/LINpiggies (see section [Compatibility](#) on page 48)
- ▶ IOpiggy 8642 (see section [Compatibility](#) on page 48)

**Cables and
connectors**

- ▶ FRcable A (page 128)
- ▶ FRcable AB (page 129)
- ▶ FRterm (page 130)
- ▶ FRcable Set (page 128)
- ▶ CANcable0 (page 98)
- ▶ CANcable1 (page 98)
- ▶ CANcableA (page 99)
- ▶ CANcable TnT (D-SUB9 to Bunch Plugs) (page 99)
- ▶ CANcable TnT Term (page 100)
- ▶ CANcable Y (page 100)
- ▶ CANcable 2Y (page 101)
- ▶ CANterm 120 (page 102)
- ▶ CANcable Set Pro (page 102)

3 Transceiver - Products

In this chapter you find the following information:

3.1 Piggybacks	39
3.1.1 CAN High-Speed	40
3.1.2 CAN SIC XL	40
3.1.3 CAN Low-Speed (fault tolerant)	40
3.1.4 LIN	40
3.1.5 Single Wire CAN	41
3.1.6 Truck & Trailer CAN	41
3.1.7 Digital/Analog IO	41
3.1.8 J1708	41
3.1.9 FlexRay	41
3.1.10 Sensors	42
3.1.11 Vehicle Electrics and Ground/Earth	43
3.1.12 Electrical Isolation	46
3.2 Compatibility	48

3.1 Piggybacks

Properties

A piggyback implements the interconnection of the network interface to a specific bus (e. g. CAN/LIN/IO/FlexRay) by the use of various transceivers. The piggyback is inserted in the network interface and can be replaced according to the bus requirements (please take note of the instructions in the network interface user manual).



WARNING!

Ensure an ESD safe working environment during disassembly and assembly. Avoid touching the top, bottom or connectors of the boards during this process to avoid ESD damage.

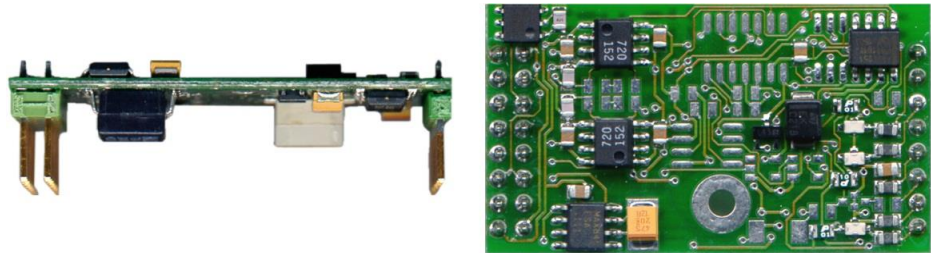


Figure 1: Piggyback

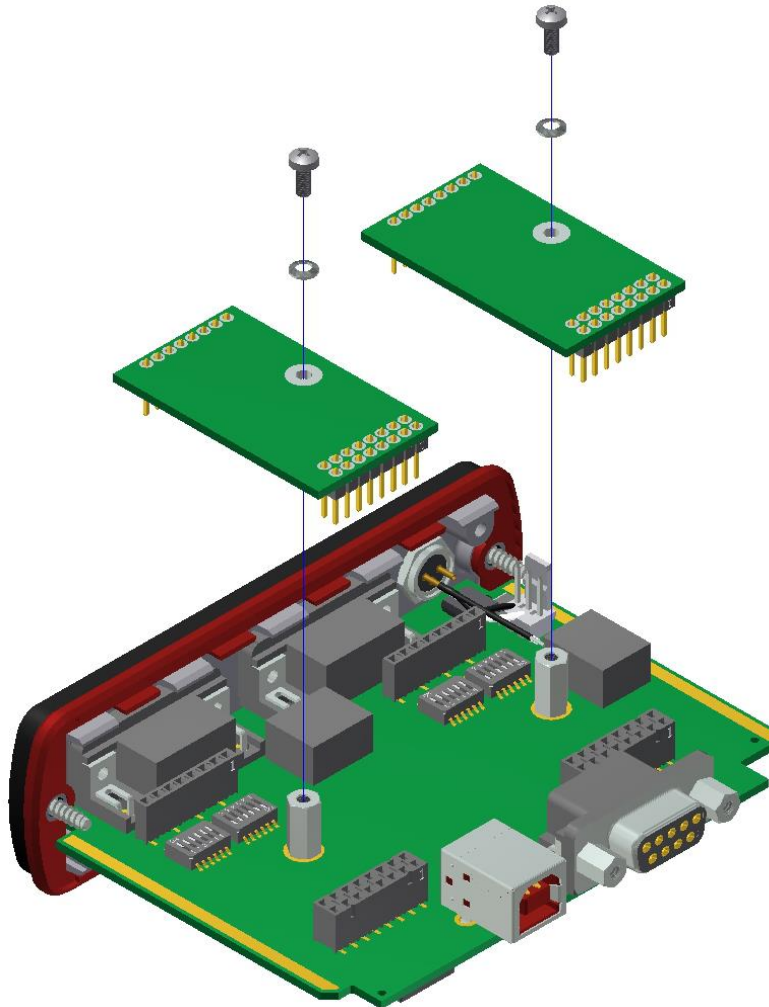


Figure 2: Example with VN1630A

3.1.1 CAN High-Speed

CANpiggy	Transceiver	Description	Part no.
1041Amag	TJA1041A	Magnetically decoupled, wake-up capable.	22082
1057Gcap	TJA1057G	Capacitively decoupled. Suitable for - 2 Mbit/s CAN - CAN FD up to 5 Mbit/s guaranteed in simple networks - (8 Mbit/s depending on topology, P2P)	22070
1462BT	TJA1462BT	Electrically decoupled. Suitable for: - 1 Mbit/s CAN - higher than 5 Mbit/s CAN FD (CAN SIC) with many nodes and longer stubs - higher than 8 Mbit/s in peer-to-peer networks (CAN SIC)	22555

3.1.2 CAN SIC XL

CANpiggy	Transceiver	Description	Part no.
ALBI02	ALBI02	Electrically decoupled. Suitable for: - CAN: up to 1 Mbit/s (up to 2 Mbit/s depending on wiring and transceivers) - CAN FD: up to 5 Mbit/s (up to 8 Mbit/s depending on wiring and other transceivers on the bus) - CAN XL: up to 16 Mbit/s (up to 20 Mbit/s depending on wiring and other transceivers on the bus)	22589

3.1.3 CAN Low-Speed (fault tolerant)

CANpiggy	Transceiver	Description	Part no.
1055cap	TJA1055	Capacitively decoupled. Switchable terminating resistor.	22069

3.1.4 LIN

LINpiggy	Transceiver	Description	Part no.
7259	TLE7259-3GE	Electrically decoupled. Compatible to LIN2.x physical layer (12 V and 24 V). Provides dominant and recessive stress functionality.	22567

3.1.5 Single Wire CAN

CANpiggy	Transceiver	Description	Part no.
7356cap	NCV7356	Capacitively decoupled. 100 Ω resistance can be activated automatically upon switching over to high-speed mode. External power supply required.	22244

3.1.6 Truck & Trailer CAN

CANpiggy	Transceiver	Description	Part no.
10011opto	B10011S	Optically decoupled. External power supply required.	22031

3.1.7 Digital/Analog IO

IOpiggy	Transceiver	Description	Part no.
8642	-	Used for generation and measurement of analog and digital signals (see section IOpiggy 8642 on page 78).	22208
8644	-	Used for generation and measurement of analog and digital signals (see section VNPiggy30 IO 8644 on page 87).	22545

3.1.8 J1708

J1708piggy	Transceiver	Description	Part no.
65176opto	SN65176B	Optically decoupled.	22060

3.1.9 FlexRay

FRpiggy	Transceiver	Description	Part no.
1082cap	2x TJA1082 (Ch A and B)	Capacitively decoupled. With trigger feature.	22099

FRpiggyC	Transceiver	Description	Part no.
1082cap	2x TJA1082 (Ch A and B)	Compact FRpiggy. Capacitively decoupled. With trigger feature.	22121

3.1.10 Sensors

SENSORpiggy	Description	Part no.
SENT	SAE J2716 compatible piggyback.	22435
UART	UART, RS232, RS485 (RS422) compatible piggyback.	22654
UARToverCAN	UART over CAN.	22704

3.1.11 Vehicle Electrics and Ground/Earth

3.1.11.1 General Information

**WARNING!**

When using Vector devices, ensure that the power supply and earthing are correct. Failure to do so may result in damage to the vehicle electronics or the Vector devices due to overvoltage. Two typical scenarios are described below.

3.1.11.2 Vehicle Battery Only (Closed System)

In this scenario, the individual Vector devices are powered directly from the vehicle battery. A third device is powered via USB (e. g. from a notebook in battery mode or from the vehicle battery) or via PCIe (card mounted in a computer and powered from the vehicle battery). The system is therefore closed.

The common reference ground is the chassis, which is connected to the negative terminal of the vehicle battery. Vector devices that have a functional earth connection (FE) must also be connected to the reference ground.

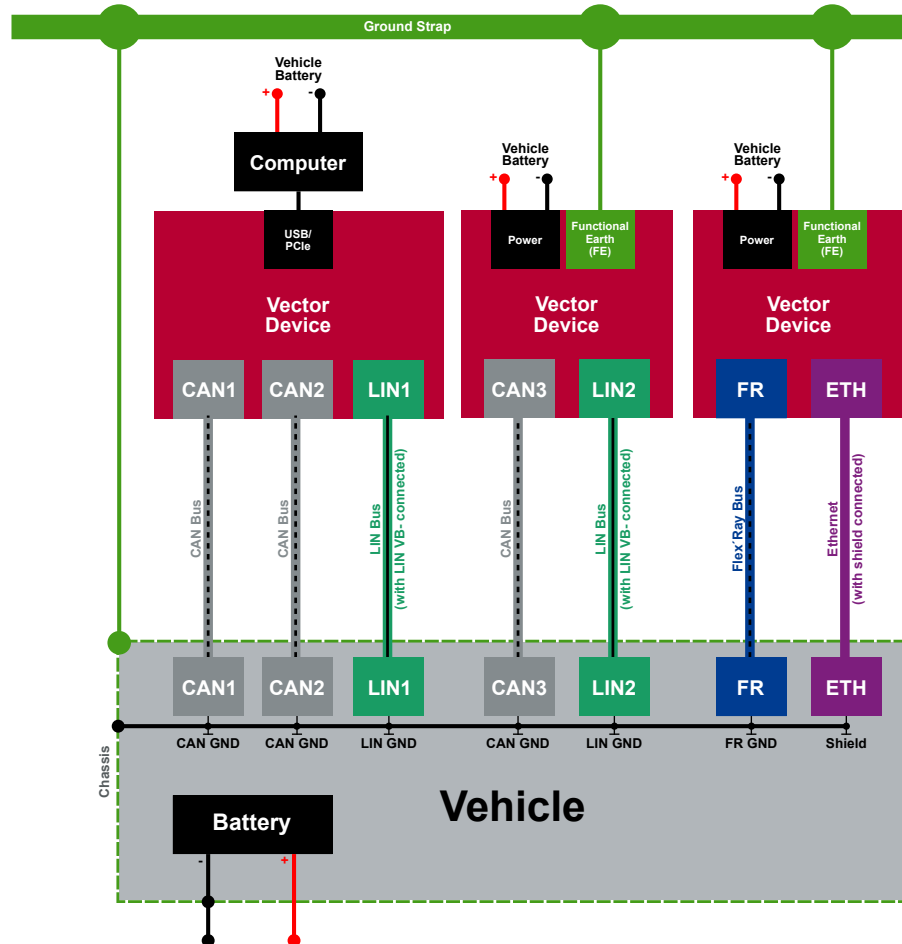


Figure 3: Vector devices powered by vehicle battery

The individual GNDs of the ECUs (in this example CAN, LIN, FlexRay) are connected to the chassis on the vehicle side. The shielding of the Ethernet connections is also connected to the chassis.

In this scenario, LIN VB- must be connected in the LIN signal path (LIN always requires VB- to be connected). For CAN and FlexRay it is recommended to connect all signal GNDs via their connectors (CAN GND, FlexRay VB-) to have the same reference ground from the vehicle battery.

3.1.11.3 External Power Supplies (Test Bench)

In this scenario, the individual Vector devices are powered by individual power supplies. A third device is powered via USB or PCIe. This is a typical test bench scenario.

The common reference ground is earth, which is also connected to the chassis and to the negative terminal of the vehicle battery. Vector devices that have a functional earth connection (FE) must also be connected to the reference ground.

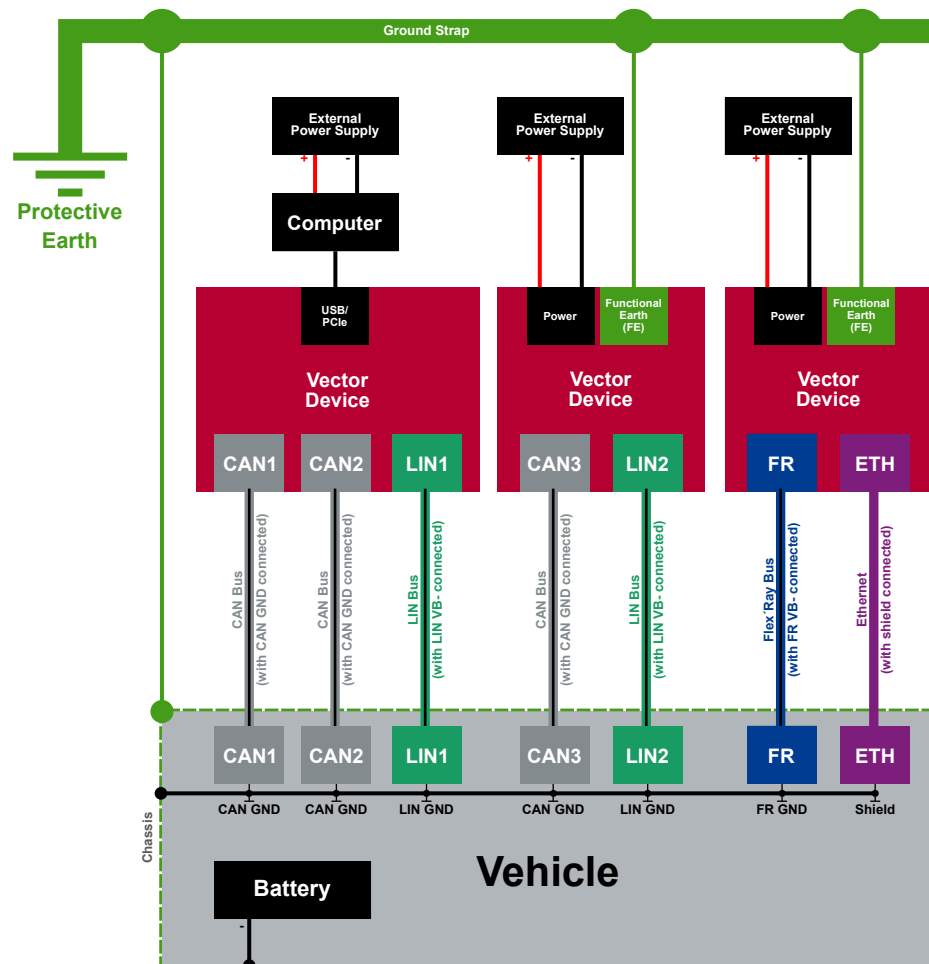


Figure 4: Test bench scenario

The individual GNDs of the ECUs (in this example CAN, LIN, FlexRay) are connected to the chassis on the vehicle side. The shielding of the Ethernet connections is also connected to the chassis.

In this scenario, all signal GNDs must be connected via their connectors (CAN GND, LIN VB-, FlexRay VB-) to have the same reference ground.

3.1.12 Electrical Isolation



Note

The electrical isolation of the interfaces is a functional isolation to avoid ground loops and interferences between the networks. The voltage difference between the isolated areas must not exceed 60 VDC (isolation voltage). The isolation voltage usually exceeds the maximum permissible voltage at a port (operating voltage).

3.1.12.1 CANpiggy

Without external power supply

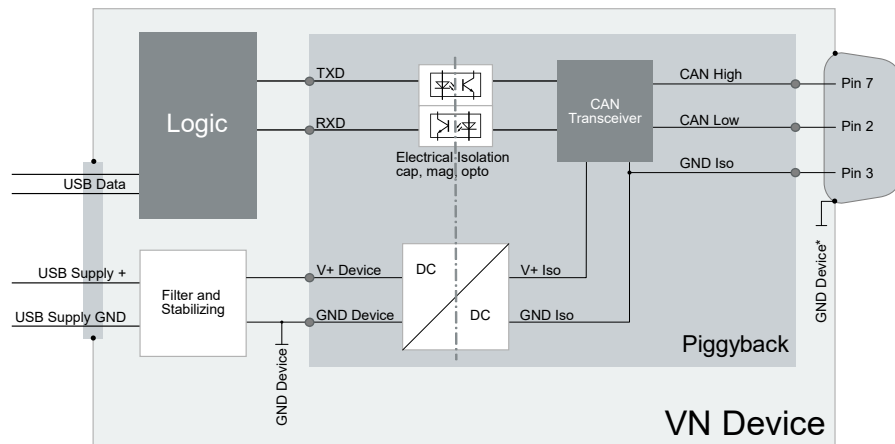


Figure 5: CANpiggy without external power supply

With external power supply

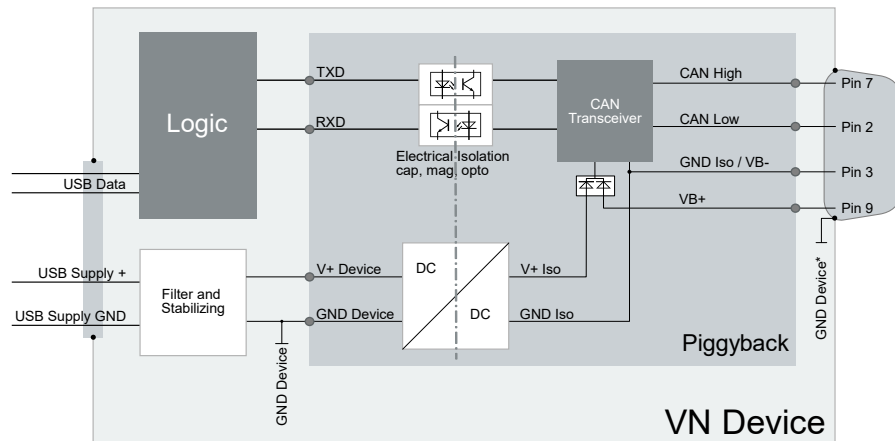


Figure 6: CANpiggy with external power supply

* connection of the D-SUB shell to the device housing depends on the device

3.1.12.2 LINpiggy

Switchable external
power supply

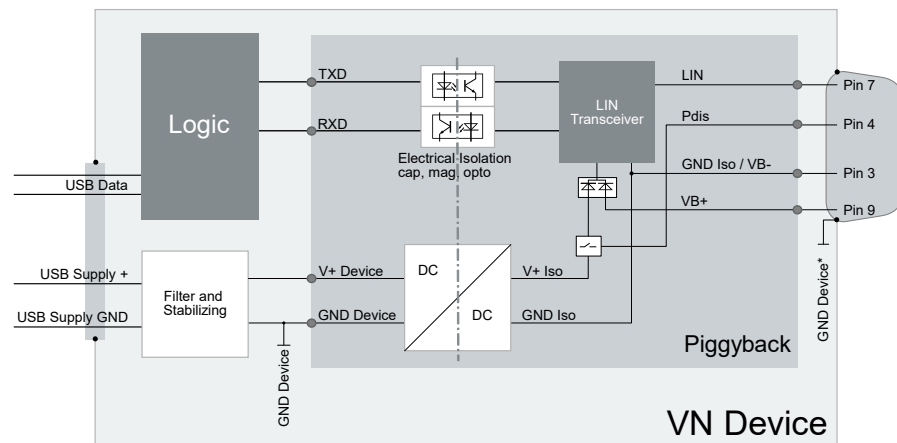


Figure 7: LINpiggy with switchable external power supply

* connection of the D-SUB shell to the device housing depends on the device

3.2 Compatibility

Transceiver

Suitable transceivers (piggybacks) for your network interface can be found in the following table.

Transceiver	VN1500 Interface Family	VN1600 Interface Family	VN1641	VN1670	VN7572	VN7640	VN8970	VN8972	VH6501	VN1150
CAN High-Speed										
1041Amag	✓	✓	-	✓	✓	✓	✓	✓	-	-
1057Gcap	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
1462BT	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
CAN SIC XL										
ALBI02	-	-	✓	✓	-	-	-	-	-	-
CAN Low-Speed										
1055cap	✓	✓	-	✓	✓	✓	✓	✓	-	✓
Single Wire CAN										
7356cap	✓	✓	-	-	✓	✓	✓	✓	-	-
Truck & Trailer CAN										
10011opto	-	-	✓	-	✓	✓	✓	✓	-	-
LIN										
7259	✓	✓	-	✓	✓	✓	✓ ³⁾	✓ ³⁾	-	✓
FlexRay										
1082cap	-	-	-	-	✓ ¹⁾	✓ ¹⁾	✓	✓ ¹⁾	-	-
Sensor										
SENT	✓	✓ ²⁾	-	-	-	-	-	-	-	-
UART	-	-	-	✓	-	-	-	-	-	✓
UARToverCAN	-	-	✓	✓	-	-	-	-	-	✓
Miscellaneous										
8642	-	-	-	-	✓	-	✓	✓	-	-
8644	-	-	-	✓	-	-	-	-	-	-
J1708	✓	✓	-	-	✓	✓	✓	✓	-	-
65176opto										

- ✓ supported
- not supported
- 1) Compact FlexRay piggybacks only
- 2) VN1640/VN1640A only
- 3) Only with drivers for Windows 10/11 (Windows 7 not supported)



Reference

Please refer to our Vector KnowledgeBase for the latest list:
<https://vector.com/kbp/entry/219/>.

4 Transceiver - Technical Data

In this chapter you find the following information:

4.1 D-SUB Pin Assignment	50
4.2 CAN High-Speed	52
4.2.1 General Information	52
4.2.2 1057Gcap	52
4.2.3 1462BT	53
4.2.4 1041Amag	54
4.3 CAN SIC XL	56
4.3.1 General Information	56
4.3.2 ALBI02	58
4.4 CAN Low-Speed (fault tolerant)	59
4.4.1 General Information	59
4.4.2 1055cap	60
4.5 LIN	62
4.5.1 General Information	62
4.5.2 7259	63
4.6 Single Wire CAN	65
4.6.1 General Information	65
4.6.2 7356cap	65
4.7 J1708	68
4.7.1 General Information	68
4.7.2 65176opto	68
4.8 Truck & Trailer CAN	69
4.8.1 General Information	69
4.8.2 10011opto	70
4.9 FlexRay	71
4.9.1 General Information	71
4.9.2 1082cap	72
4.10 Sensors	73
4.10.1 SENT (Single Edge Nibble Transmission)	73
4.10.2 UART	75
4.10.3 UARToverCAN	76

4.1 D-SUB Pin Assignment

Primary pin assignment

The following table shows the pin assignment of the network interface's D-SUB connector, when a cab/piggyback is used individually or, if the D-SUB has a double pin assignment, used as the primary channel. Furthermore, the table applies to network interfaces with D-SUB15 connectors if the corresponding adapter cable is used, e. g. VNcable 3Y (except pin 5 - this optional "shield" is not offered by the VNcable 3Y).

	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5 ¹⁾	Pin 6	Pin 7	Pin 8	Pin 9
CAN High-Speed	1041Amag	-	CAN L	VB-	Split	Shield	-	CAN H	- (VB+)
	1057Gcap	-	CAN L	VB-	-	Shield	-	CAN H	-
	1462BT	-	CAN L	VB-	-	Shield	-	CAN H	-
CAN SIC XL	ALBI02	-	CAN L	VB-	-	-	-	CAN H	-
CAN Low-Speed	1055cap	-	CAN L	VB-	RT1	Shield	-	CAN H	- (VB+)
Single Wire CAN	7356cap	-	-	VB-	R100	Shield	-	CAN	- VB+
Truck & Trailer CAN	10011opto	-	CAN L	VB-	-	Shield	-	CAN H	- VB+
LIN	7259	-	Pdis	VB-	-	Shield	-	LIN	- (VB+)
FlexRay	1082cap	Trig	BM A	VB-	BM B	Shield	-	BP A	BP B -
J1708	65176opto	-	A	VB-	-	Shield	-	B	-
IO	8642	see section IOpiggy 8642 on page 78							
	8644	see section VNPiggy30 IO 8644 on page 87							
Sensors									
	SENT	-	-	VB-	-	-	-	SENT	- VB+
	UART	-	RX/Line A	VB-	Pdis	-	-	TX/Line B	- (VB+)
	UARToverCAN	-	CAN L	VB-	-	-	-	CAN H	-

Details

Pin	Description
-	Reserved, e. g. for the secondary pin assignment of built-in transceivers in a network interface (e. g. VN1630 CH1/CH3, CH2/4).
CAN H	CAN High.
CAN L	CAN Low.
VB-	Electrically decoupled ground.
VB+	Positive supply voltage for electrically decoupled cabs/piggybacks. For voltage range see technical data of the according transceiver.
(VB+)	VB+ optional.
Shield¹⁾	Optional shield connection in accordance with CiA 303-1 (CAN in Automation). Please note that the availability of 'Shield' at pin 5 depends on the Vector device in which the transceiver is used. Therefore, it may be unavailable on some devices.
R100	If a single-wire CANcab/CANpiggy is operated in a high-speed network, a terminating resistor must be placed in the network between CAN High and GND/VB-. In high-speed mode, the CANcab/CANpiggy connects such a resistor (100 ohm) in the circuit when a shunt is placed between pin 7 (CAN High) and pin 4 (R100).
Pdis	Power disable. If Pdis is connected to VB-, the internal power supply is disabled. In this case an external power supply is required at VB+.
RT1	Only CANcab 1054mag, CANpiggy 1055cap: If this pin is connected to pin 3 (VB-), the internal terminating resistor is reduced to 500 ohm. Note: Also valid for CANpiggy 1054mag when used with VN8970 or VN1600 interface family.
Trig	Trigger (see user's manual for further details).
BP	Bus plus.
BM	Bus minus.


4.2 CAN High-Speed

4.2.1 General Information

Properties

High-speed cabs and piggybacks are fully compatible to the ISO 11898-2 standard and may be implemented for transmission rates up to 2 Mbit/s for CAN 2.0 and up to 8 Mbit/s for CAN FD (depends on the network).

Bus level

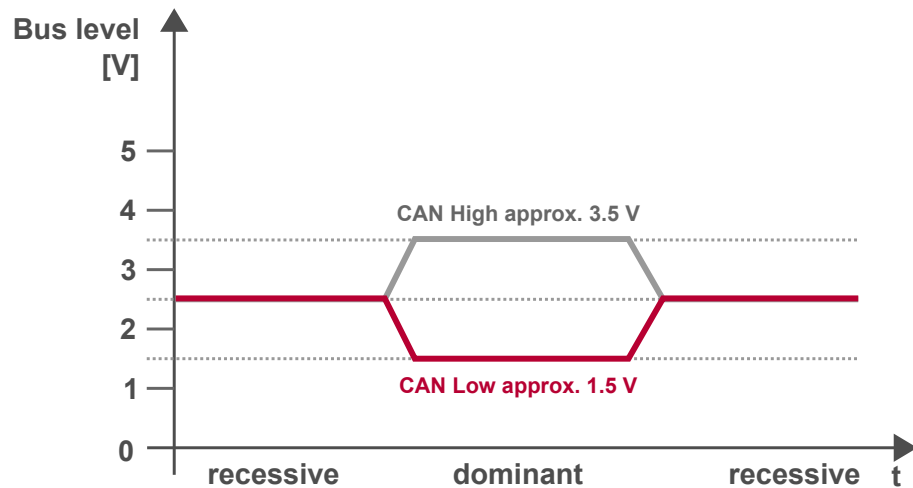

Test setup

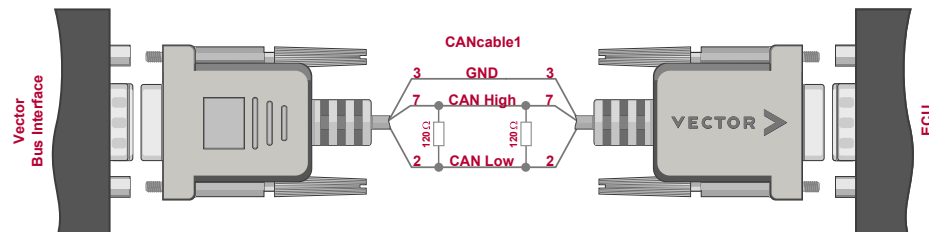


Figure 8: Connection between network interface and ECU e. g. via CANcable1

4.2.2 1057Gcap

Technical data

Voltage supply	By Vector network interface
Transceiver	TJA1057G
Maximum baudrate	CAN High-Speed: 1 Mbit/s (if necessary 2 Mbit/s in peer-2-Peer connections) CAN FD: 5 Mbit/s (if necessary 8 Mbit/s depending on bus physics)
Further properties	No unwanted error frames are generated (e.g. during shutdown)
Regulatory information	Korea: KCID "R-R-VeC-Piggy1057Gcap"

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

4.2.3 1462BT

This piggyback uses a CAN SIC transceiver (Signal Improvement Capability) which reduces signal ringing in a network. It allows reliable CAN FD communication to function in larger topologies and features a much tighter bit timing symmetry performance.

Technical data

Voltage supply	By Vector network interface
Transceiver	TJA1462BT
Maximum baudrate	CAN High-Speed: 1 Mbit/s CAN FD (many nodes and longer stubs): > 5 Mbit/s CAN SIC (CAN FD, peer-to-peer): > 8 Mbit/s
Further properties	- No unwanted error frames are generated (e.g. during shutdown) - Fully compatible to CiA 601-4 v2.0.0 (CAN SIC) - Fully compatible to ISO 11898-2 and SAE J2284-1 to J2284-5 - Can be used in legacy networks as well
Regulatory information	Korea: KCID "R-R-VeC-Piggy-1462BT"

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

4.2.4 1041Amag

Technical data

Voltage supply	By Vector network interface or external 12 V...18 V DC
Transceiver	TJA1041A
Maximum baudrate	1 Mbit/s
Minimal baudrate	40 kbit/s
Isolation	Magnetically: ADuM 1100
Insulation voltage	Defined by network interface
Further properties	No unwanted error frames are generated (e. g. during shutdown)

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

External voltage supply

An external voltage supply is possible via pin 9 at the D-SUB9 connector. The under voltage error detection of the transceiver is not possible in this case. This applies to both V_{Batt} and V_{CC} .

Split termination

The concept of the split termination is depicted in the figure below. In normal mode, this terminates the common mode signals via a capacitor to ground at the center tap point of the two 60 ohm resistors. This is an attempt to achieve a kind of stabilization of the recessive bus voltage of approx. 2.5 V. In all other modes, pin 4 is high impedance, and therefore the split termination is deactivated. The recommended capacitance value of capacitor C_{Split} is 4.7 nF.

The series resistance in the split line that is recommended for some applications is not needed here, since a lost ground may be caused only by a defect in the CANcab/CANpiggy.

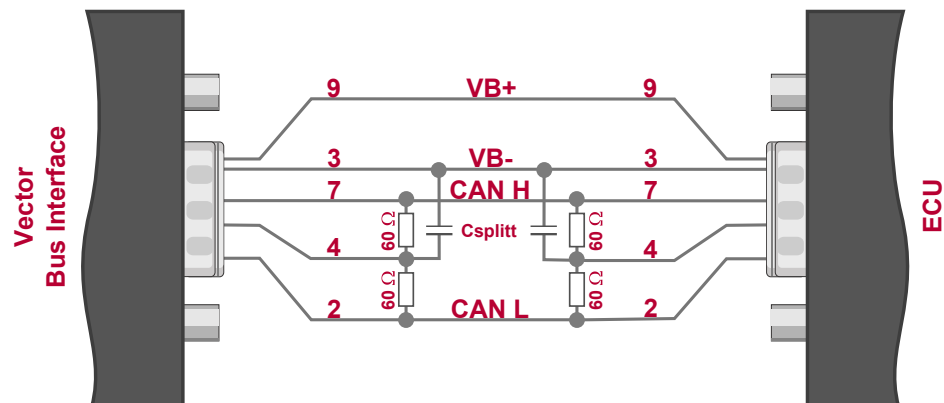


Figure 9: Setup example with external voltage supply and split termination

Programming of the normal and sleep Mode

The CANcab/CANpiggy 1041Aopto/mag supports both normal mode and sleep mode.

Switching between these modes is done with the CAPL function **setCanCabsMode**. Regarding this function it should be noted that the channel number is the logical channel number used by CANalyzer or CANoe according to the configuration in the Vector Hardware Manager.

The **setCanCabsMode** function has four parameters: ntype, nchannel, nmode and

nflags each of type long. For high-speed CANcabs/CANpiggies the following values are valid:

setCanCabsMode

ntype	Meaning
0	Reserved and must be set to 0

nchannel	Meaning
0...n	CAN channel to be set

nmode	Meaning
0	NORMAL
1	SLEEP

nflags	Meaning
1	AUTOWAKEUP, only together with SLEEP

**Example**

The following example shows how to switch the CANcab/CANpiggy 1041Aopto/mag to standby mode with CANalyzer/CANoe and a CAPL program.

```
variables
{
}

on key '1'
{
    write ("CAN1 High-Speed: Normal Mode");
    setCanCabsMode(0, 1, 0, 0);
}

on key '2'
{
    write ("CAN1 High-Speed: Sleep Mode");
    setCanCabsMode(0, 1, 1, 1);
}

on key '3'
{
    write ("CAN2 High-Speed: Normal Mode");
    setCanCabsMode(0, 2, 0, 0);
}

on key '4'
{
    write ("CAN2 High-Speed: Sleep Mode");
    setCanCabsMode(0, 2, 1, 1);
}
```

4.3 CAN SIC XL

4.3.1 General Information

Properties

CAN SIC XL combines the advantages of CAN SIC (Signal Improvement Capability) and CAN XL. CAN SIC XL reduces signal ringing (SIC feature) and provides data rates of up to 20 Mbit/s with payloads up to 2048 bytes (CAN XL feature).

► CAN SIC

A SIC transceiver allows building more complex network topologies at higher communication bit rates. With current high-speed CAN transceivers 2 Mbit/s can be achieved with a linear network topology. 5 Mbit/s can be reached with a point-to-point communication. With a SIC transceiver, 5 Mbit/s can be achieved with networks that use stars and long stub lines.

A SIC transceiver reduces ringing caused by reflections in a network. This makes bit sampling more robust.

CAN SIC extends the performance of CAN FD and is backward compatible.


► CAN XL

A main advantage of CAN XL is its scalability. On the one hand, the user data can be set between 1 and 2048 bytes with a resolution of one byte; on the other hand, bit rates in the data phase can be selected between 1 Mbit/s (with an arbitration bit rate of 500 kbit/s) and up to 20 Mbit/s.

The second benefit of CAN XL is its flexibility. Thanks to new transceiver technologies, more complex network topologies such as stars and long stubs can be used. CAN's general CSMA/CR based arbitrating network access completes CAN XL's functional range.

CAN XL extends CAN FD and is backward compatible.

Bus level

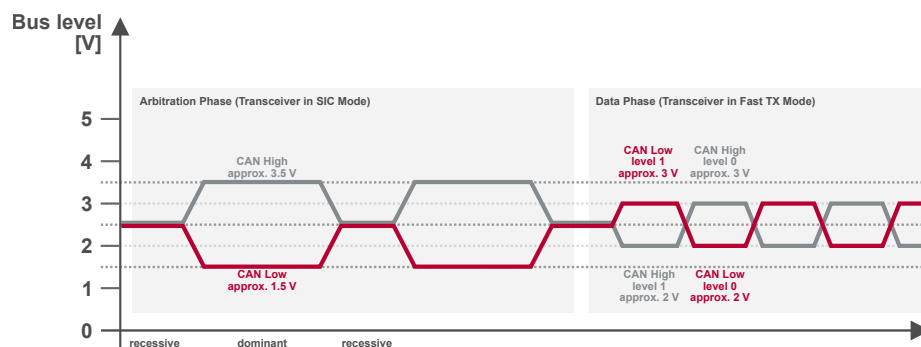

Compatibility

Transceiver	CAN FD	CAN SIC	CAN SIC	CAN SIC XL
Controller	CAN FD	CAN FD	CAN XL	CAN XL
Payload	64 bytes	64 bytes	2048 bytes	2048 bytes
Bitrate (up to)	2 Mbit/s	8 Mbit/s	8 Mbit/s	20 Mbit/s
Topology	Linear	Complex	Complex	Complex
Signal improvement	-	Yes	Yes	Yes
Transceiver Fast Mode	-	-	-	Yes

**Reference**

Further details can be found in our [KnowledgeBase](#).

4.3.2 ALBI02

This piggyback combines the advantages of a CAN SIC (Signal Improvement Capability) and a CAN XL transceiver. It reduces signal ringing in a network and provides data rates of up to 20 Mbit/s.

**Note**

The ALBI02 is a CAN SIC XL transceiver with pre-series status, suitable for evaluation purposes of the CAN XL technology. It supports all CAN SIC XL features. A later series version will replace this transceiver.

Technical data

Voltage supply	By Vector network interface
Transceiver	ALBI02
Maximum baudrate	CAN: up to 1 Mbit/s (up to 2 Mbit/s depending on wiring and transceivers) CAN FD: up to 5 Mbit/s (up to 8 Mbit/s depending on wiring and other transceivers on the bus) CAN XL: up to 16 Mbit/s (up to 20 Mbit/s depending on wiring and other transceivers on the bus)
Further properties	- No unwanted error frames are generated (e.g. during shutdown) - Fully compatible to CiA 610-3 - Fully compatible to CiA 601-4 - Fully compatible to ISO 11898-2 and SAE J2284-1 to J2284-5 - Can be used in legacy networks as well

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.


4.4 CAN Low-Speed (fault tolerant)

4.4.1 General Information

Properties

The low-speed CANcabs/CANpiggies are fully compatible to the ISO 11898-3 standard and can be implemented for transmission rates of up to 125 kbit/s.

Bus level in normal mode

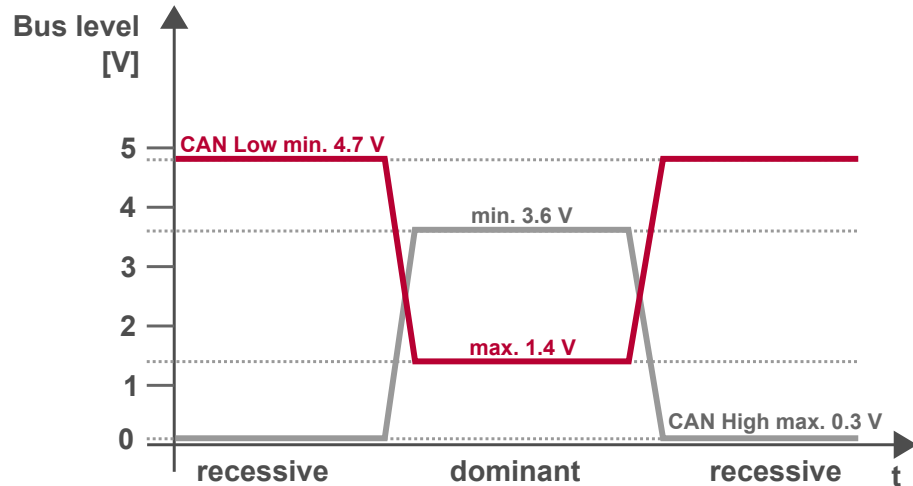

Bus level in standby / sleep mode

- **CAN Low**
Approx. voltage supply
- **CAN High**
Approx. 0 V



Note

The voltage value of CAN Low depends on many factors and may fluctuate significantly in practice.

If all bus nodes are in sleep mode, the transceivers connect CAN Low to V_{Batt} via the terminating resistance R_{TL} . Since the transceivers have different supply voltages, this results in cross currents between the CAN nodes via the terminating resistors. In sleep mode, this can lead to false readings when measuring supply currents.

Test setup

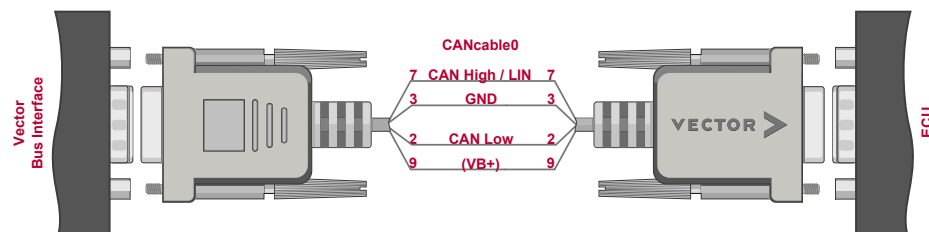


Figure 10: Connection between network interface and ECU e. g. via CANcable0

4.4.2 1055cap

Technical data

Voltage supply	By Vector network interface or external 12 V...18 V DC
Transceiver	TJA1055
Maximal baudrate	125 kbit/s
Minimal baudrate	40 kbit/s
Further properties	No unwanted error frames are generated (e.g. during shutdown). Switchable terminating resistor

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

Programming of normal/sleep modes

The 1055cap supports both normal mode and sleep mode.

It is possible to toggle between the modes with the CAPL function **setCanCabsMode**. Regarding this function, it should be noted that the channel number is the logical channel number used by CANalyzer or CANoe according to the configuration in the Vector Hardware Manager.

The **setCanCabsMode** function has four parameters: ntype, nchannel, nmode and nflags each of type long. For low-speed CANcabs/CANpiggies the following values are valid:

setCanCabsMode

ntype	Meaning
0	Reserved and must be set to 0
nchannel	Meaning
0...n	CAN channel to be set
nmode	Meaning
0	NORMAL
1	SLEEP
nflags	Meaning
1	AUTOWAKEUP, only with SLEEP

**Example**

The following example shows how to switch the CANcab/CANpiggy 1054(mag/-opto) to standby mode with CANalyzer/CANoe and a CAPL program.

```
variables
{
}

on key '1'
{
    write ("CAN1 Low-Speed: Normal Mode");
    setCanCabsMode(0, 1, 0, 0);
}

on key '2'
{
    write ("CAN1 Low-Speed: Sleep Mode");
    setCanCabsMode(0, 1, 1, 1);
}

on key '3'
{
    write ("CAN2 Low-Speed: Normal Mode");
    setCanCabsMode(0, 2, 0, 0);
}

on key '4'
{
    write ("CAN2 Low-Speed: Sleep Mode");
    setCanCabsMode(0, 2, 1, 1);
}
```

**External
voltage supply**

The bus-side voltage can be supplied by an external voltage source. This is especially recommended if current measurements are performed on the ECU while the CAN bus is in sleep mode.

**Switchable
terminating resistors**

The 1055cap has an internal switchable terminating resistor. Via parallel connection, the terminating resistor is reduced from 4.7 kohm to 500 ohm. This is useful in applications where only a few ECUs exist in the network.

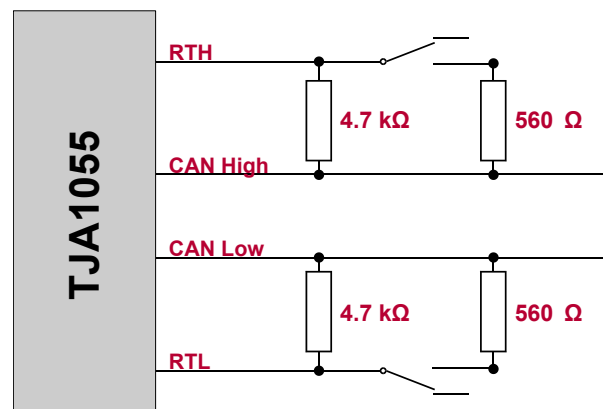


Figure 11: Switching terminating resistors

To enable the terminating resistor, pin 4 of the D-SUB9 connector has to be connected to ground (see details on RT1 on page 48). If pin 4 is not connected to ground, the value of the terminating resistor is 4.7 kohm.

4.5 LIN

4.5.1 General Information

Properties

The LINcab/LINpiggy conforms to the LIN standard (Local Interconnect Network) and is specified for transmission rates of up to 20 kbit/s in normal mode as well as 115 kbit/s in flash mode.


The LIN bus communicates over a single-wire bus and is based on a master-slave concept. Consequently, no arbitration or collision management is needed in the slave nodes.

LIN communication principle:

- ▶ The LIN master generates the message header and places it on the bus. The message header consists of the sync break, sync field and ID field.
- ▶ The addressed LIN slave node places its message response on the bus after the message header. The message response is composed of 0...7 data bytes and a checksum field.
- ▶ The individual bytes of a message are transmitted according to the conventional UART protocol (1 start bit, 8 data bits, and 1 stop bit).

Bus level

The following figure depicts the voltage levels on the LIN bus. V_{Batt} is the supply voltage of the ECU that is LIN master. The bus voltage can be changed to the recessive case (V_{Sup}) by means of filter elements and dynamic voltage changes in the supply voltage of the master ECU.

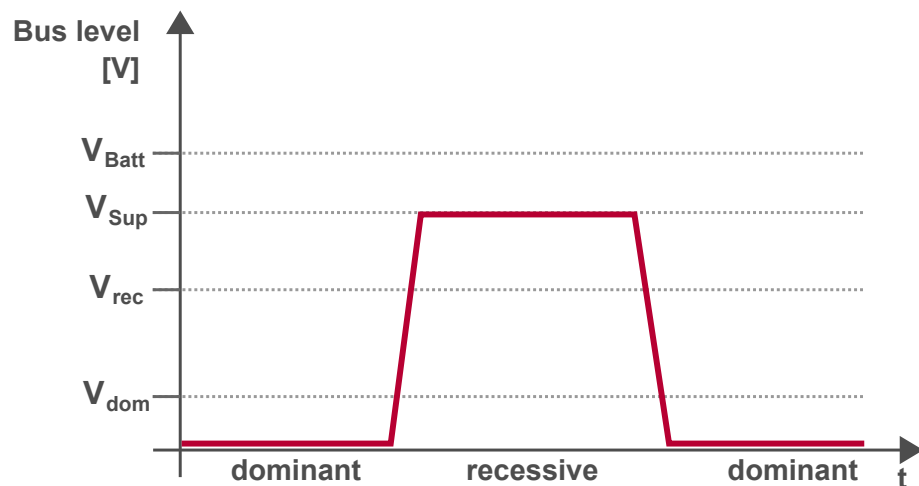

Bus-side voltage supply


Since the recessive level on the bus depends on the supply voltage of the master, it is advisable to operate the LINcab/LINpiggy with an external supply voltage that is also used by the other bus nodes. This prevents cross currents between the individual nodes on the LIN bus.

Connecting **Pdis** with **VB-** of the D-SUB of the network interface disables the internal voltage supply of the LINcab/LINpiggy. This makes it possible to perform measurements on the LIN bus, even with an external supply below 12 V.



Note

If an external master resistor and an external voltage supply are being used at the D-SUB9 connector of the LINcab/LINpiggy, a diode should be connected in series (see figure below). Otherwise the LINcab/LINpiggy would be supplied by the LIN bus over the external master resistor, if the external voltage supply was broken. This diode is necessary according to the LIN specification.

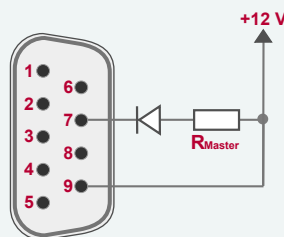

4.5.2 7259

Technical data

Voltage supply	By Vector Network Interface: 12 V External: ca. 8 V ... 36 V (Pdis used)
Transceiver	TLE7259-3GE
Maximal baudrate	Normal mode: 20 kbit/s Flash mode: 115 kbit/s*
	*Depending on the bus physics, the maximum data rate can be much higher, see notes in the network interface manuals.
Electr. Isolation	Yes
Insulation voltage	Defined by network interface
Bus termination	Master mode: 1 kohm Slave mode: 30 kohm

Electrical isolation

With this transceiver, the network interface is electrically isolated from the LIN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

Properties

The 7259 transceiver is designed for 24 V applications. In addition, it has a time out counter, which avoids a constant dominant level on the LIN bus in error cases. The minimum switch off time of the transceiver is 6 ms.

Stress functionality

The stress functionality of the LINpiggy enables you to disturb the LIN bus by dominant or recessive disturbing bits. The duration of disturbing bits is not limited.



Note

Recessive disturbing sequences have a current limitation of 520 mA, dominant disturbing bits are protected by a 100 mA fuse.

In both disturbing modes, the LINpiggy 7259 has a protection against electrical and thermal overloads. The LINpiggy must be supplied externally to use the recessive disturbing mode.

Minimal baudrate

Due to the dominant timeout (8...20 ms) of the TLE7259-3GE, it may not be possible to transmit a LIN header at very low baudrates. Therefore intended dominant sequences longer than 6 ms are created using the LINpiggy's integrated transistor circuitry.


Flash mode

The flash mode enables higher data transmission rates which can be used for programming microcontrollers during the ECU production. This is possible by an increased slew rate of the transceiver, which may also affect EMC properties.

4.6 Single Wire CAN

4.6.1 General Information

Bus Levels

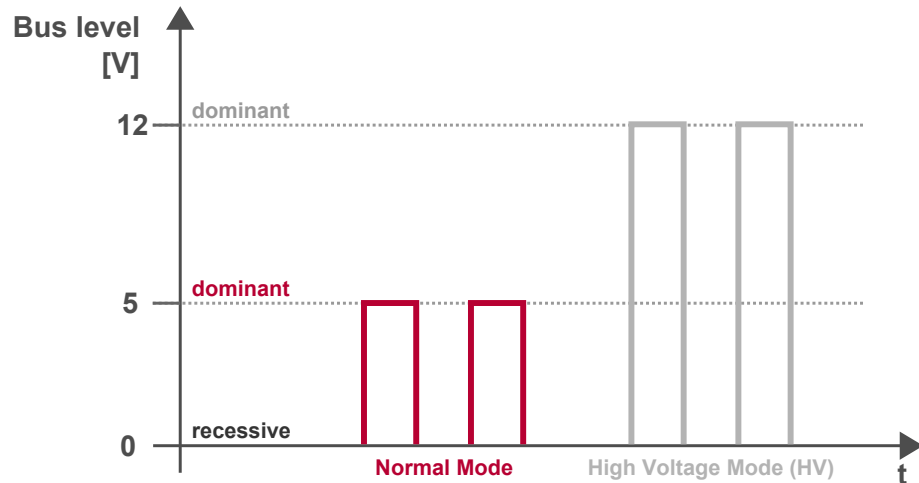

Bus communication

To establish communications between the individual network nodes, VB+ has to be connected to pin 9, GND/VB- to pin 3 and CAN to pin 7 at the D-SUB connector.

If the Single Wire CANcab/CANpiggy is operated in a high-speed network, a terminating resistor must be available between CAN High and GND/VB-. In high-speed mode, such a resistor (100 ohm) is enabled by the CANcab/CANpiggy if pin 7 (CAN High) is connected to pin 4 (R100).

The resistor is disabled, if the CANcab/CANpiggy switches back to normal mode. To implement higher impedance terminating resistances, another resistor (RR) may also be added instead of a direct connection between CAN High and R100. The total resistance is $RR + 100 \text{ ohm}$.

4.6.2 7356cap

Technical data

Voltage supply	External 12 V...18 V DC
Transceiver	NCV7356
Maximum baudrate	Low-speed: 40 kbit/s High-speed: 100 kbit/s
Further properties	No unwanted error frames are generated (e.g. during shutdown)

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

External voltage supply

The CANcab/CANpiggy has to be operated with an external voltage supply. This voltage is used as the level for the dominant state of the wake-up message.

Programming transceiver modes

The Single Wire CAN transceiver supports normal mode, high-speed mode and sleep mode.

Switching the transceiver modes is done with the CAPL function **set-CanCabsMode**. Regarding this function it should be noted that the channel num-

ber used by CANalyzer or CANoe is the logical channel number. Furthermore, it is not possible to set the mode explicitly for one channel while preserving the mode of the other channel; modes must always be set for both channels.

The **setCanCabsMode** function has four parameters: `ntype`, `nchannel`, `nmode` and `nflags` each of type long. For Single Wire CANcabs/CANpiggies the following values are valid:

setCanCabsMode

ntype	Meaning
0	Reserved and must be set to 0

nchannel	Meaning
0...n	CAN channel to be set

nmode	Meaning
0	NORMAL
1	SLEEP
2	HIVOLTAGE
3	HISPEED

nflags	Meaning
1	AUTOWAKEUP, only with SLEEP
2	HIGHPRIO, only CANcab 5790c, 1 = clear send buffer

Transmission rate

For normal data exchange, normal mode is used with a transmission rate of up to 40 kbit/s. The high-speed mode is available for transmission rates up to 100 kbit/s, for example for flash programming. However, in this mode the number of bus nodes is limited. The high-voltage mode is needed to send the high-voltage wakeup message (12 V). The transceiver's transmitter is deactivated in sleep mode. Additionally, there is a high priority flag which clears all send buffers.



Example

Example of a CAPL program for sending a high-voltage wakeup message on CAN channel 1. CAN channel 2 is unused in normal mode.

```
variables
{
    message 0x100 msg;
}

on start
{
    msg.CAN = 1;
    msg.DLC = 0;
}

on key 'w'
{
    // Switch transceiver of channel 1 in high-voltage mode,
    // transceiver of channel 2 in normal mode.
    setCanCabsMode(0, 1, 2, 0);
    setCanCabsMode(0, 2, 0, 0);

    // Send message.
    output(msg);

    // After wake-up message switch transceivers of both channels
    // back to normal mode.
    setCanCabsMode(0, 1, 0, 0);
    setCanCabsMode(0, 2, 0, 0);
}

on message *
{
    output(this);
}
```

4.7 J1708

4.7.1 General Information

Properties

These transceivers enable access to serial networks according SAE standard J1708 respective J1587 and is used predominantly in commercial vehicles. Typical applications of the J1708 network are diagnostic and process data communication.

4.7.2 65176opto

Technical data

Voltage supply	By Vector network interface
Current consumption	Approx. 200 mA
Transceiver	SN65176B
Maximal baudrate	9.6 kbit/s
Isolation	Optical: HCPL-0720-500 or compatible
Bus termination	yes, 2 x 4.7 kohm

Electrical isolation

With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.


4.8 Truck & Trailer CAN

4.8.1 General Information

Properties

The Truck & Trailer CANcab/CANpiggy is compatible with the ISO 11992-1 standard and has been developed for CAN low-speed applications in the commercial vehicle area. The maximum transmission speed is 250 kbit/s.

Bus level

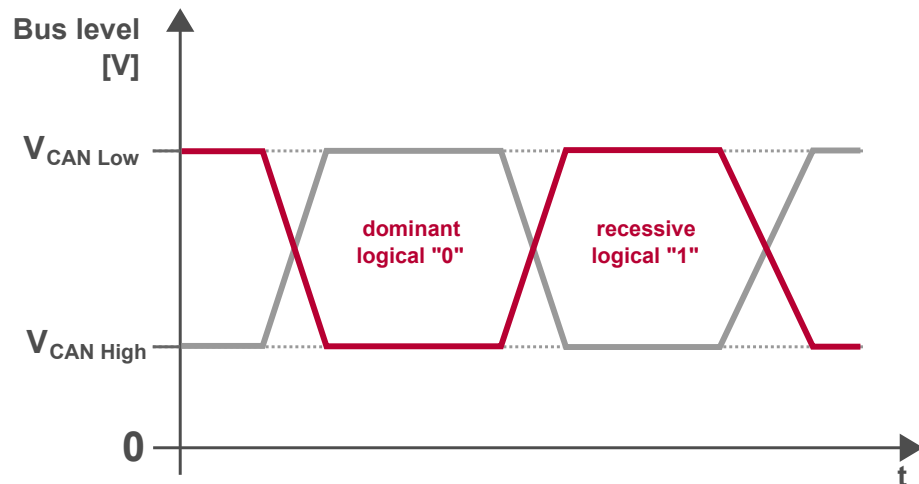

Recessive state

The recessive state is described by the following voltage relation:

V_S : bus side voltage

$$V_{CAN_H} = 1/3 V_S$$

$$V_{CAN_L} = 2/3 V_S$$

Dominant state

For the dominant levels this relation applies:

$$V_{CAN_H} = 2/3 V_S$$

$$V_{CAN_L} = 1/3 V_S$$

Differential voltage

This yields the following differential voltage:

$$V_{diff} = V_{CAN_L} - V_{CAN_H}$$

$$V_{diff} = 1/3 V_S \text{ recessive state}$$

$$V_{diff} = -1/3 V_S \text{ dominant state}$$

4.8.2 10011opto

Technical data

Voltage supply	External 16 V...32 V DC
Current consumption	120 mA (typ.)
Transceiver	B10011S
Maximal baudrate	250 kbit/s
Isolation	Optical: HCPL-0720-500 or compatible
Insulation voltage	Defined by network interface

Electrical isolation


With this transceiver, the network interface is electrically isolated from the CAN bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

Connection cable

The following connection cables can be used with the 10011opto:

- ▶ CANcab TnT (page 99)
- ▶ CANcab TnT Term (page 100)

Test setup with CANcab TnT

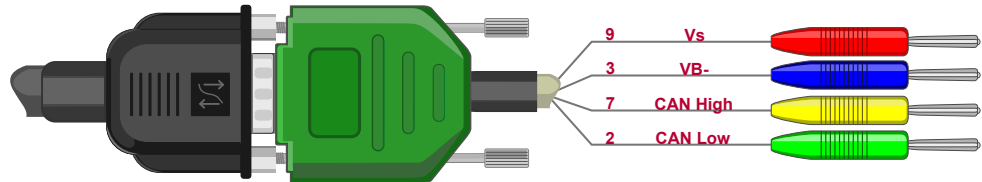

Hardware

The CANcab TnT has a D-SUB9 connector and four bunch plugs to connect to an external voltage supply and the CAN bus.

According to ISO 11992-1, a Truck & Trailer CAN system consists of two nodes, which should be terminated. If the Vector network interface is used together with the CANcab/CANpiggy 10011opto to observe bus traffic between two real ECUs, the CANcab TnT should be used, since both ECUs already have a terminating resistor. If only one real ECU is connected to the CANcab/CANpiggy 10011opto, the CANcab TnT Term should be used.

Bus-side voltage supply

The CANcab/CANpiggy 10011opto has to be operated with an external voltage supply. ISO 11992-1 specifies at least 16 V supply voltage (V_S) for 24 V systems.


4.9 FlexRay

4.9.1 General Information

Properties

The FlexRay transceivers are compatible to the *FlexRay Communications System Electrical Physical Layer Specification Version 2.1 Rev. A* and can be used with 10 Mbit/s per channel (A/B).

Bus level

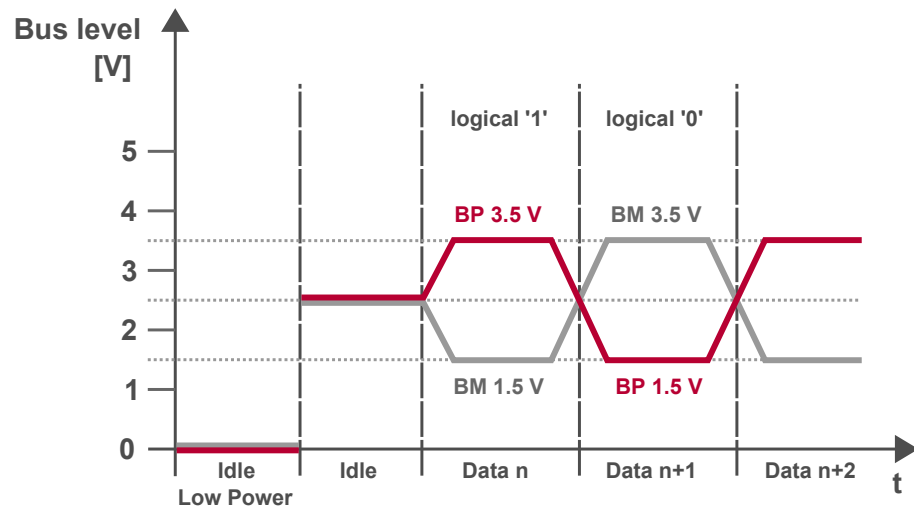

4.9.2 1082cap

Technical data

Voltage supply	By Vector network interface
Transceiver	TJA1082
Baudrate	10 Mbit/s
Further properties	Trigger

Electrical isolation

With this transceiver, the network interface is electrically isolated from the FlexRay bus. The transceivers' voltage supply is electrically isolated via a DC/DC converter.

Trigger

The FlexRay interface family offers a pin for dedicated trigger applications (see the according pin assignment). The configuration of the trigger and its action is set in the application (e. g. CANoe). The following picture depicts the internal circuit of the trigger pin.

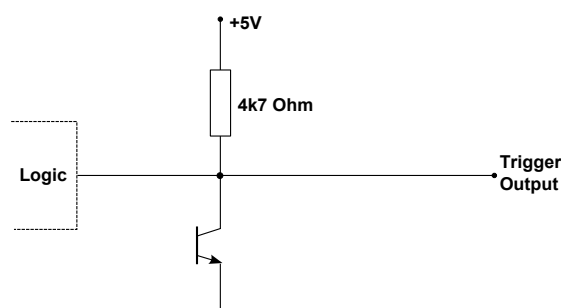


Figure 12: Trigger output

Output

The application's trigger releases a falling edge on the trigger pin. By using external pull up resistors, the maximum allowed load is 5 mA.

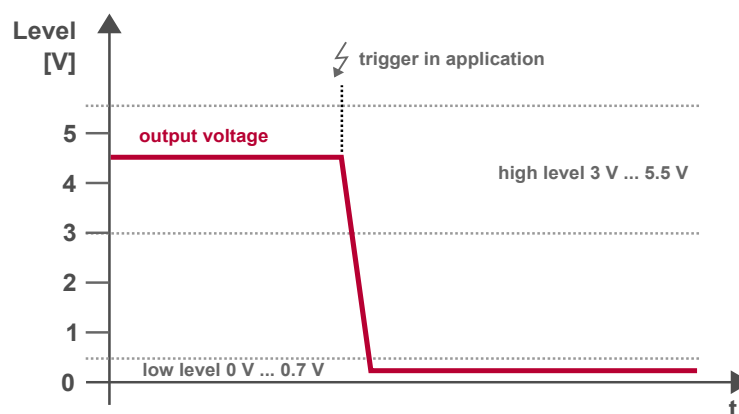


Figure 13: Trigger output


4.10 Sensors

4.10.1 SENT (Single Edge Nibble Transmission)

Properties

The SENSORpiggy SENT is compatible to the SAE J2716 protocol with a maximum data rate of 64.9 kBit/s (at a clock tick period of 3 μ s).

Bus level

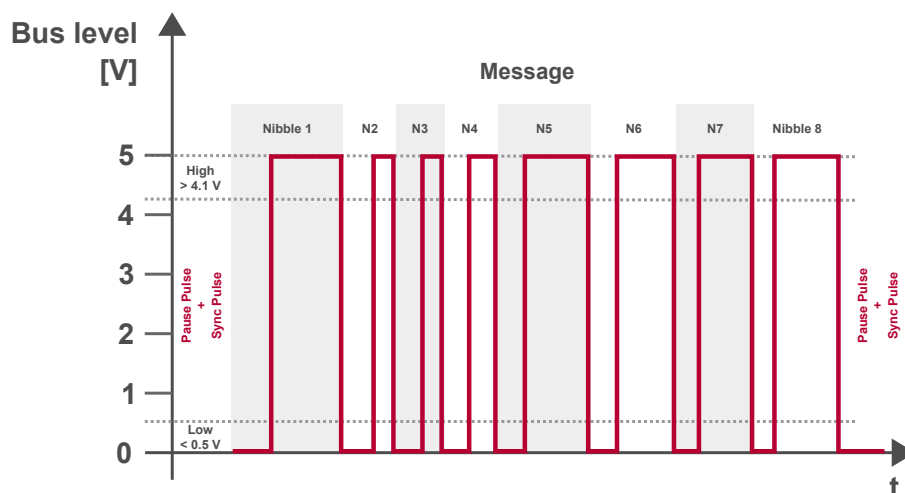

Operating modes

The SENSORpiggy SENT offers three operating modes:

► ECU simulation (receiving data)

In this mode, the SENSORpiggy SENT actively supplies a sensor through V_{supply} and receives its data.

Signals	Description
Sensor voltage supply	5 V (current limited to 50 mA)
Data line	Received data from a connected sensor
VB-	Reference potential for data line and sensor supply voltage



CAUTION!

Warning of damage

To avoid damage to the SENSORpiggy SENT, disconnect all external power supplies when performing ECU simulation!

► **Sensor simulation (sending data)**

In this mode, the SENSORpiggy SENT is supplied by an external ECU through V_{supply} or by a vehicle through V_{bat} . The SENSORpiggy SENT transmits generated sensor data to the connected ECU then.

Signals	Description
Input voltage	Data transmission starts as soon as the measured input voltage reaches a trigger level of ≥ 4.6 V. Data transmissions stops when the measured input voltage level is ≤ 4.2 V.
Data line	Transmitted data to a connected ECU
VB-	Reference potential for data line and input voltage

► **Trace**

This mode is a combination of the previous described modes. In trace mode, the SENSORpiggy SENT acts as a spy node between a sensor and an ECU. The bus will not be disturbed in this configuration. The SENSORpiggy SENT receives the messages which are sent from the sensor to the ECU and it also measures the supply voltage of the connected sensor, giving notice if operation level is present or not.

Signals	Description
Input voltage	Measures supply voltage to observe data traffic and proper operation
Data line	Received data from sensor
VB-	Reference potential for data line and input voltage

Technical data

Voltage supply	By Vector network interface
Supported modes	ECU simulation, sensor simulation, trace
Sensor voltage supply	► ECU simulation 5 V, limited to 50 mA $\pm$ 10 % tolerance CAUTION! To avoid damage to the SENSORpiggy SENT, disconnect all external power supplies when performing ECU simulation! The maximum permissible externally applied voltage in the event of a fault is 5.3 V. ► Sensor simulation Typical: 5 V (expected) Max: 44 V
Baudrates	Min: approx. 24.7 kBit/s at clock tick period of 3 μ s Max: approx. 64.9 kBit/s at clock tick period of 3 μ s
Clock tick period	3 ... 90 μ s
Regulatory information	Korea: KCID "R-R-VeC-PiggySENT"

Electrical isolation

With this piggyback, the network interface is electrically isolated from the SENT bus. The piggybacks voltage supply is electrically isolated via a DC/DC converter.

4.10.2 UART

Properties

The SENSORpiggy UART is compatible with UART, RS232, and RS485 (RS422) and has the following physical features:

- ▶ 1x UART, RS232, or RS485 (RS422)
- ▶ Operating mode switchable in the Vector Hardware Manager
- ▶ Pin assignment can be found in section **UART** on page 50

UART

- ▶ Full-duplex data transfer with Tx and Rx signals
- ▶ Levels: 1.8 V, 3.3 V, 5 V or externally supplied voltage VB+ (switchable via **Pdis** and Vector applications). The following tolerances apply to the switching thresholds and output levels:

Supply Voltage	Input Low	Input High	Output Low	Output High
VDD 1.8 V	0.00 V nom.	1.80 V nom.	0.00 V nom.	1.80 V nom.
	0.63 V max.	1.17 V min.	0.40 V max.	1.35 V min.
VDD 3.3 V	0.00 V nom.	3.30 V nom.	0.00 V nom.	3.30 V nom.
	0.80 V max.	2.00 V min.	0.50 V max.	2.40 V min.
VDD 5.0 V	0.00 V nom.	5.00 V nom.	0.00 V nom.	5.00 V nom.
	1.50 V max.	3.50 V min.	0.80 V max.	4.44 V min.
VB+ 1.65 V ... 5.5 V	0.00 V nom.	VB+ nom.	0.00 V nom.	VB+ nom.
			0.30 V max.	VB+-0.4 V min.

- ▶ The signal output can drive a minimum current of 4 mA
- ▶ Up to 1 Mbps

RS232

- ▶ Full-duplex operation with no control lines
- ▶ Termination: 5 kohm, switchable
- ▶ Up to 230 kbps
- ▶ Levels and currents according to TIA-232-F (RS-232)

RS485 (RS422)

- ▶ Half-duplex (RS485 only; RS422 for sending or receiving only)
- ▶ Termination: 120 ohm, switchable
- ▶ Up to 16 Mbps
- ▶ Levels and currents according to TIA ANSI/TIA/EIA-485-A (RS-485)

Higher-layer

The higher-layer protocols support (not part of the piggyback itself):

- ▶ Number of data bits: 7, 8 or 9
- ▶ Number of stop bits: 1 or 2
- ▶ Parity modes: None, Odd, Even, Mark or Space

Technical data

Regulatory information	Korea: KCID "VeC-PiggyUART"
-------------------------------	-----------------------------

4.10.3 UARToverCAN

Properties

The SENSORpiggy UARToverCAN uses a CAN FD transceiver for UART data. This allows you to achieve high data rates at low cost.

- ▶ 1x UARTover CAN
- ▶ Pin assignment can be found in section [UARToverCAN](#) on page 50

Higher-layer

The higher-layer protocols support (not part of the piggyback itself):

- ▶ Number of data bits: 7, 8 or 9
- ▶ Number of stop bits: 1 or 2
- ▶ Parity modes: None, Odd, Even, Mark or Space

Technical data

Voltage supply	By Vector network interface
Transceiver	TJA1057G
Maximum baudrate	CAN High-Speed: 1 Mbit/s (if necessary 2 Mbit/s in peer-2-Peer connections)
Further properties	No unwanted error frames are generated (e.g. during shutdown)
Regulatory information	Korea: KCID "VeC-PiggyUARToCAN"

5 IO Piggybacks

In this chapter you find the following information:

5.1 IOpiggy 8642	78
5.1.1 General Information	78
5.1.2 Digital Inputs and Outputs	79
5.1.3 Analog Inputs and Outputs	81
5.1.4 PWM Outputs (PWM0/PWM1)	83
5.1.5 PWM Input (PWM0)	83
5.1.6 Analog Comparator	83
5.1.7 D-SUB15 Pin Configuration Examples	84
5.1.8 Technical Data	85
5.2 VNPiggy30 IO 8644	87
5.2.1 General Information	87
5.2.2 Digital Inputs and Outputs	88
5.2.3 Analog Inputs and Outputs	91
5.2.4 PWM Outputs (PWM0/PWM1)	92
5.2.5 PWM Input (PWM0)	92
5.2.6 D-SUB15HD Pin Configuration Examples	93
5.2.7 Technical Data	94

5.1 IOPiggy 8642

5.1.1 General Information

Introduction

The IOPiggy 8642 is a plug-in board (piggyback) designed for measurements and outputs of digital or analog signals. This plug-in board can be used with the following Vector devices:

- ▶ **VN7570 / VN7572 FlexRay/CAN/LIN/IO network interface**
Measurement lines accessible via D-SUB62 connector.
- ▶ **VN8950 CAN/LIN module**
Measurement lines accessible on channel 5 via D-SUB15 connector.
- ▶ **VN8970 / VN8972 FlexRay/CAN/LIN module**
Measurement lines accessible on channel 9 via D-SUB15 connector.

Signal lines

The IOPiggy 8642 offers a total of thirteen signal lines. Depending on the configuration, the maximum selectable IO lines are:

- ▶ 8x digital input
- ▶ 6x digital output
- ▶ 4x analog input
- ▶ 2x analog output
- ▶ 2x PWM output
- ▶ 1x PWM input
- ▶ 1x analog comparator



Note

The lines may be operated as either input or output. Mixed operation of one line is not possible. Mixed configuration of different lines is allowed.

The configuration is performed in your measurement application (e. g. CANoe). You can define your own measurement condition there for each defined measurement group. When a condition is fulfilled, the related signal values of the measurement group are acquired and passed to the application.

Measurement group 1	Measurement group 2	Measurement group 3
Digital In 0...7	Analog In 0...3	Capture
↔Measurement Condition	↔Measurement Condition	↔Measurement Condition

The following measurement conditions are available for selection:


- ▶ Cyclic measurement
- ▶ Selective polling in the measurement application
- ▶ Measurement by level changes (trigger)
(High → Low and Low → High) at the digital inputs
- ▶ Measurement on triggering of the analog comparator
(see section [Analog Comparator](#) on page 83)

5.1.2 Digital Inputs and Outputs

Description

All digital signal lines can be used as either an input or output. This can be configured in the measurement application (e. g. CANoe). The following diagram illustrates the switching logic:

Switching logic for digital signals

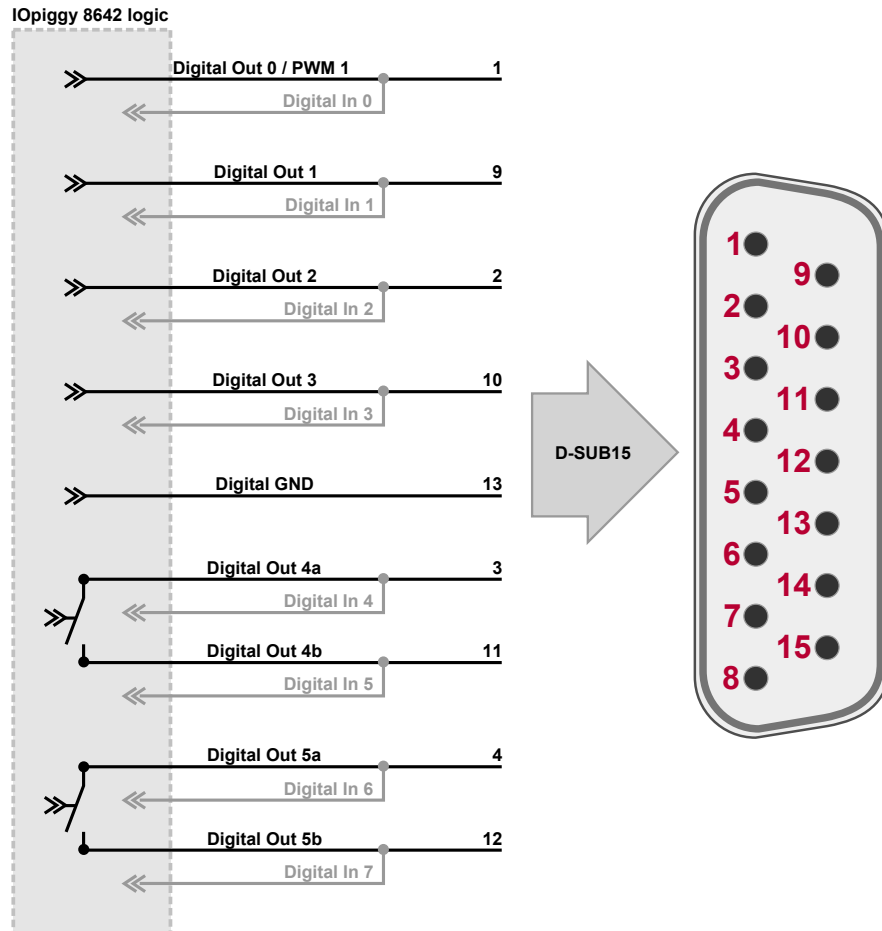

Inputs

The switching threshold can be defined over a range of 0 V ... 20 V for all eight digital inputs (Digital In 0...7) with a constant hysteresis of 1 V.

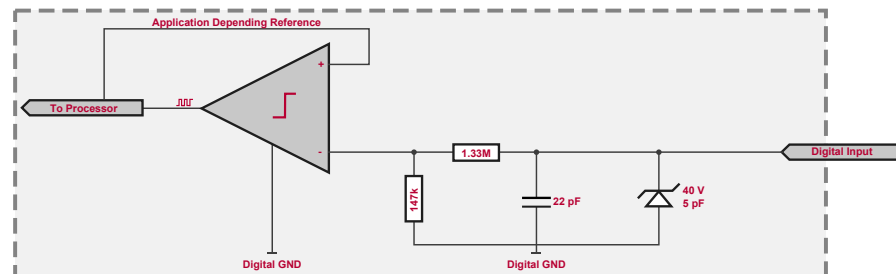


Figure 14: Digital input

Outputs

You can operate the digital outputs in three different modes. They are configured in your measurement application.

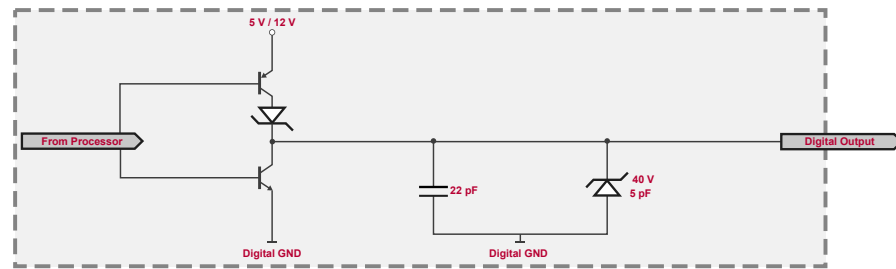


Figure 15: Digital output

► Push-Pull (only Digital Out 0...3)

The LOW state corresponds to digital GND, and the HIGH state corresponds to the internal output voltage defined (by software). To prevent short circuits, you should never interconnect two push-pull outputs. Since the push driver loads the internal supply, the push output delivers less current than the pull input can take.

► Open-Collector (only Digital Out 0...3)

The LOW state corresponds to digital GND, and the HIGH state corresponds to the external voltage applied via a pull-up resistor (current rating see section [Technical Data](#) on page 85).

► MOS switch (only Digital Out 4a/4b and 5a/5b)

Floating switch for switching external signals. The signals to be switched are connected to the a/b lines provided. Suitable for all signals between - 36 V and + 36 V.



Note


The digital outputs 4a/4b and 5a/5b of the IOpiggy 8642 are implemented as switching outputs through PhotoMOS relays (switching time see section [Technical Data](#) on page 94 The limit frequency of the relays indicates the damping of the signal to be switched (the signal forms can be changed).



Example

Digital output in Open-Collector mode

Digital Out 0 and 1 are configured as Open-Collector outputs. This requires a constant voltage to be applied via an external pull-up resistor. While LOW is defined with Digital GND, HIGH depends on the externally applied voltages.

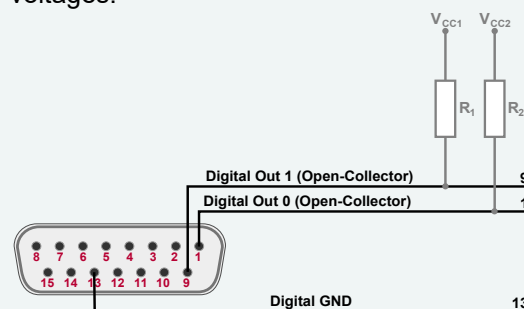




Example

Digital output with external signal source


This example involves toggling a sinusoidal source voltage $V_{\text{signal in}}$ on and off arbitrarily. In the example, this is done by applying $V_{\text{signal in}}$ to Digital In 4. The voltages can now be toggled on and off at Digital Out 4b via the internal switch. The measurement application controls switching.

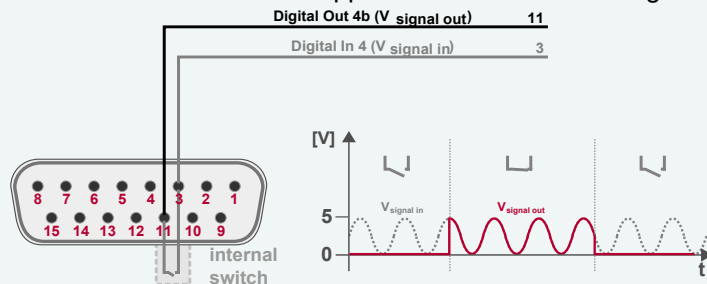

5.1.3 Analog Inputs and Outputs

Description

The IOpiggy 8642 has four analog inputs. Optionally, the first two inputs (A0 and A1) can be used as analog outputs. This can be configured in the measurement application (e. g. CANoe). The following diagram illustrates the switching logic:

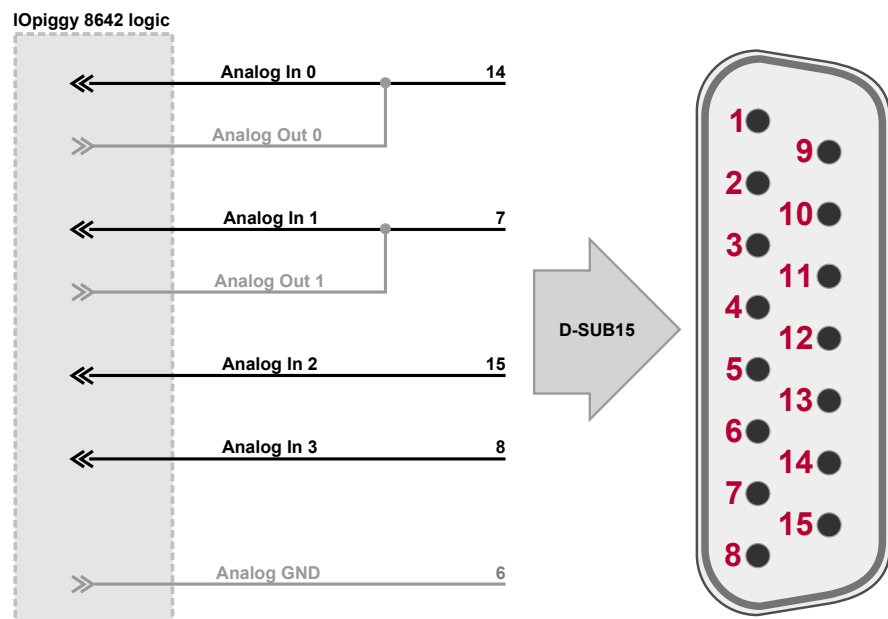

Inputs

You can operate the analog inputs in the following mode:

► Single-Ended (Analog In 0 ... 3)

The common reference potential for measurement of the voltages is Analog GND. Four independent signal lines are available for this.

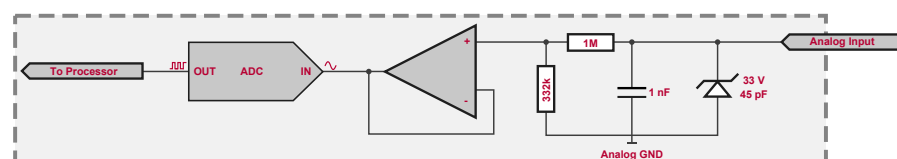


Figure 16: Analog input

Outputs

A voltage between 0 V and 12 V can be provided. An analog output can drive a maximum current of 10 mA (at 5 V) and 6 mA (at 12 V) respectively.

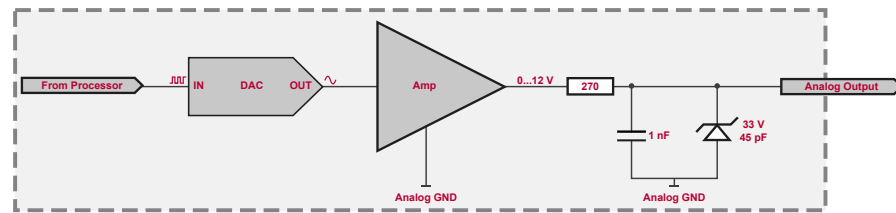


Figure 17: Analog output

5.1.4 PWM Outputs (PWM0/PWM1)

Description

The IOpiggy 8642 has PWM generators at pin 1 (PWM 1) and at pin 5 (PWM 0), which are operated at a common frequency. The configurable frequency range is between 0.02 Hz and 20 kHz. The two PWM duty cycles are configured in the measurement application and may be set independently over the range 0.0 % to 100.0 %. The duty cycle resolution is 8 bits over the entire frequency range.

5.1.5 PWM Input (PWM0)

Description

You can use the PWM input to measure the duty cycle of a PWM signal. The minimum pulse width is 1 μ s. This yields a maximum input frequency of 100 kHz (at a 50 % duty cycle).

5.1.6 Analog Comparator

Description

The analog comparator is permanently connected to Analog Input 0 and enables trigger-controlled measurements. A threshold is defined in the measurement application for this purpose. If the upper or lower threshold limit is exceeded, this triggers a single measurement at the configured measurement groups (see section [General Information](#) on page 78).

The trigger can be configured for three cases:

- ▶ Trigger when upper limit exceeded
- ▶ Trigger when lower limit exceeded
- ▶ Trigger on either upper or lower limit violation

5.1.7 D-SUB15 Pin Configuration Examples

The following table shows examples of different pin configurations defined in the measurement application (e. g. CANoe):

Pin	Configuration 1	Configuration 2	Configuration 3	Configuration 4
1	Digital In 0	Digital Out 0 ¹	Digital Out 0 ²	PWM 1
2	Digital In 2	Digital Out 2 ¹	Digital Out 2 ²	-
3	Digital In 4	Digital Out 4a ³	-	-
4	Digital In 6	Digital Out 5a ³	-	-
5	PWM 0	Capture	-	-
6	Analog GND			
7	Analog In 1	Analog Out 1	-	-
8	Analog In 3	-	-	-
9	Digital In 1	Digital Out 1 ¹	Digital Out 1 ²	-
10	Digital In 3	Digital Out 3 ¹	Digital Out 3 ²	-
11	Digital In 5	Digital Out 4b ³	-	-
12	Digital In 7	Digital Out 5b ³	-	-
13	Digital GND			
14	Analog In 0	Analog Out 0	-	-
15	Analog In 2	-	-	-

1) Push-Pull

2) Open Collector

3) a/b line: switched by PhotoMOS relays, external signal at a is switched to b.

5.1.8 Technical Data



Note

The values are absolute maximums and must not be exceeded. All voltages are defined with respect to pin AGND or DGND unless otherwise specified. Positive current flows into the device.

Supply voltage	By base unit
-----------------------	--------------

Digital Inputs	
Number	8x with variable switching threshold and fixed switching hysteresis.
Input voltage	0 V ... 36 V
Threshold	0 V ... 20 V
Switching hysteresis	1000 mV $\pm$ 10 %
Input resistance	1.33 Mohm

Digital Outputs	
Number	6
Output voltage	Push-Pull: 5 V or 12 V (for all digital outputs collectively) OC: 0 V ... 36 V MOS switch: -36 V ... +36 V
Current carrying capacity at inactive analog outputs	Push: max. 80 mA at 5 V or max. 24 mA at 12 V (for all digital outputs collectively) OC/Pull: 100 mA MOS switch: 450 mA
Protection circuit	Push: Current monitoring circuit on overload OC/Pull: Short circuit by self-resetting fuse MOS switch: Short circuit by self-resetting fuse
On resistance	External signals: max. 2.5 ohm (MOS)
Output capacitance	External signals: 1.5 pF (MOS)
Switching time	typ. activation delay: 630 μ s (3 ms max) typ. deactivation delay: 100 μ s at 25 °C

Analog Inputs	
Number of inputs	4 single-ended
Measurement range	Single-ended: 0 V ... 36 V
Input resistance	AIN0, AIN1: 48 kohm AIN2, AIN3: 1 Mohm
Resolution	12 bit
Accuracy	1.3% of the measured value $\pm$ 33 mV
Sampling rate	Max. 1 kHz

Analog Outputs	
Number of outputs	2
Voltage range	0 V ... 12 V
Accuracy	2 %
Resolution	12 bit
Conversion time	9 µs
Current carrying capacity at inactive digital outputs	Max. 10 mA at 5 V and 6 mA at 12 V
Output resistance	~ 290 ohm

PWM Outputs (PWM0 / PWM1)	
Number of outputs	2, both with the same frequency and with variable duty cycles
Frequency range	0.02 Hz ... 20 kHz at 8 bit
Resolution	8 bit
Levels	Low: 0 V High: 5 V or 12 V (collectively with digital outputs)
Current carrying capacity	PWM0 Push: max. 80 mA at 5 V or max. 24 mA at 12 V (for all digital outputs collectively) PWM0/PWM1 Pull: max. 100 mA
Protection circuit	PWM0 Push: Current monitoring circuit on overload
Output resistance	< 100 ohm

PWM Input (PWM0)	
Number of inputs	1
Pulse / pause times	Min: 5 µs
Precision	±1%
Levels	LOW: 0 V ... < V _{HIGH} (0 V ... 0.7 V) HIGH: > V _{LOW} ... < V _{REF} (1.7 V ... 3.3 V)
Input voltage	0 V ... 36 V

5.2 VNpiggy30 IO 8644

5.2.1 General Information

Introduction

The VNpiggy30 IO 8644 is a plug-in board (piggyback) designed for measurements and outputs of digital or analog signals. This plug-in board can be used with the following Vector devices:

► VN1670

Measurement lines accessible on channel IO via D-SUB15HD connector.

Signal lines

The VNpiggy30 IO 8644 offers a total of thirteen signal lines. Depending on the configuration, the maximum selectable IO lines are:

- 8x digital input
- 6x digital output
- 4x analog input
- 4x analog output
- 2x PWM output
- 1x PWM input



Note

The lines may be operated as either input or output. Mixed operation of one line is not possible. Mixed configuration of different lines is allowed.

The configuration is performed in your measurement application (e. g. CANoe). You can define your own measurement condition there for each defined measurement group. When a condition is fulfilled, the related signal values of the measurement group are acquired and passed to the application.

Measurement Group Digital	Measurement Group Analog	Measurement Group PWM
Digital In 0...7	Analog In 0...3	Capture
↔ Measurement Condition	↔ Measurement Condition	↔ Measurement Condition

The following measurement conditions are available for selection:


- Cyclic measurement
- Measurement by level changes (trigger)
(High → Low and Low → High) at the digital inputs

5.2.2 Digital Inputs and Outputs

Description

All digital signal lines can be used as either an input or output. This can be configured in the measurement application (e. g. CANoe). The following diagram illustrates the switching logic:

Switching logic for digital signals

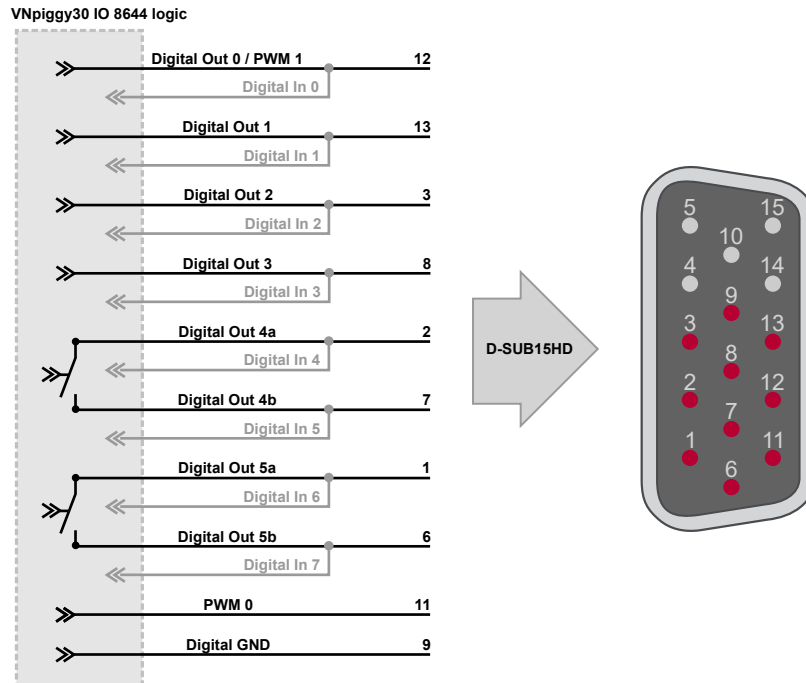

Inputs

The switching threshold can be defined over a range of 1 V ... 36 V for all eight digital inputs (Digital In 0...7) with a constant hysteresis of 1 V.

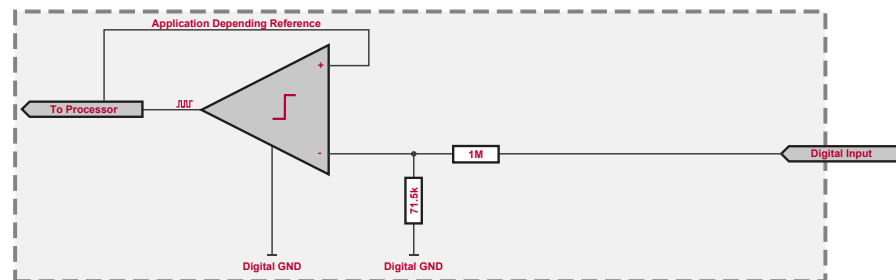


Figure 18: Digital input

Outputs

You can operate the digital outputs in three different modes. They are configured in your measurement application.



Figure 19: Digital output

► Push-Pull (only Digital Out 0...3)

The LOW state corresponds to digital GND, and the HIGH state corresponds to the internal output voltage defined (by software). To prevent short circuits, you should never interconnect two push-pull outputs. Since the push driver loads the internal supply, the push output delivers less current than the pull input can take.

► Open-Collector (only Digital Out 0...3)

The LOW state corresponds to digital GND, and the HIGH state corresponds to the external voltage applied via a pull-up resistor (current rating see section [Technical Data](#) on page 94).

► MOS switch (only Digital Out 4a/4b and 5a/5b)

Floating switch for switching external signals. The signals to be switched are connected to the a/b lines provided. Suitable for all signals between - 36 V and + 36 V.



Note


The digital outputs 4a/4b and 5a/5b of the VNpigggy30 IO 8644 are implemented as switching outputs through PhotoMOS relays (switching time see section [Technical Data](#) on page 94). The limit frequency of the relays indicates the damping of the signal to be switched (the signal forms can be changed).



Example

Digital output in Open-Collector mode

Digital Out 0 and 1 are configured as Open-Collector outputs. This requires a constant voltage to be applied via an external pull-up resistor. While LOW is defined with Digital GND, HIGH depends on the externally applied voltages.

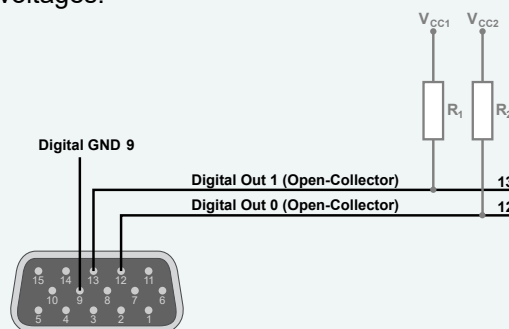




Example

Digital output with external signal source


This example involves toggling a sinusoidal source voltage $V_{\text{signal in}}$ on and off arbitrarily. In the example, this is done by applying $V_{\text{signal in}}$ to Digital In 4. The voltages can now be toggled on and off at Digital Out 4b via the internal switch. The measurement application controls switching.

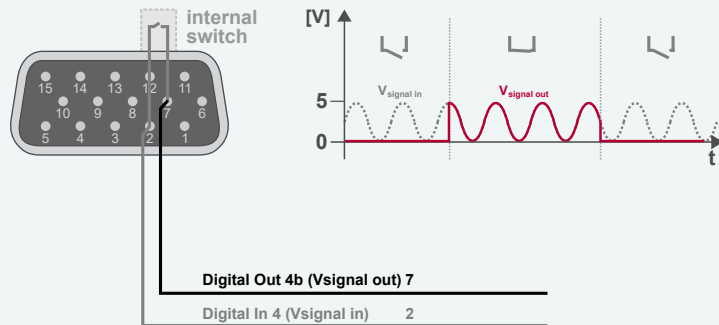

5.2.3 Analog Inputs and Outputs

Description

The VNPiggy30 IO 8644 has four analog inputs and outputs. They can be configured in the measurement application (e. g. CANoe). The following diagram illustrates the switching logic:

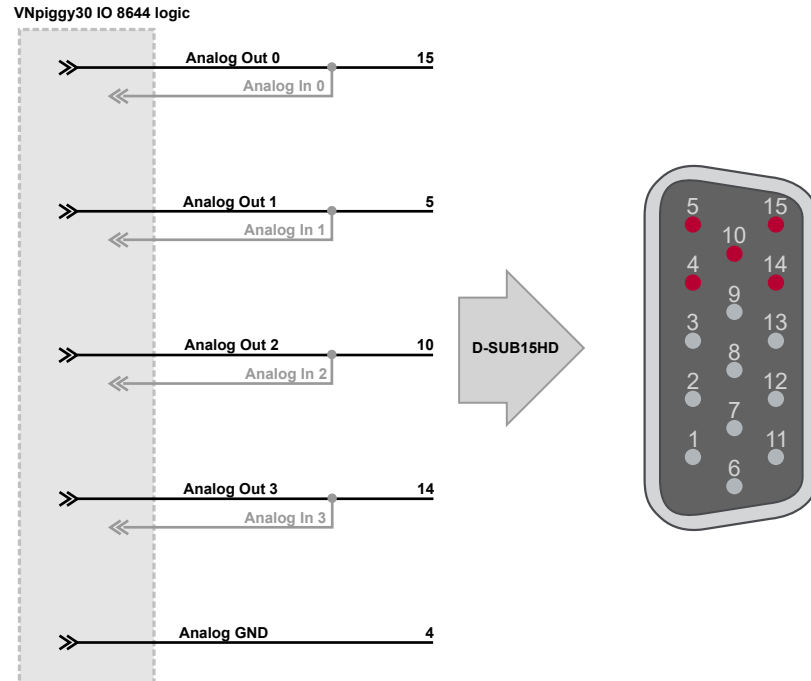

Inputs

You can operate the analog inputs in the following mode:

► Single-Ended (Analog In 0 ... 3)

The common reference potential for measurement of the voltages is Analog GND. Four independent signal lines are available for this.

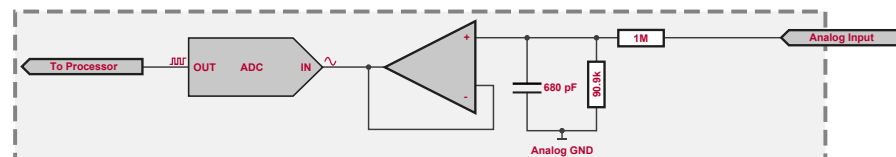


Figure 20: Analog input

Outputs

A voltage between 0 V and 12 V can be provided. An analog output can drive a maximum current of 10 mA (at 5 V) and 6 mA (at 12 V) respectively.

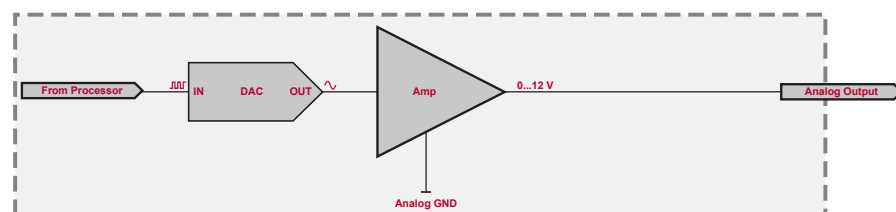


Figure 21: Analog output

5.2.4 PWM Outputs (PWM0/PWM1)

Description

The VNpiggy30 IO 8644 has PWM generators at pin 12 (PWM 1) and pin 11 (PWM 0) that can be operated at different frequencies. The configurable frequency range is between 0.02 Hz and 20 kHz. The two PWM duty cycles are configured in the measurement application and can be set independently from 0 % up to 100.0 %.

5.2.5 PWM Input (PWM0)

Description

You can use the PWM input to measure the duty cycle of a PWM signal. The minimum pulse width is 1 μ s. This yields a maximum input frequency of 100 kHz (at a 50 % duty cycle).

5.2.6 D-SUB15HD Pin Configuration Examples

The following table shows examples of different pin configurations defined in the measurement application (e. g. CANoe):

Pin	Configuration 1	Configuration 2	Configuration 3
1	Digital In 6	Digital Out 5a ³	-
2	Digital In 4	Digital Out 4a ³	-
3	Digital In 2	Digital Out 2 ¹	Digital Out 2 ²
4	Analog GND		
5	Analog In 1	Analog Out 1	-
6	Digital In 7	Digital Out 5b ³	-
7	Digital In 5	Digital Out 4b ³	-
8	Digital In 3	Digital Out 3 ¹	Digital Out 3 ²
9	Digital GND		
10	Analog In 2	-	-
11	PWM	-	-
12	Digital In 0	Digital Out 0 ¹	Digital Out 0 ²
13	Digital In 1	Digital Out 1 ¹	Digital Out 1 ²
14	Analog In 3	-	-
15	Analog In 0	Analog Out 0	-

1) Push-Pull

2) Open-Drain

3) a/b line: switched by PhotoMOS relays, external signal at a is switched to b.

5.2.7 Technical Data



Note

The values are absolute maximums and must not be exceeded. All voltages are defined with respect to pin AGND or DGND unless otherwise specified. Positive current flows into the device.

Although MOSFETs are used, the Open-Drain outputs are abbreviated as "OC" to facilitate comparison with the IOPiggy 8642.

Supply voltage	By base unit
-----------------------	--------------

Digital Inputs	
Number	8x with variable switching threshold and fixed switching hysteresis.
Input voltage	0 V ... 36 V
Threshold	1 V ... 36 V
Switching hysteresis	1000 mV $\pm$ 5%
Input resistance	>1 Mohm

Digital Outputs	
Number	6
Output voltage	Push-Pull: 5 V or 12 V (for all digital outputs collectively) OC: 0 V ... 36 V PhotoMOS switch: -36 V ... +36 V
Current carrying capacity	Push: max. 80 mA at 5 V or max. 24 mA at 12 V (for all digital outputs collectively) OC/Pull: 100 mA MOS switch: 450 mA
Protection circuit	Push: Current monitoring circuit on overload (20 mA per channel) OC/Pull: Short circuit by self-resetting fuse PhotoMOS switch: Short circuit by self-resetting fuse
On resistance	External signals: max. 2.5 ohm (MOS)
Output capacitance	External signals: 1.5 pF (MOS)
Switching time	typ. 630 μ s (3 ms max.) typ. deactivation delay: 100 μ s at 25 °C

Analog Inputs	
Number of inputs	4 single-ended
Measurement range	Single-ended: 0 V ... 36 V
Input resistance	AIN0 ... AIN3: >1 Mohm
Resolution	12 bit
Accuracy	typ. 0.07 % gain + 12 mV offset max. 0.25 % gain + 37 mV offset
3dB bandwidth	2 kHz

Analog Outputs	
Number of outputs	4
Voltage range	0 V ... 12 V
Accuracy	0.5 % gain +10 mV offset
Resolution	12 bit
Current carrying capacity	Max. 10 mA at 5 V and 6 mA at 12 V
Output resistance	Approx. 10 ohm

PWM Outputs (PWM0 / PWM1)	
Number of outputs	2x with independent frequencies and duty cycles
Frequency range	0.02 Hz ... 20 kHz, typ. in 0.01 kHz steps (depends on measurement application)
Duty cycle	0 % ... 100 %, typ. in 0.01 % steps (depends on measurement application)
Levels	Low: 0 V High: 5 V or 12 V (collectively with digital outputs)
Current carrying capacity	PWM0 Push: max. 80 mA at 5 V or max. 24 mA at 12 V (for all digital outputs collectively) PWM0/PWM1 Pull: max. 100 mA
Protection circuit	PWM0 Push: Current monitoring circuit on overload

PWM Input (PWM0)	
Number of inputs	1
Pulse / pause times	Min: 5 µs
Precision	±1%
Levels	LOW: 0 V ... < V _{HIGH} (0 V ... 0.7 V) HIGH: > V _{LOW} ... < V _{REF} (1.7 V ... 3.3 V)
Input voltage	0 V ... 36 V

6 Cables and Connectors

In this chapter you find the following information:

6.1 CAN/LIN	98
6.1.1 CANcable0	98
6.1.2 CANcable1	98
6.1.3 CANcableA	99
6.1.4 CANcable TnT (D-SUB9 to Bunch Plugs)	99
6.1.5 CANcable TnT Term	100
6.1.6 CANcableY	100
6.1.7 CANcable 2Y	101
6.1.8 CANterm 120	102
6.1.9 CANcable Set Pro	102
6.2 Ethernet	103
6.2.1 AEcable 2Y Family	103
6.2.2 AEcable MultiGig Family	109
6.2.3 AEcable ix/DSUB9 Family	111
6.2.4 10BASEterm	118
6.2.5 BRcable 2Y	119
6.2.6 VNCable D-SUB9 HSD Z Male	120
6.2.7 VNCable D-SUB9 HSD Z Female	121
6.2.8 Ethernet Cables	122
6.3 MOST	126
6.3.1 ECL Cable	126
6.3.2 Fiber Optic Cable	126
6.3.3 Fiber Optic Cable Coupling	127
6.4 FlexRay	128
6.4.1 FRcable Set	128
6.4.2 FRcable A	128
6.4.3 FRcable AB	129
6.4.4 FRterm	130
6.4.5 FR/CANcable 2Y	131
6.5 OBDcables	132
6.5.1 OBDcable CAN	132
6.5.2 OBDcable OEM GM	133
6.5.3 OBDcable OEM01	134
6.5.4 OBDcable DoIP/CAN B1	135
6.6 USB Cables and Hub	137
6.6.1 USB Cable 2.0	137
6.6.2 USB Cable 2.0 (C-B, 1.8m)	137

6.6.3 USB Cable 3.0 (A-B, 1.8m)	138
6.6.4 USB Cable 3.0 (Type-B Conn. with Screws)	138
6.6.5 USB Cable 3.1 Type A-C (Dual Screw Lock)	139
6.6.6 USB Cable 3.1 Type C-C (Dual Screw Lock)	139
6.6.7 USBcable 3.2 Gen 2 C-C SDSL	140
6.6.8 USBcable 3.2 Gen 2 C-C DDSL	140
6.6.9 USBcable 3.2 Gen 2 C-B DDSL	141
6.6.10 USBadapter 3.2 Gen 1 C-A SDSL	141
6.6.11 USB 3.2 Gen2x1 Hub	142
6.7 Miscellaneous	144
6.7.1 Cable Binder 3pol Connector with Pigtail	144
6.7.2 Power Sync Cable 2xBinder <> Banana Plugs	145
6.7.3 Breakout Box D62Y9	146
6.7.4 VNcable DSUB62	148
6.7.5 VNcable DSUB62 A	149
6.7.6 VNcable DSUB62 B	150
6.7.7 VNcable D62Y9	151
6.7.8 VNcable DSUB37	152
6.7.9 VNcable 3Y	153
6.7.10 VNcable 4Y	155
6.7.11 Terminal Block DSUB37	157
6.7.12 VX1362B CAN Cable LEMO/Banana Plugs 1.5M	157


6.1 CAN/LIN

6.1.1 CANcable0

Low-speed cable

Description	CAN/LIN connection cable Note: When using with devices that have a primary and a secondary D-SUB9 pin assignment, only the primary channel is accessible.
Length	0.3 m
Connectors	2x female D-SUB9 connectors
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -10 °C ...+80 °C
Min. bending radius	Fixed installation: 21 mm Flexible use: 42 mm
Properties	Without terminating resistors
Part number	05002

Setup

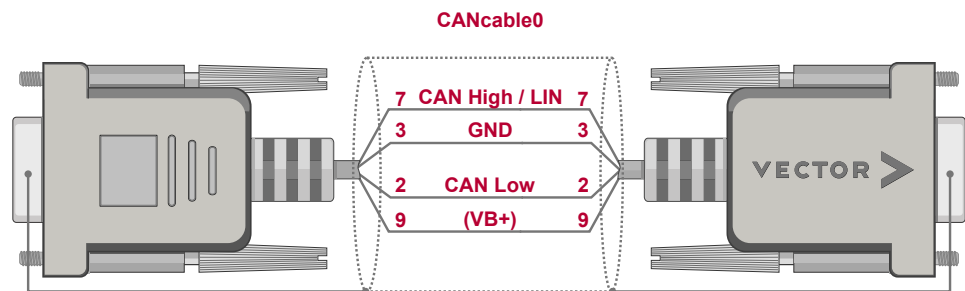


6.1.2 CANcable1

High-speed cable

Description	CAN connection cable Note: When using with devices that have a primary and a secondary D-SUB9 pin assignment, only the primary channel is accessible.
Length	0.3 m
Connectors	2x female D-SUB9 connectors
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -10 °C ...+80 °C
Min. bending radius	Fixed installation: 21 mm Flexible use: 42 mm
Properties	Two parallel 120 ohm terminating resistors
Part number	05001

Setup

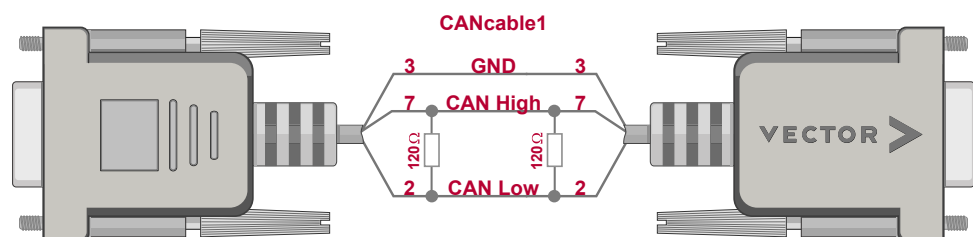


6.1.3 CANcableA

All-purpose cable

Description	CAN/LIN connection cable
Length	0.5 m
Connectors	1x female D-SUB9 connector 4x stripped wires
Temp. range	Fixed installation: -30 °C ... +80 °C Flexible use: -10 °C ... +80 °C
Min. bending radius	Fixed installation: 21 mm Flexible use: 42 mm
Part number	Included in CANcable Set Pro (part number 05060)

Setup

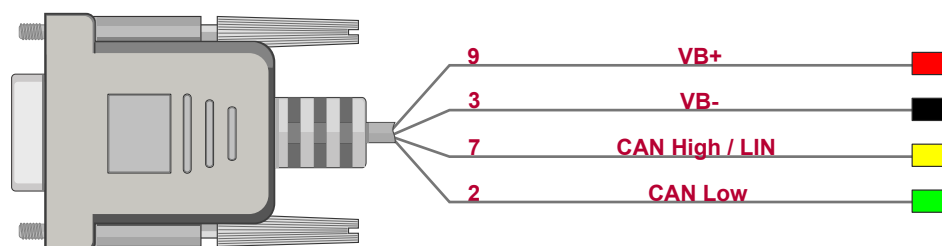


6.1.4 CANcable TnT (D-SUB9 to Bunch Plugs)

Misc. CAN

Description	Connection for: - CAN 2.0, CAN FD, CAN SIC - Truck & Trailer CAN (ISO 11992)
Length	1.5 m
Connectors	1x female D-SUB9 connector 4x bunch plug
Temp. range	Fixed installation: -25 °C ... +70 °C Flexible use: -5 °C ... +70 °C
Min. bending radius	Fixed installation: 22.4 mm Flexible use: 56.0 mm
Properties	Without terminating resistor
Part number	05016

Setup

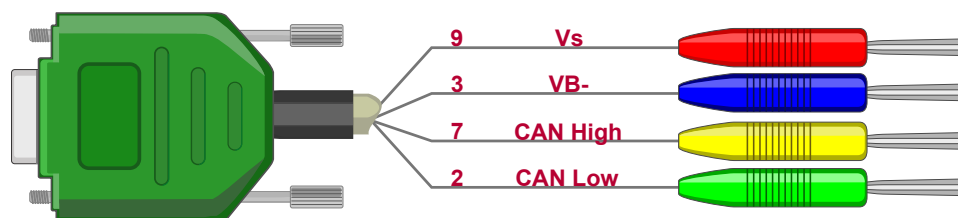


6.1.5 CANcable TnT Term

Truck & Trailer CAN

Description	Connection cable for Truck & Trailer (ISO 11992)
Length	1.5 m
Connectors	1x female D-SUB9 connector 4x bunch plugs
Temp. range	Fixed installation: -25 °C ...+70 °C Flexible use: -5 °C ...+70 °C
Min. bending radius	Fixed installation: 22.4 mm Flexible use: 56.0 mm
Properties	With terminating resistors
Part number	05015

Setup

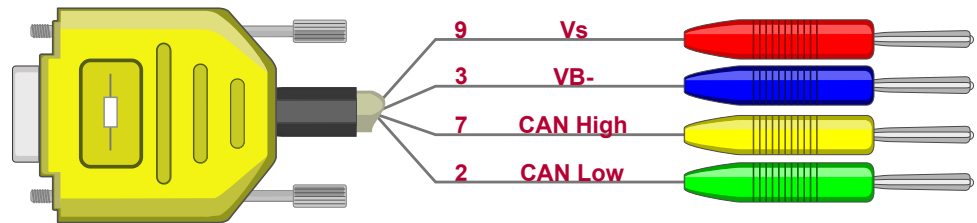


6.1.6 CANcableY

Extension cable

Description	Y extension cable for CAN or LIN
Length	2 m (overall length)
Connectors	3x female D-SUB9 connectors
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -10 °C ...+80 °C
Min. bending radius	Fixed installation: 21 mm Flexible use: 42 mm
Properties	Including gender changer
Part number	Included in CANcable Set Pro (part number 05060)

Setup

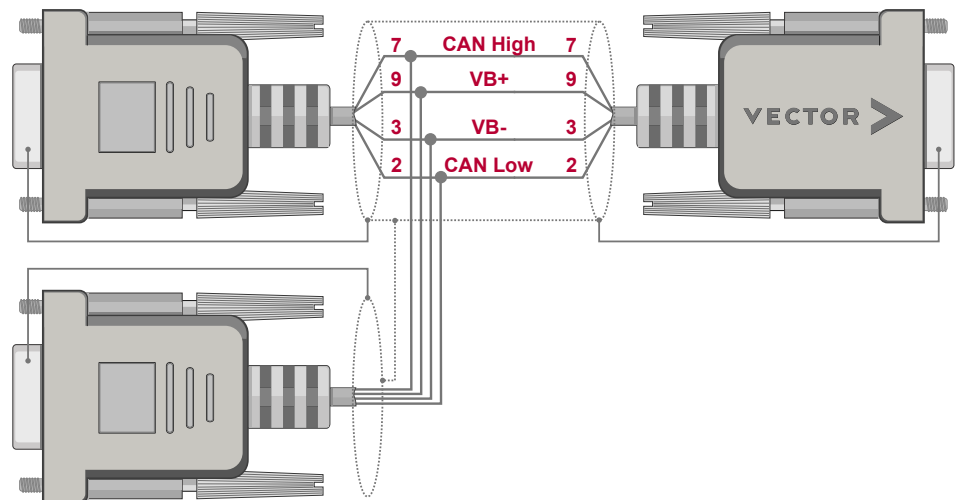


6.1.7 CANcable 2Y

Y cable

Description	Y cable for Vector CAN/LIN interfaces with D-SUB9 double assignment (VN1600 interface family, VN8970 etc.). Splits the double assignment into two separate D-SUB9 connectors (CH A and CH B). Examples: ▶ VN1610 - CH1/2 → Channel 1 (CH A) and 2 (CH B) ▶ VN1630 - CH1/3 → Channel 1 (CH A) and 3 (CH B) - CH2/4 → Channel 2 (CH A) and 4 (CH B) ▶ VN8970 - CH1/5 → Channel 1 (CH A) and 5 (CH B) - CH2/6 → Channel 2 (CH A) and 6 (CH B) - CH3/7 → Channel 3 (CH A) and 7 (CH B) - CH4/8 → Channel 4 (CH A) and 8 (CH B) The pin assignments of the D-SUB9 connectors CH A and CH B depend on the used bus transceivers inside the interface (see section D-SUB Pin Assignment on page 50).
Length	0.3 m
Connectors	1x female D-SUB9 connector 2x male D-SUB9 connectors
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -10 °C ...+80 °C
Min. bending radius	Fixed installation: 27.5 mm Flexible use: 55.0 mm
Part number	05075

Setup

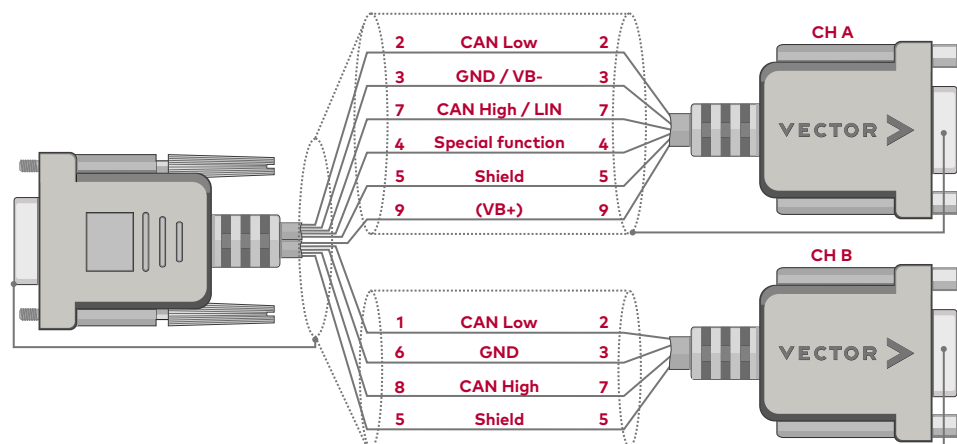


6.1.8 CANterm 120

Terminating resistor

Description	CAN adapter for high-speed CAN buses Note: When using with devices that have a primary and a secondary D-SUB9 pin assignment, only the primary channel is accessible.
Rated voltage	300 V
Operating temp.	-25 °C ... +105 °C
Connectors	1x female D-SUB9 connector 1x male D-SUB9 connector
Properties	One 120 ohm terminating resistor
Part number	05004

Setup

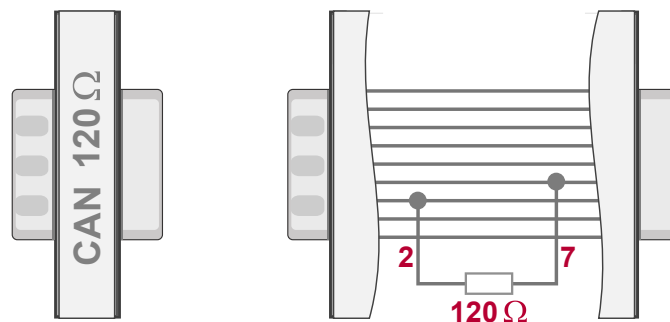

6.1.9 CANcable Set Pro

Description	Cable set for CAN/LIN incl.: ▶ 1x CANcable0 ▶ 1x CANcableY ▶ 2x CANcableA ▶ 2x CANterm 120 ▶ 2x Gender changer male/male ▶ 1x Gender changer female/female
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -10 °C ...+80 °C
Min. bending radius	Fixed installation: 21 mm Flexible use: 42 mm
Part number	05060

6.2 Ethernet

6.2.1 AEcable 2Y Family

6.2.1.1 General Information

Connection cable

Description	Connection cable for 1000BASE-T1 and 100BASE-T1 Ethernet network interfaces with an ix connector, a splitter box and different ends for multiple use cases (see section Connector Options on page 104). The splitter box separates the two Ethernet channels into two separate cables. The shieldings of CHA and CHB are connected to each other, but are electrically isolated from the shield of the network interface via capacitors.
Length	approx. 1.8 m*
Rated voltage	30 V
HV test	300 V (0.01 s)
Connectors	1x ix connector (type A, 10 pole, male) Harting: 09 45 181 2561 XL / Hirose IX30G-A-10S-CV(7.0)


* exceptions see section Connector Options on page 104

AEcable 2Y with H-MTD Z connectors



Pin assignment

Pin	Assignment	Color
1	CHB MDI+	white/orange
2	CHB MDI-	orange
3	Not connected	-
4	Not connected	blue
5	Not connected	white/blue
6	CHA MDI+	white/green
7	CHA MDI-	green
8	Not connected	-
9	Not connected	white/brown
10	Not connected	brown
Shield	Shield	-

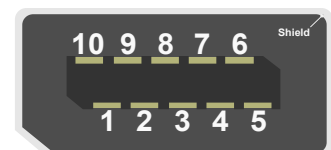

6.2.1.2 Connector Options

Overview

The following table shows an overview of the available connectors for the AECable 2Y:

AECable 2Y	Connectors	Part no.
EVA	2x open end - Single strand cross section 0.14 mm² (seven tinned copper wires) - Outer diameter one conductor: about 1.23 mm - Outer diameter cable: about 3.8 mm - Similar to LEONI Dacar 686-3 or Gebauer&Griller 2Speed 251 Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C - Cable: white (MDI+) / green (MDI-)	05124
EVA 10m	2x open end - Cable length: 10 m - Single strand cross section 0.14 mm² (seven tinned copper wires) - Outer diameter one conductor: about 1.23 mm - Outer diameter cable: about 3.8 mm - Similar to LEONI Dacar 686-3 or Gebauer&Griller 2Speed 251 Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C - Cable: white (MDI+) / green (MDI-)	05211
H-MTD Zjp	1x H-MTD, coding Z, type jack Manufacturer part number: Rosenberger E6K10A-1CAZ5-Z 1x H-MTD, coding Z, type plug Manufacturer part number: Rosenberger E6S10A-1CAZ5-Z Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05134
H-MTD Zjj	2x H-MTD, coding Z, type jack Manufacturer part number: Rosenberger E6K10A-1CAZ5-Z Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05133
H-MTD Zpp	2x H-MTD, coding Z, type plug Manufacturer part number: Rosenberger E6S10A-1CAZ5-Z Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05135
HSD Zjp	1x HSD, coding Z, type jack Manufacturer part number: Rosenberger D4K10A-1D5A5-Z 1x HSD, coding Z, type plug Manufacturer part number: Rosenberger D4S10A-1D5A5-Z	05126
HSD Zjj	2x HSD, coding Z, type jack Manufacturer part number: Rosenberger D4K10A-1D5A5-Z Technical data	05128

AECable 2Y	Connectors	Part no.
	- Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	
HSD Zpp	2x HSD, coding Z, type plug Manufacturer part number: Rosenberger D4S10A-1D5A5-Z Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05129
MATenet Zfh	1x MATenet, coding Z, type frame Manufacturer part number: TE (Tyco Electronics, TE Connectivity) 1-1703930-1 MATenet NanoMQS Receptacle Terminal 1-2302450-1 MATenet female insert modul 2302454-9 MATenet 1-port Frame UTP Z-Coding 1x MATenet, coding Z, type header Manufacturer part number: TE (Tyco Electronics, TE Connectivity) 2236905-1 MATenet Nano TAB 0.5x0.4 Terminal 2302451-1 MATenet male insert modul 4-2302461-9 MATenet 1-port Inline Coupler Z-Coding Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05137
MATenet Zff	2x MATenet, coding Z, type frame Manufacturer part number: TE (Tyco Electronics, TE Connectivity) 1-1703930-1 MATenet NanoMQS Receptacle Terminal 1-2302450-1 MATenet female insert modul 2302454-9 MATenet 1-port Frame UTP Z-Coding Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05138
MATenet Zhh	2x MATenet, coding Z, type header Manufacturer part number: TE (Tyco Electronics, TE Connectivity) 2236905-1 MATenet Nano TAB 0.5x0.4 Terminal 2302451-1 MATenet male insert modul 4-2302461-9 MATenet 1-port Inline Coupler Z-Coding Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05136
DSUB9 male	2x D-SUB9, type male Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05119
RJ45pp	2x RJ45, type plug Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05131
RJ45jj	2x RJ45, type jack Technical data	05130

AEcable 2Y	Connectors	Part no.
	- Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	
RJ45jp	1x RJ45, type plug 1x RJ45, type jack Technical data - Rated voltage: 30 V - Min. bending radius: 37.2 mm - Max. operating temp.: 75 °C	05132

H-MTD Z connectors



Figure 22: Jack



Figure 23: Plug

HSD Z connectors

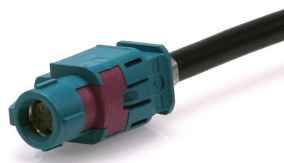


Figure 24: Jack



Figure 25: Plug

MATenet Z connectors



Figure 26: Frame

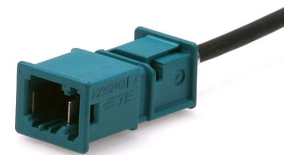


Figure 27: Header

D-SUB9 / RJ45 connectors



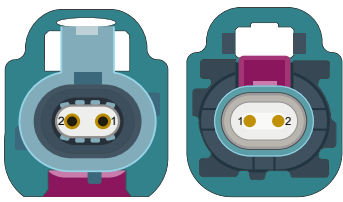
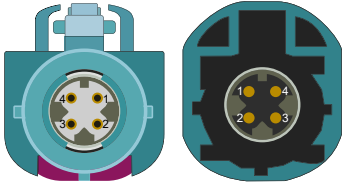
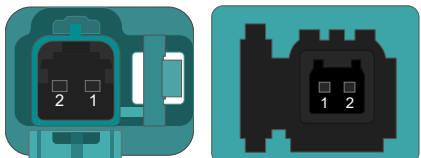
 
Figure 28: D-SUB 9 (plug)



Figure 29: RJ45 (plug)

Pin assignment

The following table shows the pin assignment depending on the connector type:

Connector Type	Ethernet MDI+	Ethernet MDI-
H-MTD Z  jack / plug	Pin 1	Pin 2
HSD Z  jack / plug	Pin 2	Pin 3
MATenet Z  frame / header	Pin 1	Pin 2
D-SUB9 (2x) (one MDI channel at each connector) 	Pin 4	Pin 5
RJ45 	Pin 1	Pin 2

EVA

Color	Assignment
White	MDI+
Green	MDI-




Note

Please note that the AECable 2Y DSUB9 male is intended for use with 100BASE-T1 only. All other cables are intended for 1000BASE-T1 and 100BASE-T1.


Cable length

The cable lengths vary depending on the cable option. The length of the H-MTD, HSD, MATEnet, D-SUB or RJ45 connector will increase the overall length accordingly.

AEcable 2Y EVA

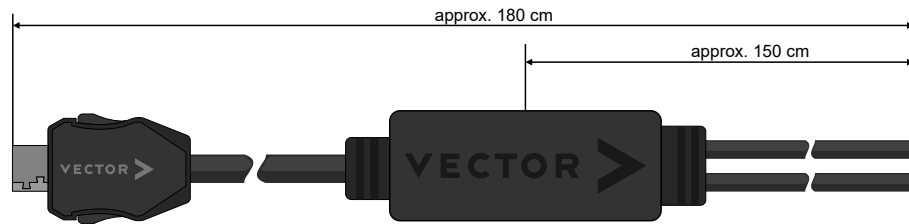

AEcable 2Y EVA 10m

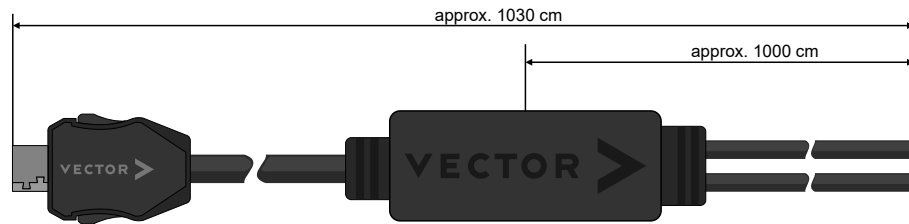

6.2.2 AECable MultiGig Family

6.2.2.1 General Information

Connection cable

Description	Connection cable for MultiGBASE-T1 Automotive Ethernet network interfaces. With a high-speed capable connector and different ends for multiple use cases (see section Connector Options on page 110).
Length	approx. 1.8 m*
Minimum bending radius	Fixed installation: 12 mm (3x outer diameter, outer diameter: 4 mm) Flexible use: 40 mm (10x outer diameter, outer diameter: 4 mm)
Connectors	1x Yamaichi YCP-BPR09ACX-S1MSCDX-041B


* exceptions see section Connector Options on page 110

AECable MultiGig with
H-MTD Z connectors



Pin assignment

Pin YCP	Color	Pin H-MTD
1	white	1
2	green	2
Shield	-	Shield

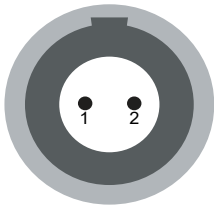

6.2.2.2 Connector Options

Overview

The following table shows an overview of the available connectors for the AECable MultiGig:

AECable MultiGig	Connectors	Part no.
EVA	Open end - Single strand cross section 0.14 mm ² (seven tinned copper wires) - Outer diameter one conductor: about 1.23 mm - Outer diameter cable: about 3.8 mm - Similar to Gebauer&Griller 2Speed 251 - Cable: white (MDI+) / green (MDI-)	05218
H-MTD Zj	H-MTD, coding Z, type jack Manufacturer part number: Rosenberger E6K10A-1CAZ5-Z	05216
H-MTD Zp	H-MTD, coding Z, type plug Manufacturer part number: Rosenberger E6S10A-1CAZ5-Z	05217

H-MTD Z connectors



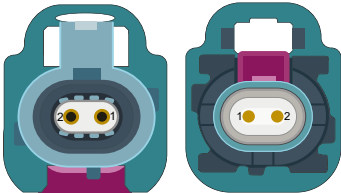
Figure 30: Jack




Figure 31: Plug

Pin assignment

The following table shows the pin assignment depending on the connector type:

Connector Type	Ethernet MDI+	Ethernet MDI-
H-MTD Z  jack / plug	Pin 1	Pin 2

Cable length

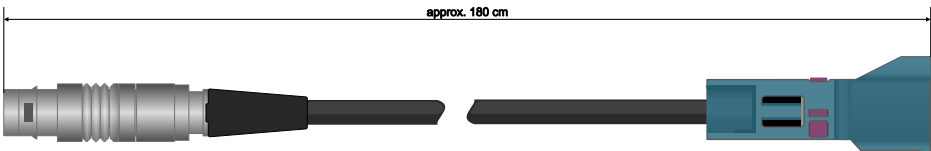

6.2.3 AECable ix/DSUB9 Family


6.2.3.1 AECable ix/DSUB9 100BASE-T1

Connection cable


Description	Connection cable with an ix and a D-SUB9 connector for 100BASE-T1 Ethernet networks. The D-SUB9 connector provides two Ethernet channels (CHA and CHB). The shields of the ix connector and the D-SUB9 connector are not linked via the cable shield.
Length	approx. 15 cm between the connectors
Minimum bending radius	32.5 mm (5x outer diameter, outer diameter: 6.5 mm)
Connectors	1x ix connector (type A, 10 pole, male) Harting: 09 45 181 2561 XL / Hirose IX30G-A-10S-CV(7.0) 1x D-SUB9 (male)
Part number	05214



Cable length

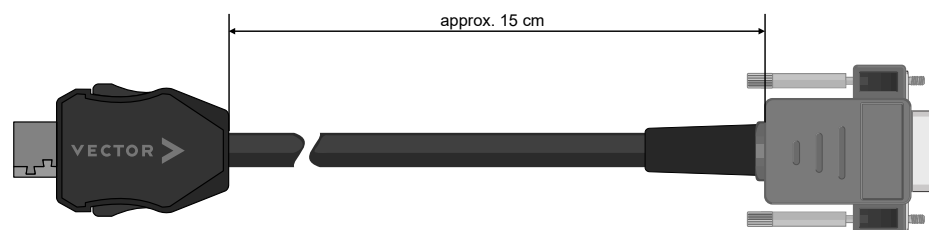


Setup

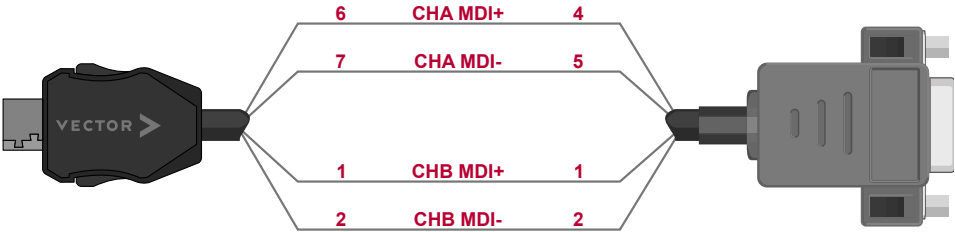


Pin assignment

Pin	Assignment	Color
1	CHB MDI+	white/orange
2	CHB MDI-	orange
3...5	Not connected	-
6	CHA MDI+	white/green
7	CHA MDI-	green
8...10	Not connected	-
Shield	Shield	-

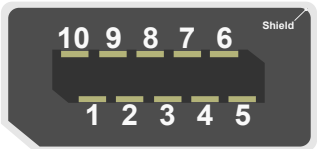


Pin	Assignment
1	CHB MDI+
2	CHB MDI-
3	Not connected
4	CHA MDI+
5	CHA MDI-
6...9	Not connected
Shield	Shield

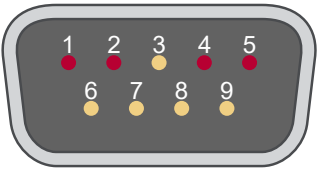

6.2.3.2 AECable ix/DSUB9 10BASE-T1S

Connection cable

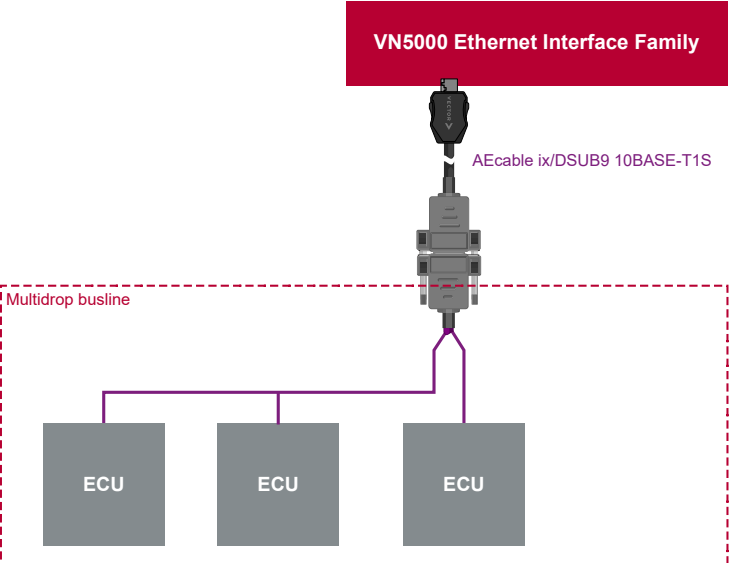Description	Connection cable with one ix and one D-SUB9 connector for 10BASE-T1S Ethernet networks. The shields of the ix connector and the D-SUB9 connector are linked via the cable shield. When used in a multidrop busline setup, one 10BASE-T1S channel is available. The channel consists of two twisted pairs, leading the multidrop bus line into the device to the 10BASE-T1S PHY. At the PHY, the two pairs are connected to each other and to the PHY to keep the stub as short as possible.  The cable is intended for use with VN56xx and other devices for 10BASE-T1S with single assigned ix connectors. Use in other networks must be checked on a case-by-case basis.
Length	approx. 15 cm between the connectors
Minimum bending radius	32.5 mm (5x outer diameter, outer diameter: 6.5 mm)
Connectors	1x ix connector (type A, 10 pole, male) Harting: 09 45 181 2561 XL / Hirose IX30G-A-10S-CV(7.0) 1x D-SUB9 (male)
Part number	05219




Note

When using the AECable ix/DSUB9 10BASE-T1S, the multidrop bus line is extended by 2x 15 cm, i. e. approx. 30 cm.


If no network interface is connected, the multidrop bus line is interrupted.



Cable length

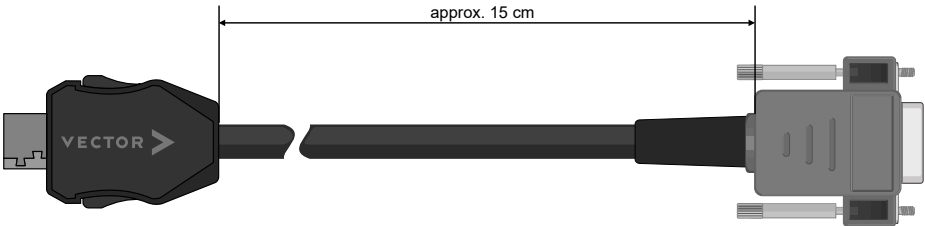

Setup

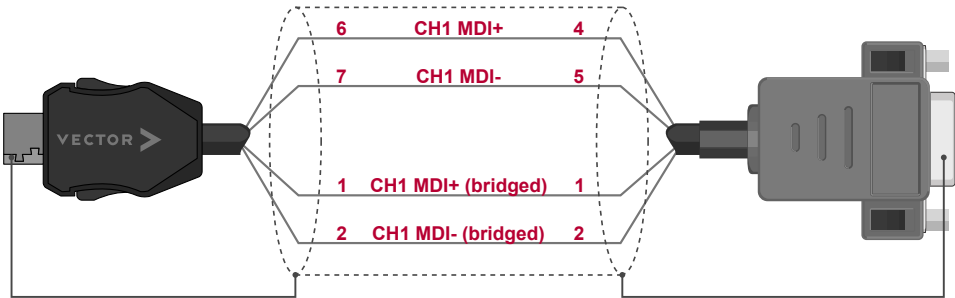


Pin assignment

Pin	Assignment	Color
1	CH1 MDI+ (bridged)	white/orange
2	CH1 MDI- (bridged)	orange
3...5	Not connected	-
6	CH1 MDI+	white/green
7	CH1 MDI-	green
8...10	Not connected	-
Shield	Shield	-



Pin	Assignment
1	CH1 MDI+ (bridged)
2	CH1 MDI- (bridged)
3	Not connected
4	CH1 MDI+
5	CH1 MDI-
6...9	Not connected
Shield	Shield

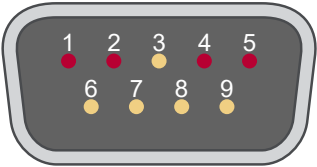

6.2.3.3 AEcable 2Y DSUB9 10BASE-T1S

Connection cable

Description	Connection cable with one ix and two D-SUB9 connectors for 10BASE-T1S Ethernet networks. The shields of the ix connector and the D-SUB9 connectors are linked via the cable shield. When used in a multidrop bus line setup, two 10BASE-T1S channels are available. Each channel consists of two twisted pairs, leading the multidrop bus line into the device to the 10BASE-T1S PHY. At the PHY, the two pairs are connected to each other and to the PHY to keep the stub as short as possible. The cable is intended for use with VN5614 and other devices for 10BASE-T1S with double assigned ix connectors. Use in other networks must be checked on a case-by-case basis.
Length	approx. 15 cm (overall)
Rated voltage	30 V
HV test	300 V (0.01 s)
Connectors	1x ix connector (type A, 10 pole, male) Harting: 09 45 181 2561 XL / Hirose IX30G-A-10S-CV(7.0) 2x D-SUB9 (male)
Part number	05246




Note

When using the AEcable 2Y DSUB9 10BASE-T1S, the multidrop bus line is extended by 2x 15 cm, i. e. approx. 30 cm.


If no network interface is connected, the multidrop bus line is interrupted.



Cable length

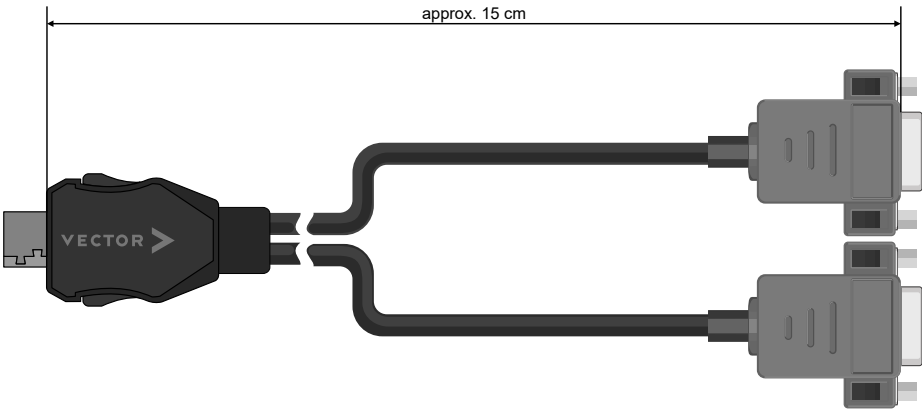

Setup

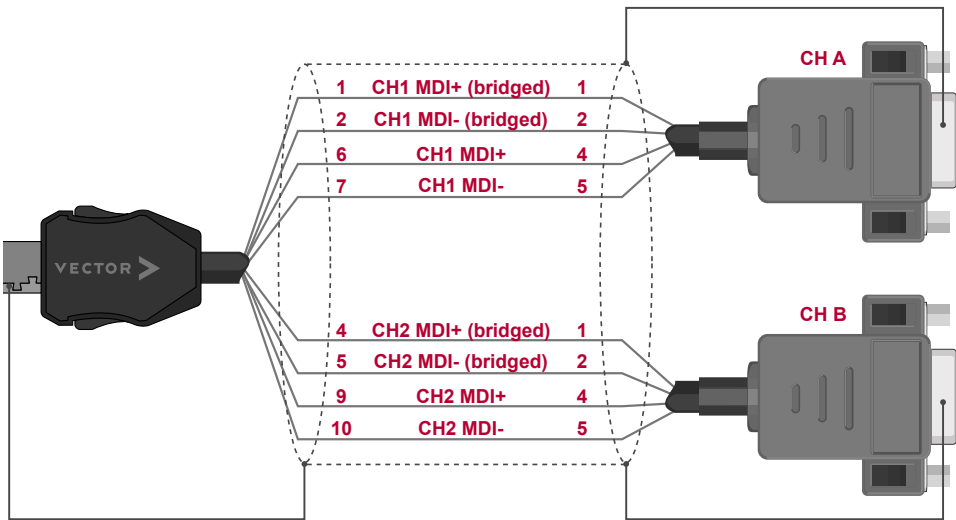


Pin assignment


Pin	Assignment	Color
1	CH1 MDI+ (bridged)	orange
2	CH1 MDI- (bridged)	green
6	CH1 MDI+	brown
7	CH1 MDI-	blue
3	Not connected	-
4	CH2 MDI+ (bridged)	orange
5	CH2 MDI- (bridged)	green
9	CH2 MDI+	brown
10	CH2 MDI-	blue
8	Not connected	-
Shield	Shield	-



Pin	Assignment (Channel A)
1	CH1 MDI+ (bridged)
2	CH1 MDI- (bridged)
3	Not connected
4	CH1 MDI+
5	CH1 MDI-
6...9	Not connected
Shield	Shield

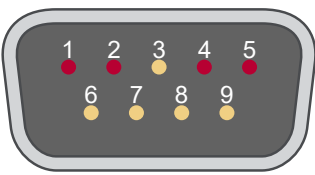

Pin	Assignment (Channel B)
1	CH2 MDI+ (bridged)
2	CH2 MDI- (bridged)
3	Not connected
4	CH2 MDI+
5	CH2 MDI-
6...9	Not connected
Shield	Shield

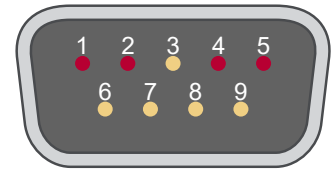


6.2.4 10BASEterm

Terminating resistor

Description	Adapter to terminate 10BASE-T1S networks.
	Note: ▶ The termination resistor is connected to CHB (pin 1 and pin 2) when used with AECable ix/DSUB9 10BASE-T1S. CHA (pin 4 and pin 5) shall be connected to the multidrop busline. ▶ The 10BASEterm ist not intended for use with AECable 2Y DSUB9 male.
Connectors	1x female D-SUB9 connector 1x male D-SUB9 connector
Rated voltage	300 V
Operating temp.	-25 °C ... +105 °C
Properties	One 100 ohm terminating resistor
Part number	05224

Setup

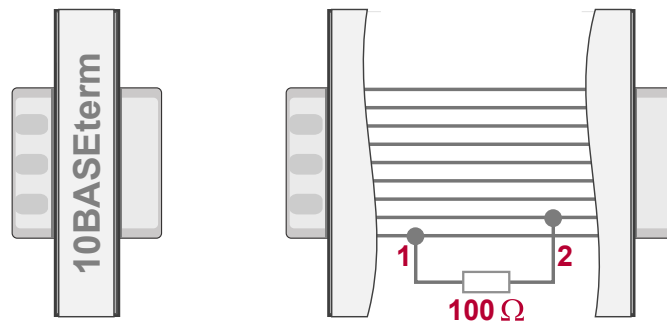


6.2.5 BRcable 2Y

Y cable

Description	Y cable for VN5600 interfaces with D-SUB9 double assignment. Splits the double assignment into two separate D-SUB9 connectors (CH A and CH B), each with a separate BroadR-Reach channel.
Length	0.36 m (overall length)
Connectors	1x female D-SUB9 connector 2x male D-SUB9 connectors
Part number	05103

Setup

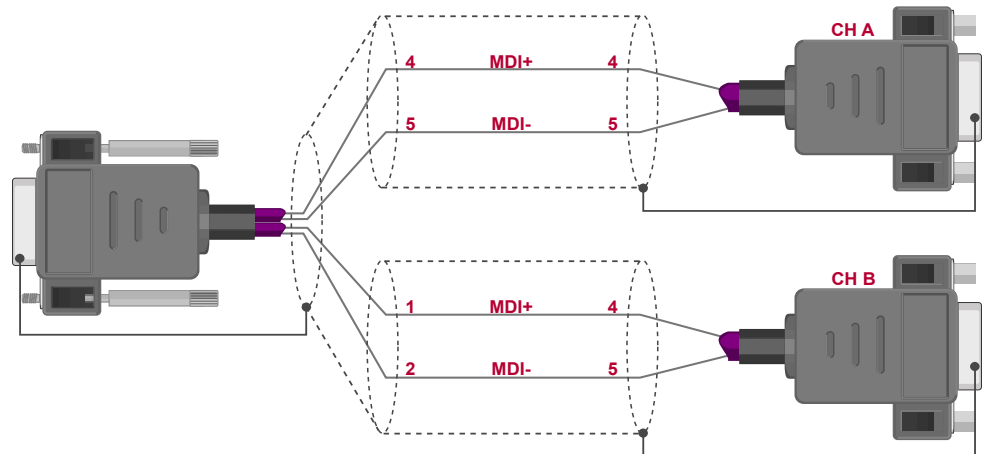

6.2.6 VNCable D-SUB9 HSD Z Male

Connection cable

Description	Connection cable for BroadR-Reach Ethernet network interfaces
Length	approx. 50 cm
Connectors	1x Rosenberger HSD Z (male) 1x D-SUB9 (female)
Part number	05117



Pin assignment

Pin	HSD Connector D4S10A-1D5A5-Z
1	Not connected
2	CH1 MDI+
3	CH1 MDI-
4	Not connected
Shield	Connected

Pin	D-SUB9 Connector
1..3	Not connected
4	CH1 MDI+
5	CH1 MDI-
6...9	Not connected
Shield	Connected



Note

When using this cable, only Ethernet channel 1 is supported. Channel 2 is not connected.

6.2.7 VNcable D-SUB9 HSD Z Female

Connection cable

Description	Connection cable for BroadR-Reach Ethernet network interfaces
Length	approx. 50 cm
Connectors	1x Rosenberger HSD Z (female) 1x D-SUB9 (female)
Part number	05118



Pin assignment

Pin	HSD Connector D4K10A-1D5A5-Z
1	Not connected
2	CH1 MDI+
3	CH1 MDI-
4	Not connected
Shield	Connected

Pin	D-SUB9 Connector
1..3	Not connected
4	CH1 MDI+
5	CH1 MDI-
6...9	Not connected
Shield	Connected



Note

When using this cable, only Ethernet channel 1 is supported. Channel 2 is not connected.

6.2.8 Ethernet Cables

6.2.8.1 Ethernet Cable 0.25m

Connection cable

Description	Cable for Ethernet network interfaces.
Length	approx. 0.25 m
Connectors	2x RJ45
Temp. range	Fixed installation: -10 °C ...+60 °C
Min. bending radius	Fixed installation: 90 mm
Part number	29064

6.2.8.2 Ethernet Cable 10Gbps 0.5m

Connection cable


Description	Cable for Ethernet network interfaces. Designed for vehicle interiors.
Length	approx. 0.5 m
Connectors	2x RJ45 (LxWxH: 41.9 x 12.1 x 15.6 mm)
Category	Cat 6A
Temp. range	Fixed installation: -20 °C ...+60 °C
Min. bending radius	Fixed installation: 87 mm
Outer diameter	6.2 mm
Part number	30017



6.2.8.3 Ethernet Cable 10Gbps 2m

Connection cable

Description	Cable for Ethernet network interfaces. Designed for vehicle interiors.
Length	approx. 2 m
Connectors	2x RJ45 (LxWxH: 41.9 x 12.1 x 15.6 mm)
Category	Cat 6A
Rated voltage	250 V
Temp. range	Fixed installation: -20 °C ...+60 °C
Min. bending radius	Fixed installation: 87 mm
Outer diameter	6.2 mm
Part number	30016

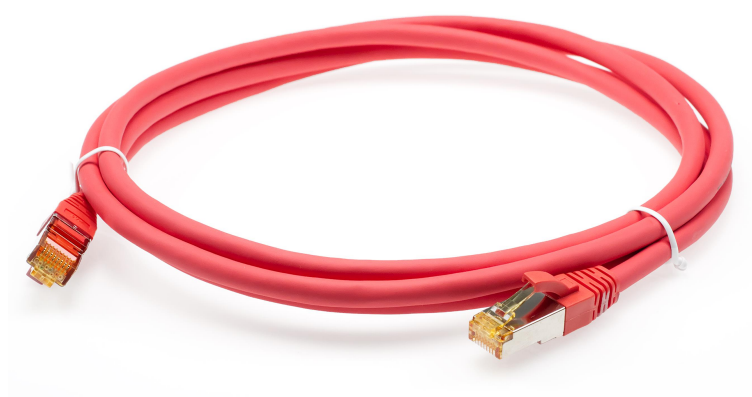

6.2.8.4 Ethernet Cable 10Gbps 7.5m

Connection cable


Description	Cable for Ethernet network interfaces. Designed for vehicle interiors.
Length	approx. 7.5 m
Connectors	2x RJ45 (LxWxH: 41.9 x 12.1 x 15.6 mm)
Category	Cat 6A
Temp. range	-20 °C ...+60 °C
Min. bending radius	60 mm
Outer diameter	6.2 mm
Part number	30018



6.2.8.5 Ethernet Cable Robust 10Gbps 0.5m

Connection cable

Description	Robust cable for Ethernet network interfaces. Designed for vehicle interiors during demanding long-term vehicle testing, with extended temperature range and higher cable robustness against oil, fuel and ozone.
Length	approx. 0.5 m
Connectors	2x RJ45 (LxWxH: 44.7 x 13.4 x 16.1 mm)
Temp. range	-40 °C ...+80 °C
Category	Cat 6A
Min. bending radius	Fixed installation: 40 mm
Outer diameter	6.6 mm
Part number	30024

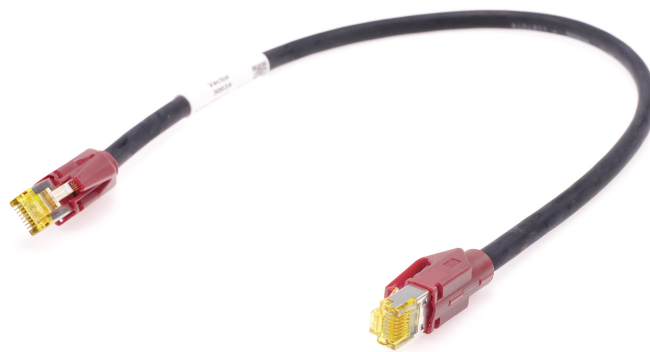

6.2.8.6 Ethernet Cable Robust 10Gbps 2.0m

Connection cable

Description	Robust cable for Ethernet network interfaces. Designed for vehicle interiors during demanding long-term vehicle testing, with extended temperature range and higher cable robustness against oil, fuel and ozone.
Length	approx. 2 m
Connectors	2x RJ45 (LxWxH: 44.7 x 13.4 x 16.1 mm)
Temp. range	-40 °C ...+80 °C
Category	Cat 6A
Min. bending radius	Fixed installation: 40 mm
Outer diameter	6.6 mm
Part number	30025



6.2.8.7 Ethernet Cable Robust 10Gbps 7.5m

Connection cable

Description	Robust cable for Ethernet network interfaces. Designed for vehicle interiors during demanding long-term vehicle testing, with extended temperature range and higher cable robustness against oil, fuel and ozone.
Length	approx. 7.5 m
Connectors	2x RJ45 (LxWxH: 44.7 x 13.4 x 16.1 mm)
Temp. range	-40 °C ...+80 °C
Category	Cat 6A
Min. bending radius	Fixed installation: 40 mm
Outer diameter	6.6 mm
Part number	30026




6.3 MOST

6.3.1 ECL Cable

ECL

Description	ECL cable for VN2640
Length	1.5 m
Connectors	1x male 3-pin Binder connectors (type 711) 3x stripped wires
Part number	30014

 Setup



6.3.2 Fiber Optic Cable

Description	The devices of the VN2600 Family can be connected with the MOST bus by using the Vector MOST fiber optic cable.
Length	1 m
Connectors	1x Standard MOST 2+0 connector 2x POF fiber optic cables 2x HFBR 4531 connector
Minimum bending radius	The minimum bending radius of the POF fiber optic cables used is 50 mm. Bending radii less than 50 mm can cause permanent damage to the fibers.
Part number	22041



Direction arrows are printed on the fiber optic cables for better distinction. These indicate the beam direction of the light.



6.3.3 Fiber Optic Cable Coupling

Coupling

Description	The MOST fiber optic cable can be connected to other HFBR connectors with the included HFBR coupling. For this, the fiber ends are just stuck into the couplings. To release the connection, just pull out the connectors.
Part number	22042



6.4 FlexRay


6.4.1 FRcable Set

Description	Cable set for FlexRay incl.: ▶ 1x FRcable A ▶ 1x FRcable AB ▶ 2x FRterm
Temp. range	Fixed installation: -20 °C ...+60 °C Flexible use: 0 °C ...+50 °C
Min. bending radius	Fixed installation: 20 mm
Part number	05062

6.4.2 FRcable A

Description	Cable for connection of a FlexRay Interface to the FlexRay bus (Channel A)
Length	1 m
Connectors	2x D-SUB9 connectors (female)
Temp. range	Fixed installation: -20 °C ...+60 °C Flexible use: 0 °C ...+50 °C
Min. bending radius	Fixed installation: 20 mm
Properties	Provides only channel A at the FlexRay interface
Part number	Included in FRcable Set (part number 05062)


Setup

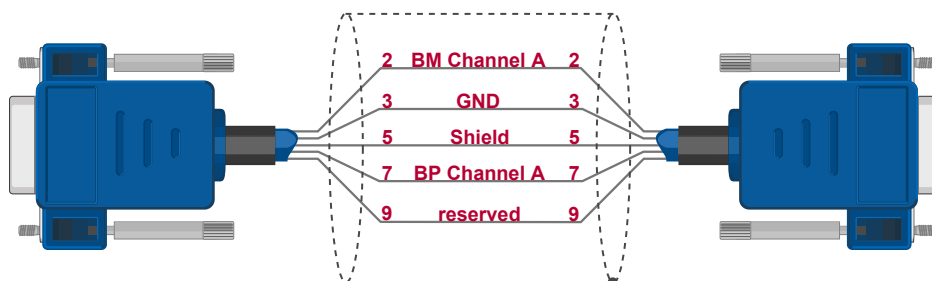

6.4.3 FRcable AB

Description	Cable for connection of a FlexRay Interface to the FlexRay bus (Channel A and B)
Length	1 m
Connectors	3x D-SUB9 connectors (female)
Temp. range	Fixed installation: -20 °C ...+60 °C Flexible use: 0 °C ...+50 °C
Min. bending radius	Fixed installation: 20 mm
Properties	Provides channel A and B at the FlexRay interface. The pin assignment of both single ended connectors is identical and suitable for replacement of an existing FlexCard configuration.
Part number	Included in FRcable Set (part number 05062)


Setup

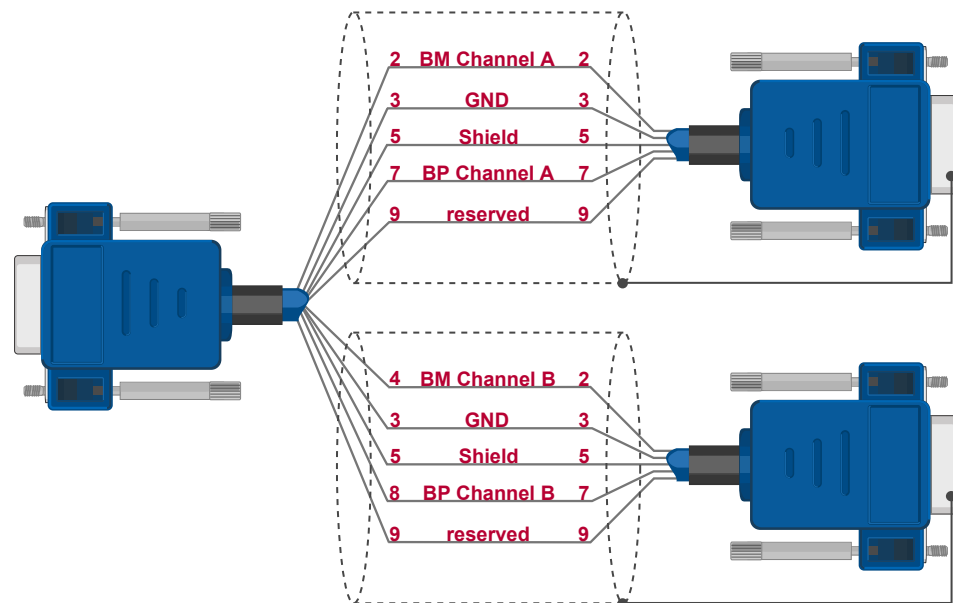

6.4.4 FRterm

Description	FlexRay adapter for termination of a FlexRay cluster (channel A and B). Pin assignment suited for VN3300/VN3600/VN7600/VN8970.
Rated voltage	300 V
Operating temp.	-25 °C ... +105 °C
Connectors	1x D-SUB9 connector (female) 1x D-SUB9 connector (male)
Properties	2x 100 ohm terminating resistor
Part number	05057

Setup

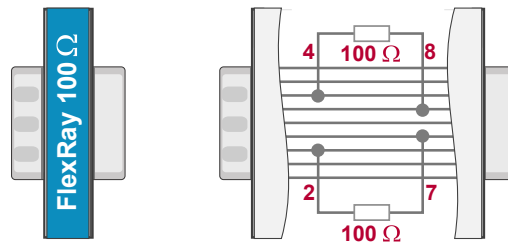


6.4.5 FR/CANcable 2Y

Y cable

Description	Y cable for Vector FR/CAN interfaces with D-SUB9 double assignment (e. g. VN7610). Splits the double assignment into two separate D-SUB9 connectors.
Length	0.3 m
Connectors	1x female D-SUB9 connector 2x male D-SUB9 connectors
Temp. range	Fixed installation: -20 °C ...+60 °C Flexible use: 0 °C ...+50 °C
Min. bending radius	Fixed installation: 20 mm
Part number	05099

Setup

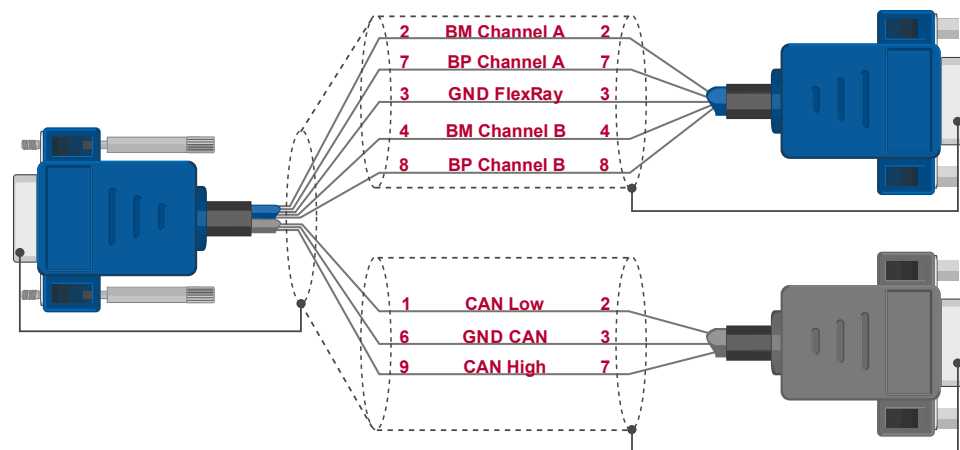


6.5 OBDcables

6.5.1 OBDcable CAN

Connection cable

Description	OBD-II to D-SUB9 cable for CAN High-Speed
Length	2 m
Connectors	1x 16-pin OBD-II connector (male), type A (12 V) 1x D-SUB9 (female)
Temp. range	Fixed installation: -20 °C ...+80 °C Flexible use: -5 °C ...+50 °C
Min. bending radius	Fixed installation: 63.0 mm Flexible use: 94.5 mm
Part number	22089

Setup

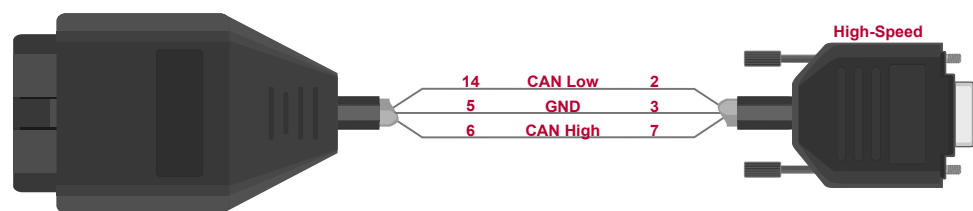


6.5.2 OBDcable OEM GM

Connection cable

Description	OBD-II to D-SUB9 cable (GM specific layout)
Length	2 m
Connectors	1x 16-pin OBD-II connector (male), type A (12 V) 2x D-SUB9 (female)
Part number	22247

Setup

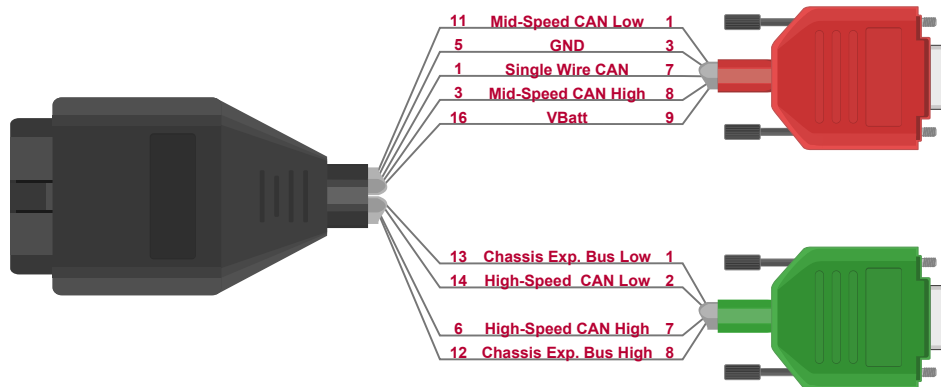


Example of usage

The OBDcable OEM GM is designed for usage with VN1630/VN1630A. Please use the following piggyback configuration:

- ▶ CH1: Single Wire CAN, e. g. CANpiggy 7356cap
- ▶ CH2: CAN High-Speed, e. g. CANpiggy 1051cap

Connect the ODBcable OEM GM as follows:

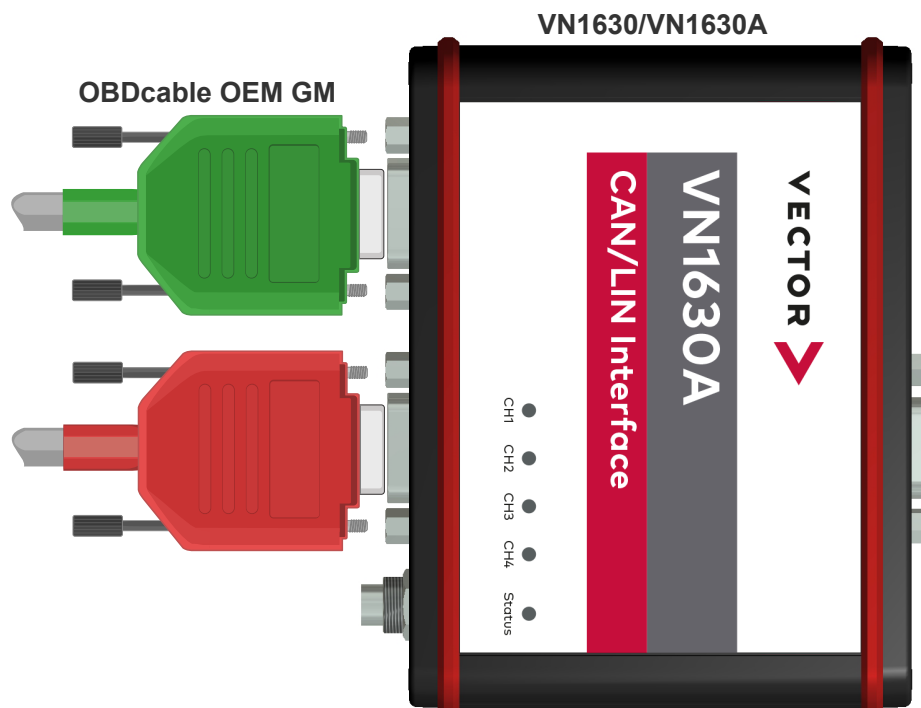


6.5.3 OBDcable OEM01

Connection cable

Description	OBD-II to D-SUB9 cable (for BMS, HS, IMS)
Length	2 m
Connectors	1x 16-pin OBD-II connector (male), type A (12 V) 3x D-SUB9 (female)
Temp. range	Fixed installation: -20 °C ... +80 °C Flexible use: -5 °C ... +70 °C
Min. bending radius	Fixed installation: 24.4 mm Flexible use: 61.0 mm
Part number	22071

Setup

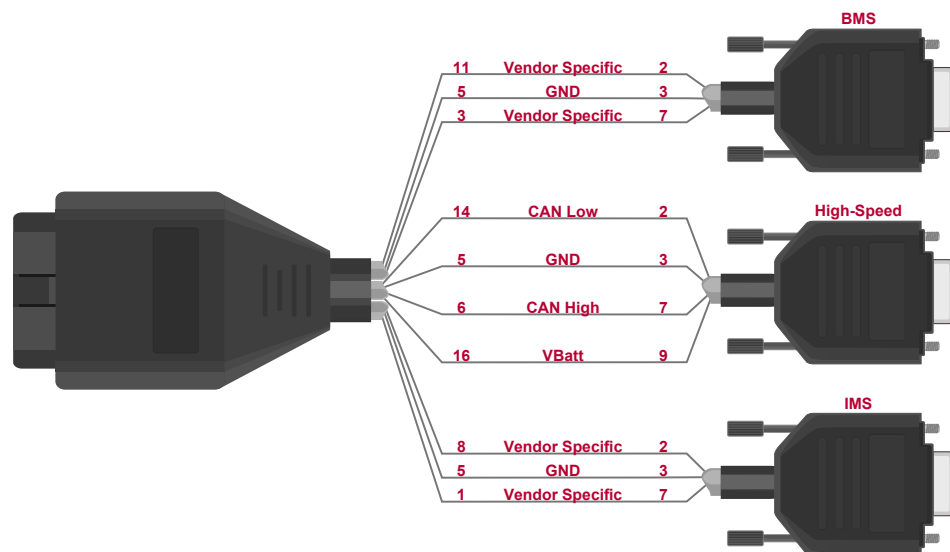

6.5.4 OBDcable DoIP/CAN B1

Connection cable

Description	OBD-II to DoIP and CAN connection cable for VX0312
Length	Approx. 1.2 m (overall length)
Connectors	1x 16-pin OBD-II connector (male), type B (24 V) 1x 2-pin LEMO connector (male) 1x RJ45
Temp. range	Fixed installation: -40 °C ... +80 °C Flexible use: -30 °C ... +80 °C
Min. bending radius	repeated: 8 cm (8 x 10mm +/-0.2) single: 4 cm (4 x 10mm +/-0.2)
Part number	22547



Pin assignments

OBD-II	RJ45	LEMO	Assignment
1/2	-	-	Not connected
3	3	-	100BaseT RX+
4	-	-	Chassis GND
5	-	Housing	Signal GND (CAN, DoIP activation line)
6	-	1	CAN High-Speed High
7	-	-	LIN/K-Line Data (not used)
8	-	-	DoIP Activation Line (connected via resistor to OBD-II pin 16)
9/10	-	-	Not connected
11	6	-	100BaseT RX-
12	1	-	100BaseT TX+
13	2	-	100BaseT TX-
14	-	2	CAN High-Speed Low
15	-	-	Not connected
16	-	-	VBatt, permanent positive voltage (connected via resistor to OBD-II pin 8)



Note

The pin assignment of the OBD-II connector is according to option #1 ISO/DIS 13400-4:2015-07.

**Note**

Please note that pin 8 and 16 of the OBDcable are connected via a resistor. Connecting the cable to the vehicle will wake up the diagnostic gateway which may be in sleep mode.

**WARNING!**

To protect against hazardous situations, the equipment (cable and Vector device) must be connected only to power supplies providing limited energy. This can be achieved by using slow blow fuses or equivalent. The specific voltage and current ranges of the connected Vector device must be taken into account.

6.6 USB Cables and Hub

6.6.1 USB Cable 2.0

Technical data

Description	Standard USB 2.0 cable
Length	approx. 1.8 m
Rated voltage	30 V
Min. bending radius	30.0 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-A 1x connector Type-B
Part number	05011



6.6.2 USB Cable 2.0 (C-B, 1.8m)

Technical data

Description	Standard USB 2.0 cable
Length	approx. 1.8 m
Rated voltage	30 V
Min. bending radius	28.2 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-C 1x connector Type-B
Part number	05215



6.6.3 USB Cable 3.0 (A-B, 1.8m)

Technical data

Description	Standard USB 3.0 cable
Length	approx. 1.8 m
Rated voltage	30 V
Operating temp.	-10 °C ... +60 °C
Connectors	1x connector Type-A 1x connector Type-B
Max. data rate	5 Gbit/s
Part number	05092



6.6.4 USB Cable 3.0 (Type-B Conn. with Screws)

Technical data

Description	USB 3.0 cable
Length	approx. 1.8 m
Rated voltage	30 V
Min. bending radius	33.0 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-A 1x connector Type-B (with screws)
Max. data rate	5 Gbit/s
Part number	05113



6.6.5 USB Cable 3.1 Type A-C (Dual Screw Lock)

Technical data

Description	USB 3.1 cable
Length	approx. 1.8 m
Rated voltage	30 V
Min. bending radius	27.0 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-A 1x connector Type-C with screws
Max. data rate	5 Gbit/s
Part number	05140



6.6.6 USB Cable 3.1 Type C-C (Dual Screw Lock)

Technical data

Description	USB 3.1 cable
Length	approx. 1.8 m
Rated voltage	30 V
Min. bending radius	28.8 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-C 1x connector Type-C with screws
Max. data rate	5 Gbit/s
Part number	05141



6.6.7 USBcable 3.2 Gen 2 C-C SDSL

Technical data

Description	USB 3.2 cable. This cable is primarily intended for use with the USB hub. SDSL: Single-sided Dual Screw Lock
Length	approx. 1.5 m
Rated voltage	30 V
Min. bending radius	28.8 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-C 1x connector Type-C with screws
Max. data rate	10 Gbit/s
Part number	05227



6.6.8 USBcable 3.2 Gen 2 C-C DDSL

Technical data

Description	USB 3.2 cable. This cable is primarily intended for use with the USB hub. DDSL: Double-sided Dual Screw Lock
Length	approx. 1.5 m
Rated voltage	30 V
Min. bending radius	28.8 mm
Max. operating temp.	80 °C
Connectors	2x connector Type-C with screws
Max. data rate	10 Gbit/s
Part number	05226



6.6.9 USBcable 3.2 Gen 2 C-B DDSL

Technical data

Description	USB 3.2 cable. This cable is primarily intended for use with the USB hub. DDSL: Double-sided Dual Screw Lock
Length	approx. 1.5 m
Rated voltage	30 V
Min. bending radius	27.0 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-B 1x connector Type-C with screws
Max. data rate	10 Gbit/s
Part number	05228



6.6.10 USBadapter 3.2 Gen 1 C-A SDSL

Technical data

Description	USB 3.2 adapter SDSL: Single-sided Dual Screw Lock
Length	approx. 0.1 m
Rated voltage	30 V
Min. bending radius	27.0 mm
Max. operating temp.	80 °C
Connectors	1x connector Type-A (female) 1x connector Type-C with screws
Max. data rate	10 Gbit/s
Part number	05229



6.6.11 USB 3.2 Gen2x1 Hub

Technical data

Description	USB 3.2 Gen2x1 hub with one USB Type-A and three USB Type-C downstream ports for secure data transfer at high speeds of up to 10 Gbit/s. With metal housing and mounting equipment. User manual included in delivery.
Ports	3x USB Type-C port with up to 3 A @ 5 V - cable fixation according to USB Type-C Locking Connector Specification 1x USB Type-A port with up to 1.5 A @ 5 V - cable fixation according to USB3 Vision standard One USB Type-C upstream port supporting up to 10 Gbit/s.
Power supply	Input range: - typ.: 9...24 V, up to 60 W - max.: 9...26.4 V, up to 60 W 1x DC coaxial connector 5.5 mm x 2.1 mm - Recommended: part no. 05233 (see section Power Supply 24V/2.5A DC Coaxial Plug on page 164) 1x Terminal block
Part number	05225



Terminal block

Connector	Description
V+	Power supply plus (typ. 9...24 V, up to 60 W)
V-	Power supply minus (no PE/FG!)
G	System ground



WARNING!

To avoid damage to your devices and equipment, please note that **V-** must not be connected to AC Protective Earth (PE) or Functional Ground (FG)!



WARNING!

When using the USB 3.2 Gen2x1 Hub in a vehicle, an electrically isolated power supply must be used!

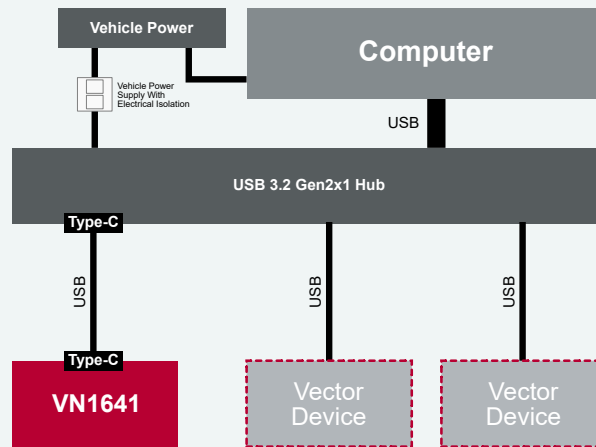


Figure 32: Example with VN1641



Note

The USB 3.2 Gen2x1 hub is a self-powered hub. To avoid draining the battery (e. g. of a car or laptop), the hub is completely shut down by unplugging the USB host connection cable or the power adapter. This is different from typical consumer (bus-powered) hubs.

6.7 Miscellaneous


6.7.1 Cable Binder 3pol Connector with Pigtail

All-purpose cable

Description	Connection cable for time synchronization at Vector devices
Length	1.5 m
Connectors	1x female 3-pin Binder connector (type 711) 3x stripped wires
Temp. range	Fixed installation: -25 °C ...+70 °C Flexible use: -5 °C ...+70 °C
Min. bending radius	Fixed installation: 16.8 mm Flexible use: 42.0 mm
Part number	30011



 Setup



WARNING!


To protect against hazardous situations, the equipment (cable and Vector device) must be connected only to power supplies providing limited energy. This can be achieved by using slow blow fuses or equivalent. The specific voltage and current ranges of the connected Vector device must be taken into account.

6.7.2 Power Sync Cable 2xBinder <> Banana Plugs

Power cable

Description	Power cable with hardware synchronization capability for Vector devices (requires Vector devices with hardware synchronization support)
Length	1.5 m
Connectors	2x female 3-pin Binder connector (type 711) 2x banana plugs (4 mm)
Part number	05123

Setup

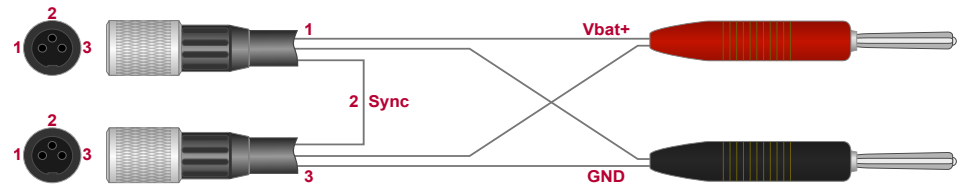

WARNING!

To protect against hazardous situations, the equipment (cable and Vector device) must be connected only to power supplies providing limited energy. This can be achieved by using slow blow fuses or equivalent. The specific voltage and current ranges of the connected Vector device must be taken into account.

6.7.3 Breakout Box D62Y9

Breakout box

Description	Breakout box for VN7570 and VN7572 (requires VNcable DSUB62 or VNcable DSUB62 A)
Dimensions	165 mm x 52 mm x 69 mm (W x H x D), incl. rubber feet and connectors
Weight	580 g
Connectors	1x D-SUB62 (female) 8x D-SUB9 (male) 1x D-SUB15 (female)
Properties	Can be mounted with 4x M4 screws
Part number	05090



CH1...CH8

Assignment for Piggybacks					Assignment for On-board CAN				
D-SUB62				D-SUB9	D-SUB62				D-SUB9
CH1	CH2	CH3	CH4	CH1...CH4	CH5	CH6	CH7	CH8	CH5...CH8
45	47	50	53	(1)*	-	-	-	-	(1) N.C.
22	3	28	9	(2)*	12	13	14	15	(2) CAN Low
1	25	7	31	(3)*	54	55	56	57	(3) GND
23	4	29	10	(4)*	-	-	-	-	(4) N.C.
6	6	6	6	(5)*	6	6	6	6	(5) Shield
2	26	8	32	(6)*	-	-	-	-	(6) N.C.
24	5	30	11	(7)*	33	34	35	36	(7) CAN High
43	27	48	51	(8)*	-	-	-	-	(8) N.C.
44	46	49	52	(9)*	-	-	-	-	(9) N.C.

* Depends on the inserted piggyback in VN7570/VN7572.

N.C. Not connected

CH9

Assignment for IOpiggy 8642					
D-SUB62	D-SUB15	Pinout 1	Pinout 2	Pinout 3	Pinout 4
16	9	Digital In 1	Digital Out 1 ¹	Digital Out 1 ²	-
17	10	Digital In 3	Digital Out 3 ¹	Digital Out 3 ²	-
18	11	Digital In 5	Digital Out 4b ³	-	-
19	12	Digital In 7	Digital Out 5b ³	-	-
20	13	Digital GND			
37	1	Digital In 0	Digital Out 0 ¹	Digital Out 0 ²	PWM 1
38	2	Digital In 2	Digital Out 2 ¹	Digital Out 2 ²	-
39	3	Digital In 4	Digital Out 4a ³	-	-
40	4	Digital In 6	Digital Out 5a ³	-	-
41	5	PWM 0	Capture	-	-
58	6	Analog GND			
59	14	Analog In 0	Analog Out 0 ¹	-	-
60	7	Analog In 1	Analog Out 1 ¹	-	-
61	15	Analog In 2	-	-	-
62	8	Analog In 3	-	-	-

¹ Push-Pull

² Open-Drain

³ a/b line: switched by PhotoMOS relais, external signal at a is switched to b.

6.7.4 VNcable DSUB62

Breakout box cable

Description	Connection cable with D-SUB62 connectors for Breakout Box D62Y9, VN7570 and VN7572
Length	0.5 m (cable only) 0.6 m (overall length)
Connectors	1x D-SUB62 (male) 1x D-SUB62 (female)
Temp. range	-20 °C ... +80 °C
Min. bending radius	Fixed installation: 40 mm Flexible use: 100 mm
Part number	05087



6.7.5 VNcable DSUB62 A

Breakout box cable

Description	Connection cable with D-SUB62 connectors for Breakout Box D62Y9, VN7570 and VN7572
Length	1.2 m (cable only) 1.3 m (overall length)
Connectors	1x D-SUB62 (male) 1x D-SUB62 (female)
Temp. range	-20 °C ... +80 °C
Min. bending radius	Fixed installation: 40 mm Flexible use: 100 mm
Part number	05093



6.7.6 VNcable DSUB62 B

Connection cable

Description	Connection cable with D-SUB62 connector and open end
Length	2 m (overall length)
Connectors	1x D-SUB62 (female) 62x wires
Temp. range	-20 °C ...+80 °C
Min. bending radius	Fixed installation: 40 mm Flexible use: 100 mm
Part number	05095



Pin assignment


	Pin	Color		Pin	Color
TP	1	dark brown	TP	19	grey
	44	brown-white		40	grey-black
TP	2	red	TP	20	grey-red
	45	red-black		41	blue-grey
TP	3	red-white	TP	22	grey-yellow
	5	red-blue		24	grey-green
TP	4	orange	TP	23	white
	27	orange-black		43	white-black
TP	6	red-orange	TP	25	white-red
	62	orange-green		46	white-light blue
TP	7	orange-white	TP	26	yellow-white
	49	grey-white		47	white-light green
TP	8	yellow	TP	28	pink
	50	yellow-black		30	pink-black
TP	9	red-yellow	TP	29	pink-red
	11	yellow-blue		48	pink-blue
TP	10	yellow-white	TP	31	pink-white
	51	light yellow-black		52	pink-yellow
TP	12	green	TP	32	light green
	33	green-black		53	light green-black
TP	13	green-white	TP	54	light green-yellow
	34	light green-blue		55	light green-green
TP	14	green-blue	TP	56	light blue
	35	light green-red		57	light blue-black
TP	15	blue	TP	58	light blue-red
	36	blue-white		59	light blue-blue
TP	16	blue-red	TP	60	light blue-yellow
	37	violet-red		61	light blue-green
TP	17	violet		21	not connected
	38	violet-white		42	not connected
TP	18	violet-green			
	39	violet-blue			

TP = twisted pair

6.7.7 VNcable D62Y9

Y cable

Description	Adapter cable for VN7570 and VN7572
Length	approx. 0.5 m (overall length) approx. 0.4 m without connectors
Connectors	1x D-SUB62 (female) 1x D-SUB15 (female) 8x D-SUB9 (male)
Part number	05088

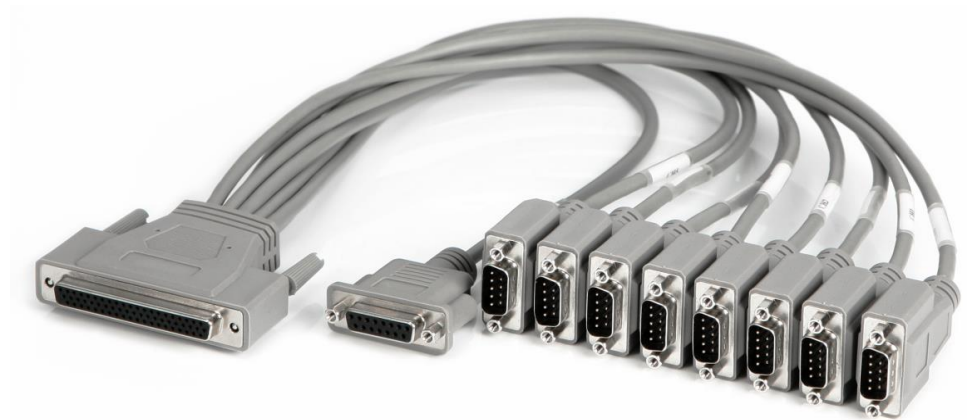

CH1...CH8

Assignment for Piggybacks					Assignment for On-board CAN				
D-SUB62				D-SUB9	D-SUB62				D-SUB9
CH1	CH2	CH3	CH4	CH1...CH4	CH5	CH6	CH7	CH8	CH5...CH8
45	47	50	53	(1)*	-	-	-	-	(1) N.C.
22	3	28	9	(2)*	12	13	14	15	(2) CAN Low
1	25	7	31	(3)*	54	55	56	57	(3) GND
23	4	29	10	(4)*	-	-	-	-	(4) N.C.
6	6	6	6	(5)*	6	6	6	6	(5) Shield
2	26	8	32	(6)*	-	-	-	-	(6) N.C.
24	5	30	11	(7)*	33	34	35	36	(7) CAN High
43	27	48	51	(8)*	-	-	-	-	(8) N.C.
44	46	49	52	(9)*	-	-	-	-	(9) N.C.

* Depends on the inserted piggyback in VN7570/VN7572.

N.C. Not connected

CH9

Assignment for IOpiggy 8642					
D-SUB62	D-SUB15	Pinout 1	Pinout 2	Pinout 3	Pinout 4
16	9	Digital In 1	Digital Out 1 ¹	Digital Out 1 ²	-
17	10	Digital In 3	Digital Out 3 ¹	Digital Out 3 ²	-
18	11	Digital In 5	Digital Out 4b ³	-	-
19	12	Digital In 7	Digital Out 5b ³	-	-
20	13	Digital GND			
37	1	Digital In 0	Digital Out 0 ¹	Digital Out 0 ²	PWM 1
38	2	Digital In 2	Digital Out 2 ¹	Digital Out 2 ²	-
39	3	Digital In 4	Digital Out 4a ³	-	-

CH9

Assignment for IOPiggy 8642					
D-SUB62	D-SUB15	Pinout 1	Pinout 2	Pinout 3	Pinout 4
40	4	Digital In 6	Digital Out 5a ³	-	-
41	5	PWM 0	Capture	-	-
58	6	Analog GND			
59	14	Analog In 0	Analog Out 0 ¹	-	-
60	7	Analog In 1	Analog Out 1 ¹	-	-
61	15	Analog In 2	-	-	-
62	8	Analog In 3	-	-	-

¹ Push-Pull

² Open-Drain

³ a/b line: switched by PhotoMOS relais, external signal at a is switched to b.

6.7.8 Vncable DSUB37

Connection cable

Description	Connection cable with D-SUB37 connectors
Length	1.5 m
Connectors	1x D-SUB37 (male) 1x D-SUB37 (female)
Part number	05097



6.7.9 VNcable 3Y

Y cable

Description	Y cable for Vector FlexRay/CAN/LIN interfaces with D-SUB15HD triple assignment. Splits a D-SUB15HD connector into three separate D-SUB9 connectors (CH A, CH B, CH C). Example: ► VN1530 - CH1/2/3 → Channel 1 (CH A), 2 (CH B) and 3 (CH C) - CH4/5/6 → Channel 4 (CH A), 5 (CH B) and 6 (CH C) The pin assignments of the D-SUB9 connectors CH A, CH B and CH C depend on the used bus transceivers inside the interface (see section D-SUB Pin Assignment on page 50).
Length	0.3 m
Rated voltage	30 V
Min. bending radius	37.8 mm
Max. operating temp.	80 °C
Connectors	1x female D-SUB15HD connector 3x male D-SUB9 connector
Part number	05122



Channel	Pin D-SUB9	Pin D-SUB15HD
A	2	14
	3	10
	7	15
	9	5
B	2	3
	3	9
	7	4
	9	13

Channel	Pin D-SUB9	Pin D-SUB15HD
C	1	2
	2	1
	3	7
	4	11
	7	6
	8	12
	9	8

**WARNING!**

This cable **cannot** be used for:

- ▶ VN1614
- ▶ VN1615

Instead, please use the VNcable 4Y (see section [VNcable 4Y](#) on page 155).

6.7.10 VNcable 4Y

Y cable

Description	Y cable for Vector CAN/LIN interfaces with D-SUB15HD fourfold assignment. Splits a D-SUB15HD connector into four separate D-SUB9 connectors (CH A, CH B, CH C, CH D). Example: ► VN1615 - CH1→ CH A - CH2→ CH B - CH3→ CH C - CH4→ CH D
Length	0.3 m
Connectors	1x female D-SUB15HD connector 4x male D-SUB9 connector
Part number	05247



Channel	Pin D-SUB9	Pin D-SUB15HD
A	2	1
	7	6
	3	7
	9	8
B	2	3
	7	4
	3	9
	9	13
C	3	10
	7	14
	2	15
D	3	2
	7	12
	2	11

**WARNING!**

This cable **cannot** be used for:


- ▶ VN1530
- ▶ VN1531
- ▶ VN1670

Instead, please use the VNcable 3Y (see section [VNcable 3Y](#) on page 153).

6.7.11 Terminal Block DSUB37

Terminal block

Description	Terminal block with 37 CAGE CLAMP® connectors to D-SUB37 (requires VNCable DSUB37)
Dimensions	102 mm x 34 mm x 85 mm
Weight	102 g
Connectors	1x row with 19 CAGE CLAMP® connectors 1x row with 18 CAGE CLAMP® connectors 1x D-SUB37 (female)
Part number	05098

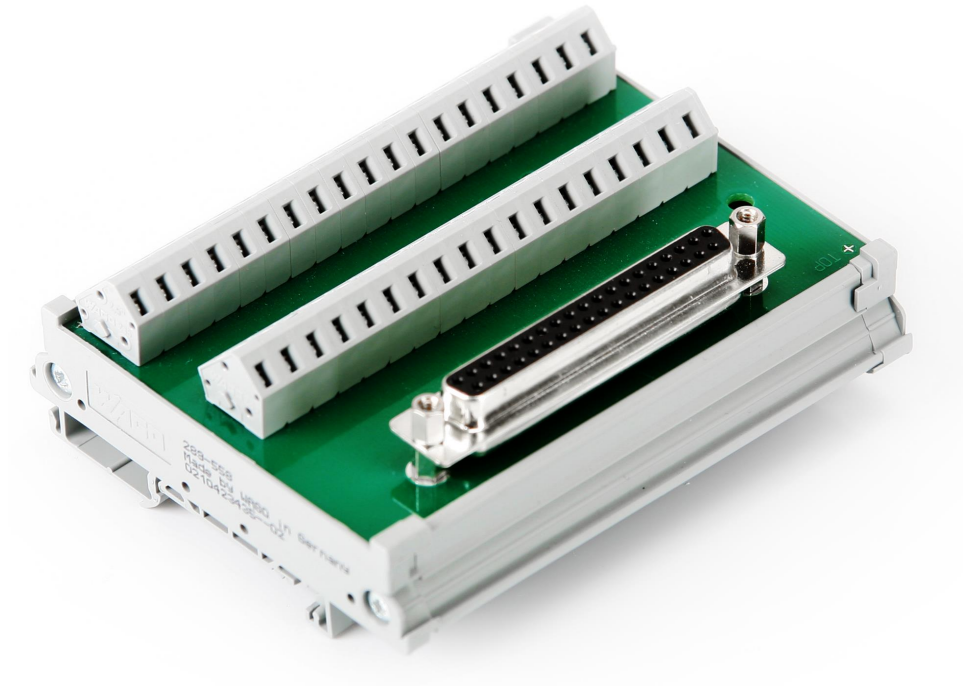


6.7.12 VX1362B CAN Cable LEMO/Banana Plugs 1.5M

Connection cable

Description	Adapter cable for Vector devices
Length	1.5 m
Connectors	1x LEMO connector (FFA.0S.302.CLAC50) 2x banana plugs (4 mm)
Part number	22258



Setup

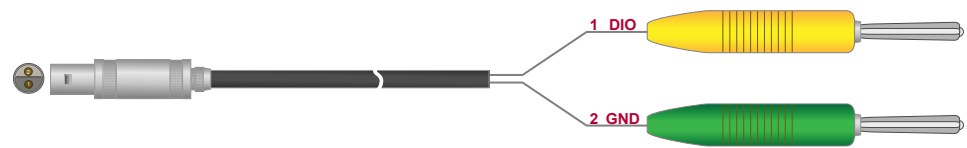

7 Power Supply

In this chapter you find the following information:

7.1 Vector Power Supply Units	160
7.1.1 Vector Power Supply 12V/1.5A	160
7.1.2 Vector Power Supply ODU Mini-Snap	161
7.1.3 Power Supply 24V/2.5A DC Coaxial Plug	164
7.1.4 Power Supply USB-C Basic	165
7.2 On-Board Power Supply	166
7.2.1 Car Power Supply Cable 12V with Binder	166
7.2.2 Cable Vehicle Input <> ODU Mini-Snap	167
7.3 Power Supply Cable	168
7.3.1 Cable Banana Plug <> Binder 3-pin	168
7.3.2 Cable Banana Plug <> ODU Mini-Snap	169
7.3.3 Power Adapter OBDII – ODU Mini Snap	169

7.1 Vector Power Supply Units

7.1.1 Vector Power Supply 12V/1.5A

Power supply unit
for Vector devices

Description	Power supply unit with 12 V and 1.5 A, with changeable adapters for USA and Europe (GB adapter on request)
Length	2 m
Input voltage	100 V ... 240 V AC (+/-10 %), 50 Hz ... 60 Hz
Connectors	1x adapter for USA 1x adapter for Europe 1x 3-pin Binder connector (type 711)
Part number	05024



7.1.2 Vector Power Supply ODU Mini-Snap

Power supply unit
for Vector devices

Description	Power supply unit with 24 V and 2.5 A. Power cord not included.
Input voltage	100 V ... 240 V AC (+/-10 %), 47 Hz ... 63 Hz
Connectors	1x Connector for Europe IEC60320 C8 1x ODU S11L0C-P02NPL0-5200
Dimensions	Housing: 114.5 mm x 49.5 mm x 33 mm (LxWxH) Cable: approx. 2 m
Part number	05068



Connection cable

Description	Connection cable for power supply unit (part number 05068)
Connectors	Type-C (CEE7/16) to IEC 60320 C7
Length	Approx. 2 m
Part number	05251



Connection cable

Description	Connection cable for power supply unit (part number 05068)
Connectors	Type-A to IEC 60320 C7
Length	Approx. 2 m
Part number	05071



Connection cable

Description	Connection cable for power supply unit (part number 05068)
Connectors	Type-G („UK“, BS1363) to IEC60320 C7
Length	Approx. 2 m
Part number	05070



Connection cable

Description	Connection cable for power supply unit (part number 05068)
Connectors	"PRC2" (Type A) to IEC60320 C7
Length	Approx. 2 m
Part number	05249



Connection cable

Description	Connection cable for power supply unit (part number 05068)
Connectors	Type-D to IEC60320 C7
Length	Approx. 1.8 m
Part number	05250



7.1.3 Power Supply 24V/2.5A DC Coaxial Plug

Technical data

Description	Power supply unit with 24 V and 2.5 A for use with USB 3.2 Gen2x1 hub (part no. 05225). Country specific AC connection cable included.
Connectors	1x Country specific AC connection cable (see below) 1x DC coaxial plug 5.5 mm x 2.1 mm
Part number	05233



Connection cable Europe

Description	Connection cable for power supply unit
Connectors	Connector for Europe
Part number	05244

Connection cable USA/Japan

Description	Connection cable for power supply unit
Connectors	Connector for USA/Japan
Part number	05115

Connection cable UK

Description	Connection cable for power supply unit
Connectors	Connector for UK
Part number	05125

Connection cable China

Description	Connection cable for power supply unit
Connectors	Connector for China
Part number	05114

7.1.4 Power Supply USB-C Basic

Power supply unit
USB Type-C

Description	This power supply delivers 3 A @ 5 V to one USB Type-C port. Other ports available that support USB Power Delivery (PD).
Connectors	1x AC: adapters for EU, US/JP, UK, CN, AU and KR included 1x DC: at least one USB Type-C
Part number	05234



7.2 On-Board Power Supply

7.2.1 Car Power Supply Cable 12V with Binder

On-board
power supply

Description	On-board power supply cable
Connectors	1x 3-pin connector (Binder type 711) 1x 12V / 24V plug
Temp. range	Fixed installation: -20 °C ...+70 °C Flexible use: -20 °C ...+70 °C
Part number	15023

**Note**

Please check the supported supply voltage range of your Vector device before using the cable with a 24V system.

7.2.2 Cable Vehicle Input <> ODU Mini-Snap

On-board power
supply

Description	On-board power supply cable
Connectors	1x ODU S11L0C-P02NPL0-5200 1x 12V / 24V plug
Temp. range	Fixed installation: -20 °C ... +70 °C Flexible use: -20 °C ... +70 °C
Part number	05076



7.3 Power Supply Cable


7.3.1 Cable Banana Plug <> Binder 3-pin

Power cable

Description	Power cable for Vector devices
Length	1.5 m
Connectors	1x female 3-pin Binder connector (type 711) 2x banana plugs (4 mm)
Temp. range	Fixed installation: -25 °C ...+70 °C Flexible use: -5 °C ...+70 °C
Min. bending radius	Fixed installation: 16.8 mm Flexible use: 42.0 mm
Part number	30012



Setup

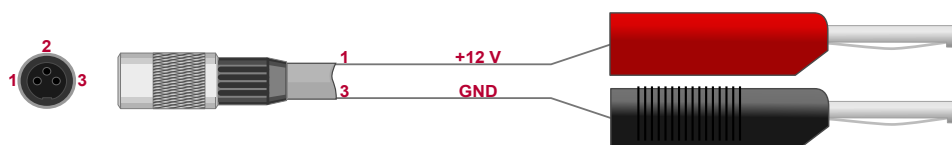

WARNING!

To protect against hazardous situations, the equipment (cable and Vector device) must be connected only to power supplies providing limited energy. This can be achieved by using slow blow fuses or equivalent. The specific voltage and current ranges of the connected Vector device must be taken into account.

7.3.2 Cable Banana Plug <> ODU Mini-Snap

ODU

Description	Power cord for Vector devices with ODU MINI-SNAP connector
Length	approx. 2 m
Connectors	1x ODU connector (type S11L0C-P02NPL0-6200) 2x bunch plugs (power supply)
Temp. range	Fixed installation: -40 °C ...+75 °C Flexible use: -40 °C ...+75 °C
Min. bending radius	Fixed installation: 15.6 mm Flexible use: 26.0 mm
Part number	05069

Cable setup



WARNING!

To protect against hazardous situations, the equipment (cable and Vector device) must be connected only to power supplies providing limited energy. This can be achieved by using slow blow fuses or equivalent. The specific voltage and current ranges of the connected Vector device must be taken into account.

7.3.3 Power Adapter OBDII – ODU Mini Snap


Connection cable

Description	OBD-II/ODU power supply cable. This cable requires an additional adapter.
Length	approx. 30 cm (overall length)
Connectors	1x 16-pin OBD-II connector (female), Type B (24 V) 1x 2-pin ODU connector (male)
Part number	05104



OBD-II Pin	Assignment	ODU Pin
16	VBatt	1
4	Chassis GND	2

Example of usage

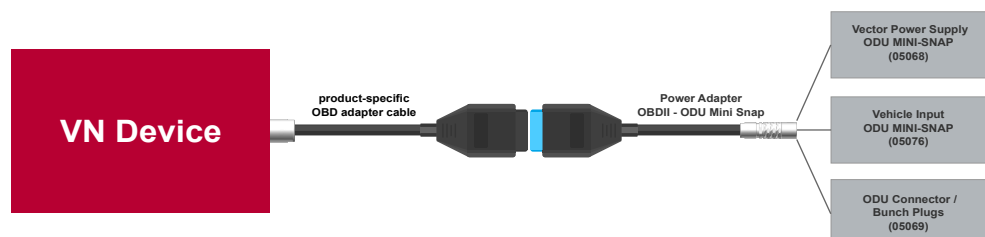

8 Time Synchronization

In this chapter you find the following information:

8.1 Time Synchronization	171
8.1.1 General Information	171
8.1.2 Software Sync	173
8.1.3 Hardware Sync	174
8.2 SYNCcables	176
8.2.1 Vector SYNCcableXL	176
8.2.2 Vector SYNCcable50	177
8.3 SYNCboxes	178
8.3.1 Multi SYNCbox External	178
8.3.2 Multi SYNCbox Internal	179
8.3.3 Multi SYNCbox Active	180

8.1 Time Synchronization

8.1.1 General Information

Time stamps and events

Time stamps are useful when analyzing incoming or outgoing data or event sequences on a specific bus.

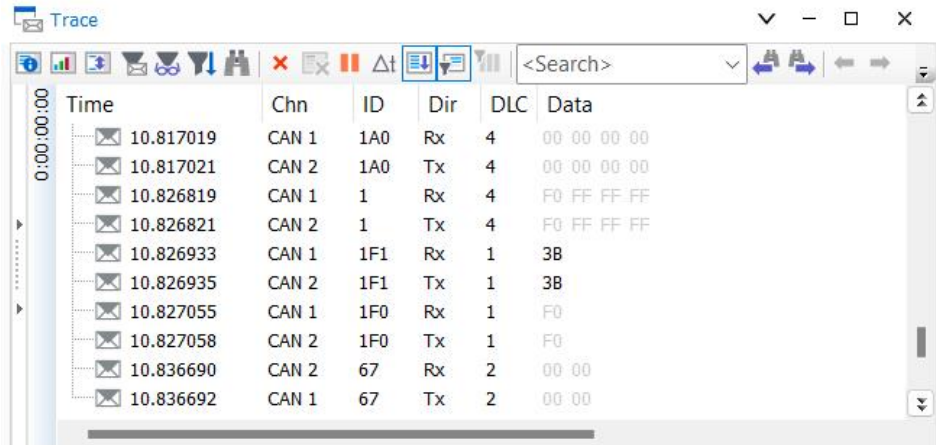


Figure 33: Time stamps of two CAN channels in CANoe

Generating time stamps

Each event which is sent or received by a Vector network interface has an accurate time stamp. Time stamps are generated for each channel in the Vector network interface. The base for these time stamps is a common hardware clock in the device.

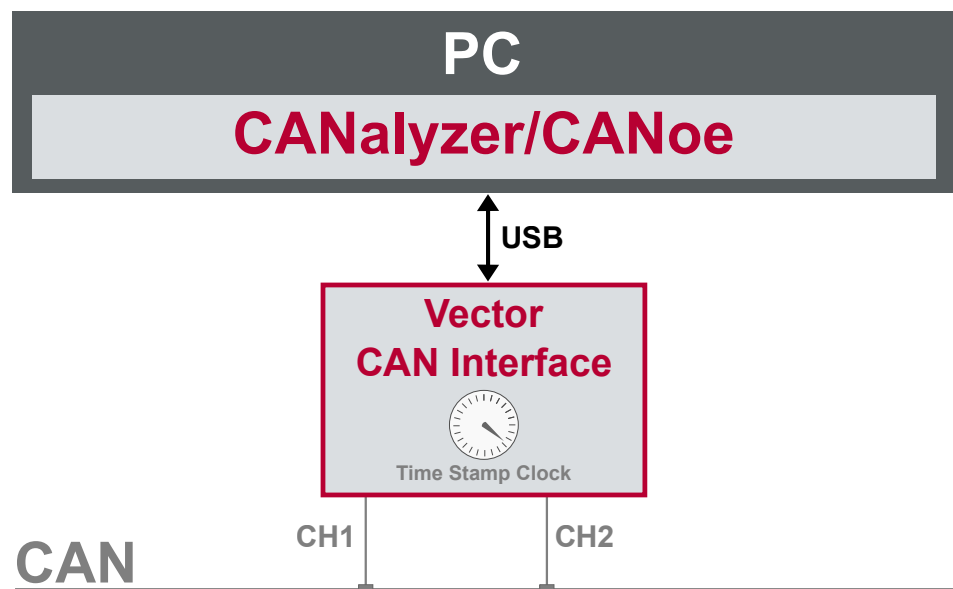


Figure 34: Common time stamp clock for each channel

If the measurement setup requires more than one Vector network interface, a synchronization of all connected interfaces and their hardware clocks is needed.

Due to manufacturing and temperature tolerances, the hardware clocks may vary in speed, so time stamps of various Vector devices drift over time.

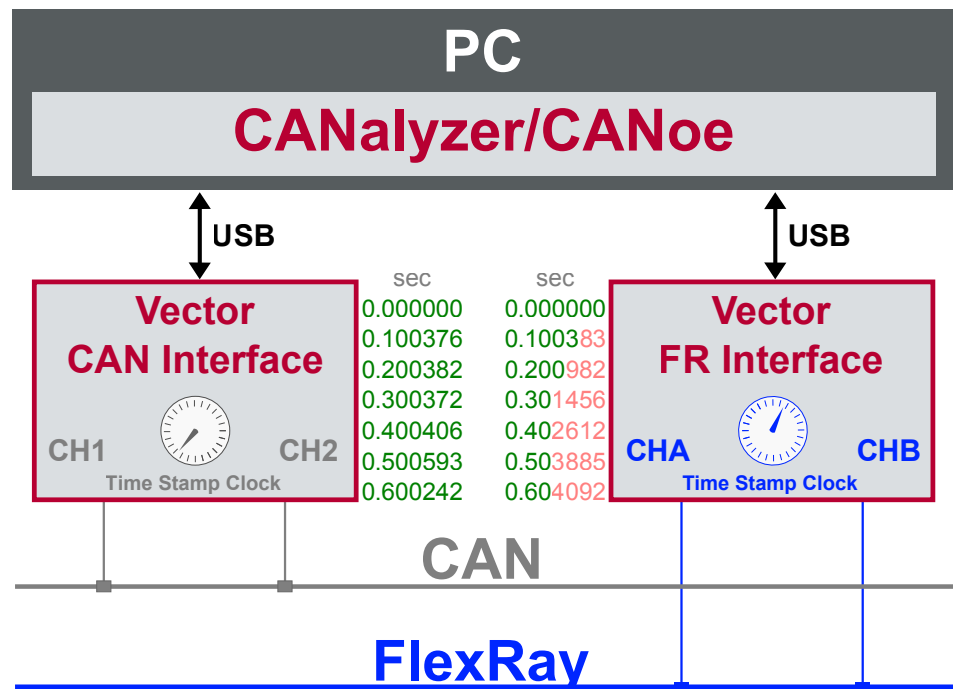


Figure 35: Example of unsynchronized network interfaces. Independent time stamps drift apart

To compensate for these time stamp deviations between the Vector network interfaces, the time stamps can be either synchronized by software, hardware, PTP or GNSS (capability depends on the Vector device).



Note

The accuracy of the software, hardware, PTP or GNSS sync depends on the interface. Further information on specific values can be found in the technical data of the respective devices.

8.1.2 Software Sync

8.1.2.1 General Information

Synchronization by software

The software time synchronization is driver-based and available for all applications without any restrictions. The time stamp deviations from different Vector network interfaces are calculated and synchronized to the common PC clock. For this purpose no further hardware setup is required.

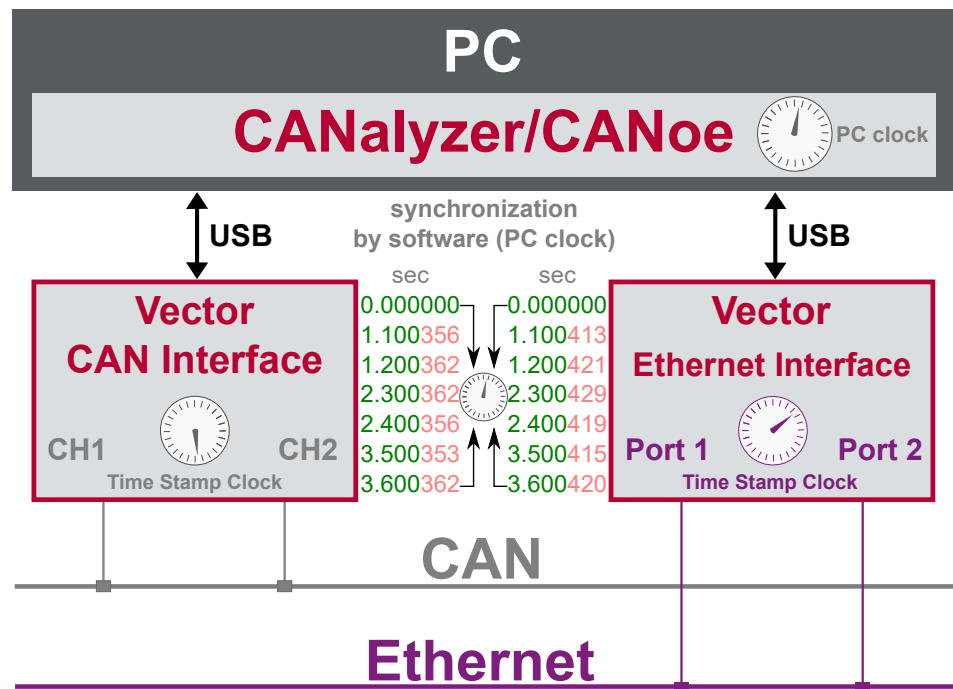


Figure 36: Time stamps of devices are synchronized to the PC clock



Note

Software time synchronization may lead to an increased latency for all connected Vector network interfaces. If a use case requires low latency, deactivate this option and use another synchronization mechanism.

8.1.2.2 Configuration

Vector Hardware Manager

Use the software synchronization if at least one device has no hardware sync connector. Also to synchronize the device clock to the computer time, use the software synchronization (legacy).

8.1.3 Hardware Sync

8.1.3.1 General Information

Synchronization by hardware

A more accurate time synchronization of multiple devices is provided by the hardware synchronization. Two Vector network interfaces can therefore be connected with the SYNCcableXL (see page 176).

In order to synchronize up to five devices at the same time, a distribution box is available (see section Multi SYNCbox External on page 178 and section Multi SYNCbox Internal on page 179).

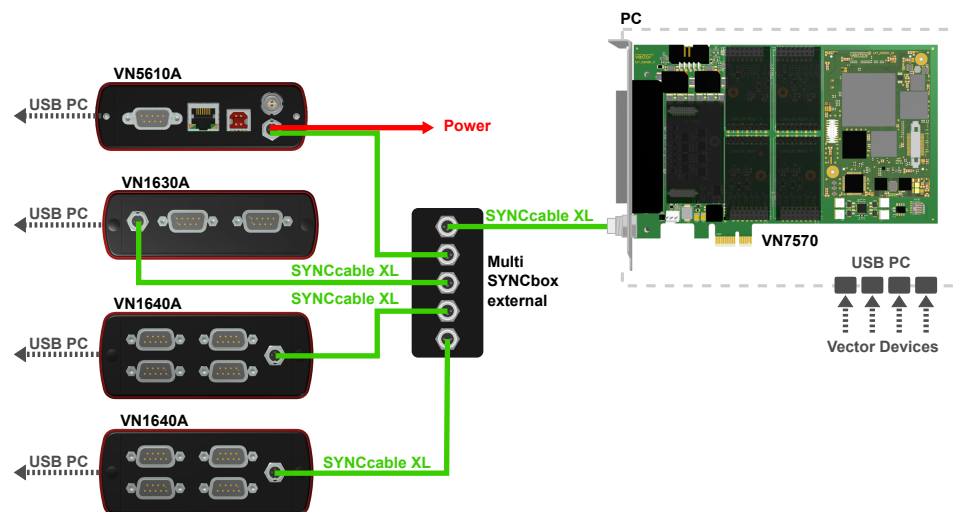


Figure 37: Example of a time synchronization with multiple devices

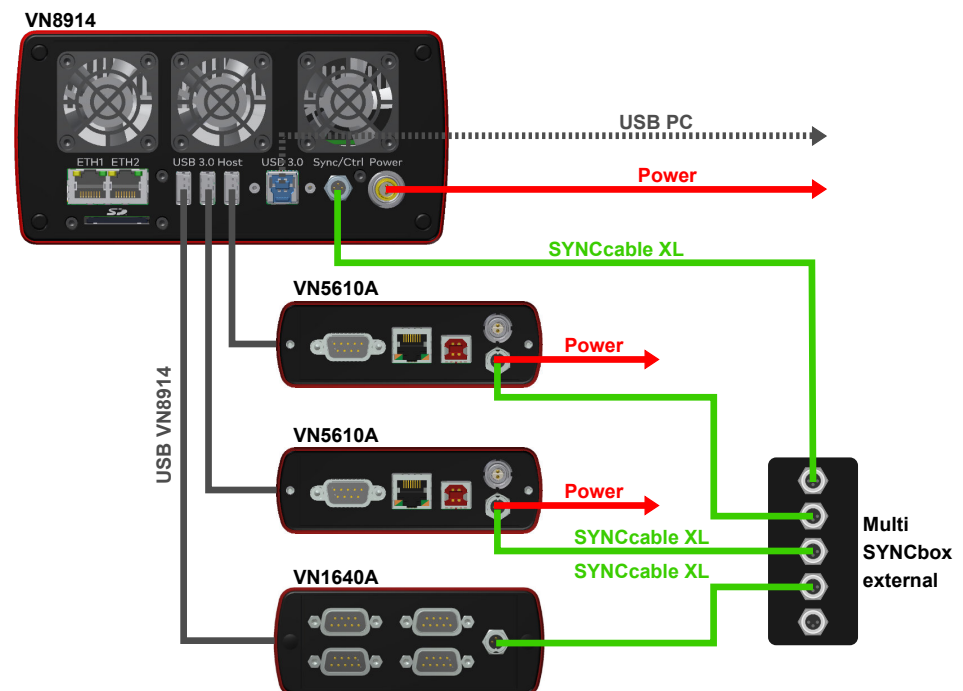


Figure 38: Example of a time synchronization with VN8914 and additional devices

At each falling edge on the sync line which is initiated by the driver, the Vector network interface generates a time stamp that is provided to the driver. This allows the driver to calculate the deviations between the network interfaces and to synchronize the time stamps to a common time base (master clock) which can be defined by the user.

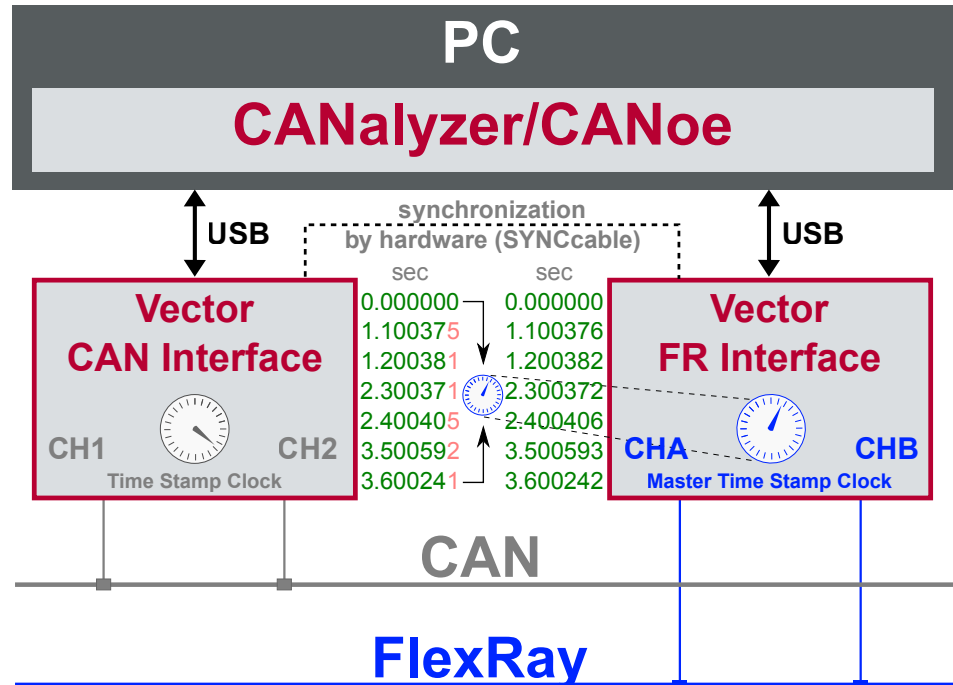


Figure 39: Time stamps are synchronized to the master clock

8.1.3.2 Configuration

Vector Hardware Manager

Use hardware synchronization if at least one device is connected with USB or PCIe to the PC and all devices are hardware sync capable. One device should be configured as master and all other devices as slaves. Therefore, all devices must be interconnected with SYNCcableXL and Multi SYNCbox external or SYNCbox active.

8.2 SYNCcables


8.2.1 Vector SYNCcableXL

Synchronization
cable

Description	Connection cable for time synchronization of Vector devices
Length	2 m
Connectors	2x female 3-pin Binder connectors (type 711)
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -5 °C ...+70 °C
Min. bending radius	Fixed installation: 16 mm Flexible use: 40 mm
Part number	05018



 Setup




8.2.2 Vector SYNCcable50

Synchronization cable

Description	Connection cable for time synchronization for Vector devices
Length	0.5 m
Connectors	2x female 3-pin Binder connectors (type 711)
Temp. range	Fixed installation: -30 °C ...+80 °C Flexible use: -5 °C ...+70 °C
Min. bending radius	Fixed installation: 16 mm Flexible use: 40 mm
Part number	05083



 Setup



8.3 SYNCboxes


8.3.1 Multi SYNCbox External

Synchronization distributor

Description	Distributor in plastic case for time synchronization. For up to five Vector devices.
Connectors	5x male 3-pin connectors (Binder type 711)
Part number	05085




Setup

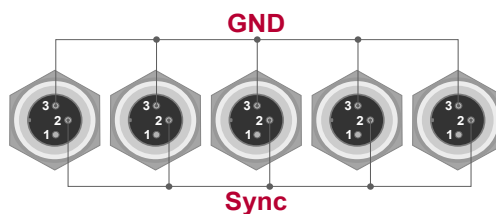

Note

Within the sync system, up to five devices can be synchronized. Cascading of multiple Multi SYNCboxes to increase the number of devices is not possible.

Example

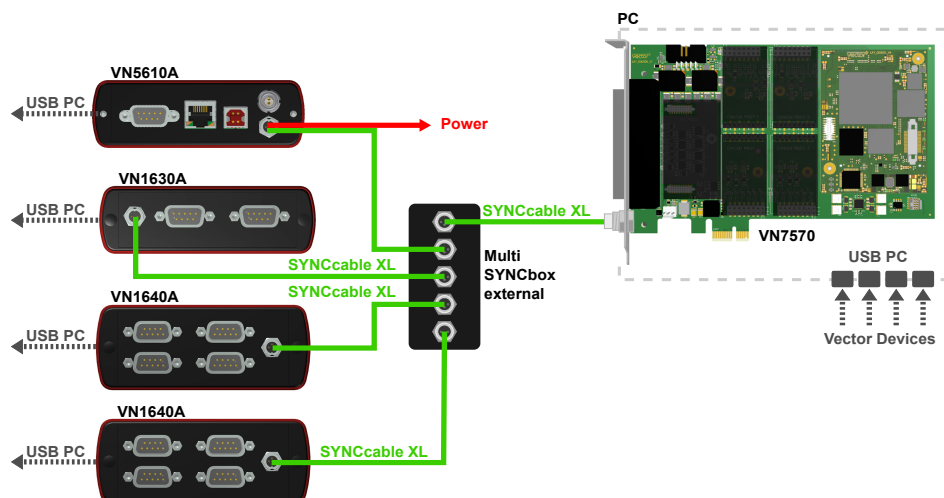


8.3.2 Multi SYNCbox Internal

Synchronization distributor

Description	Distributor in PC slot bracket for time synchronization. For up to five Vector devices.
Connectors	5x male 3-pin connectors (Binder type 711)
Part number	05084




Setup

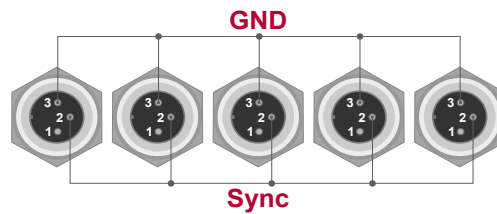

Note

Within the sync system, up to five devices can be synchronized. Cascading of multiple Multi SYNCboxes to increase the number of devices is not possible.

Example

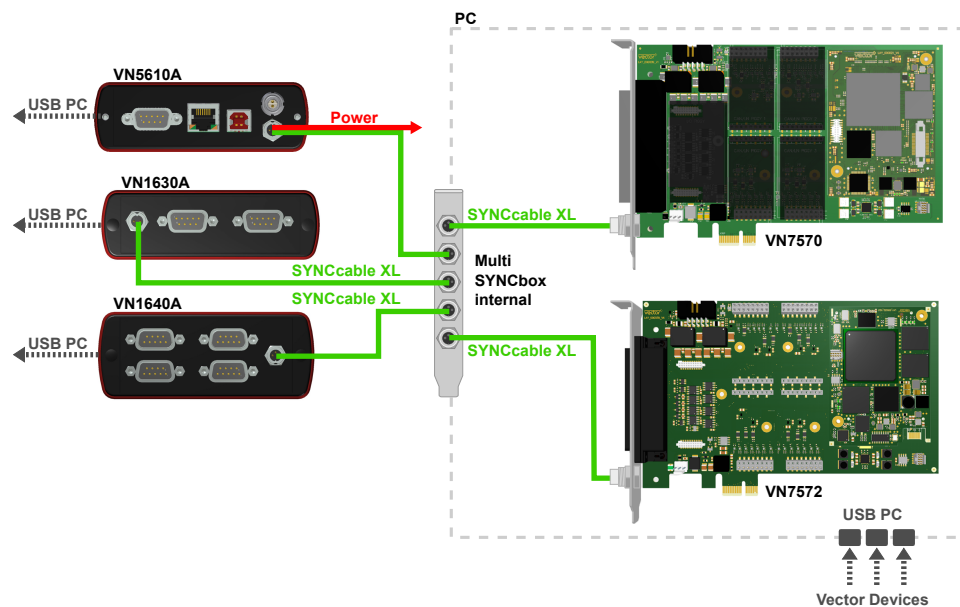

8.3.3 Multi SYNCbox Active

Synchronization distributor

Description	Active synchronization distributor in plastic case. For five or more Vector devices.
Connectors	12x male 3-pin connector (Binder type 711)
Part number	05112



SYNC in/out

Pin	Assignment
1	Not connected
2	Synchronization line
3	Ground




DC in

Pin	Assignment
1	Power supply (5 V ... 60 V DC, typ. 12 V)
2	Not connected
3	Ground



Note
Cascading of multiple Multi SYNCboxes active to increase the number of SYNC out is not possible.

Example

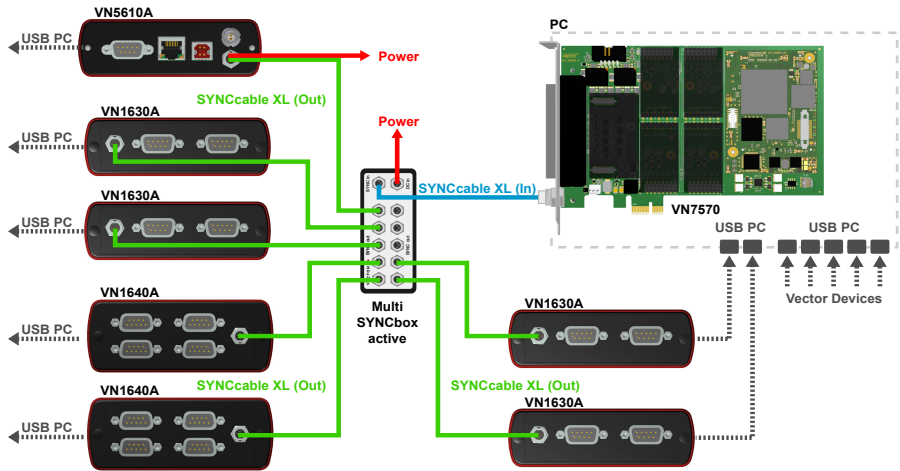

9 Miscellaneous

In this chapter you find the following information:


9.1 Mounting Equipment	182
9.1.1 VSH Cable Guard 216	182
9.1.2 VSH Cable Guard 216 Clip	185
9.1.3 VSH Connection Kit 19"	186
9.1.4 VSH Connection Kit Horizontal	188
9.1.5 VSH Connection Kit Vertical	189
9.1.6 VSH Equipment Foot Kit	190
9.1.7 VSH Mounting Flange Kit	191
9.1.8 Fix Kit 32mm Device	192
9.1.9 Fix Kit 42mm Device	193
9.1.10 Fix Kit Large Device	194
9.2 Antennas	195
9.2.1 2.4 & 5 GHz Antenna SMA-R Std.	195
9.2.2 2.4 & 5.2 GHz Antenna SMA-R Asia	195
9.2.3 5.9 GHz DSRC Antenna SMA	196
9.2.4 GNSS Antenna SMA	196
9.3 SDHC/SDXC Memory Cards	197
9.3.1 SDHC Memory Card (XQI8C016Z) 32 GB	197
9.3.2 SDXC Memory Card (GXQI8C016Z) 128GB	197
9.4 CFast Card Reader USB 3.0 (external)	198
9.5 Ser2K	198
9.6 Protection	199
9.6.1 USB Protector Type 1	199
9.6.2 Front Panel for VN8900	200
9.6.3 Protection Kit 1040	201

9.1 Mounting Equipment

9.1.1 VSH Cable Guard 216

Technical data

Description	Cable support system including eight clips for clamping single cables. For cable diameters (clamping range) from Ø 3.8 mm to Ø 6.8 mm.
Part number	05149

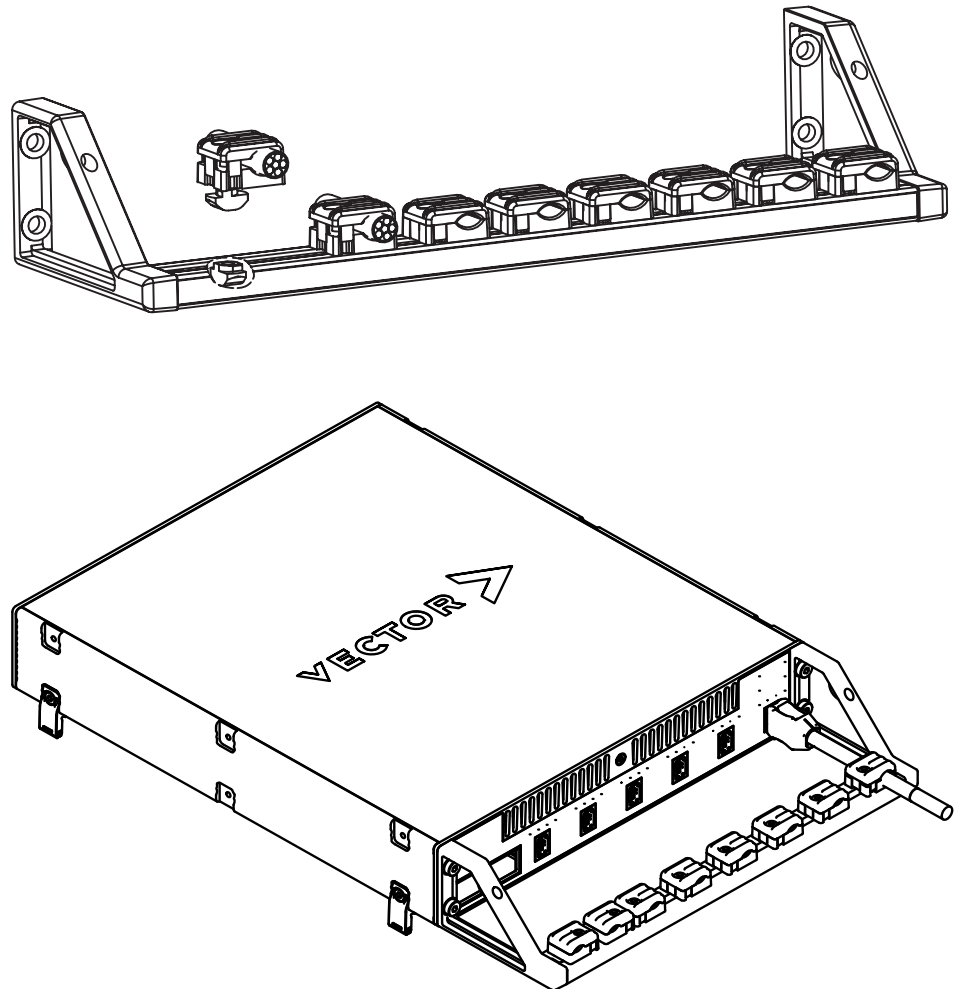


Note

The VSH Cable Guard 216 and the clips are not designed for use with VNcable 3Y.


**Step by Step Procedure**

The following steps describe the mounting of the VSH Cable Guard 216:


1. Insert the left frame into the cable rail and tighten the screw (Torx 8) with a torque of 1.4 Nm.

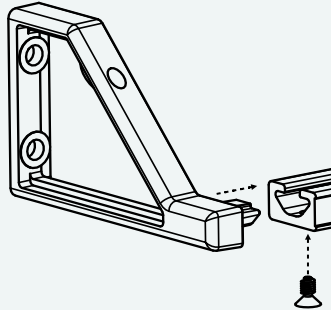


2. Repeat the steps above with the right frame.

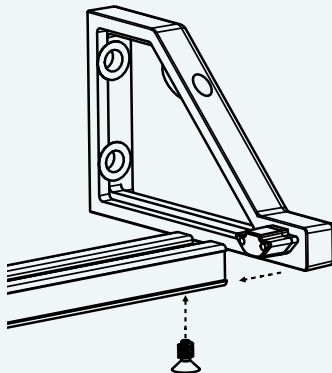


3. Attach the complete Cable Guard to the VN device and tighten it with the enclosed hexagonal screws (3 mm) and with a torque of 1.7 Nm.

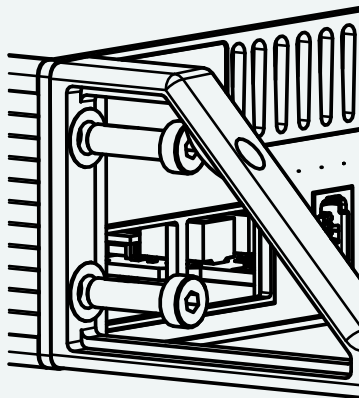


4. Repeat the steps on the other side.

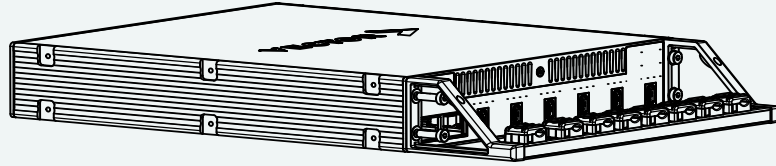


5. Lead the individual cables through the clamps and tighten the individual clamps depending on the cable (Torx 10). Tighten the screw only enough to leave a gap of 2 to 2.5 mm between the slot nut and the cable clamp.

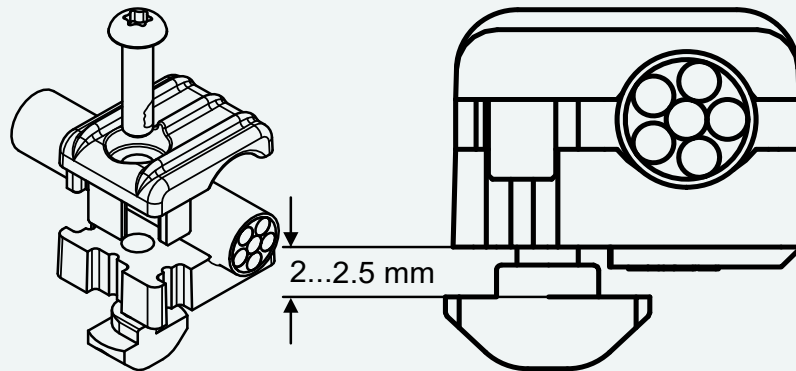

6. Now insert the individual clamps into the Cable Guard and tighten the screw completely. The slot nut will rotate 90° inside the rail and thus fix the entire clamp.

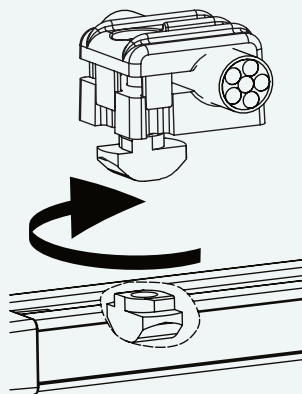



7. Repeat the steps with all other clamps.

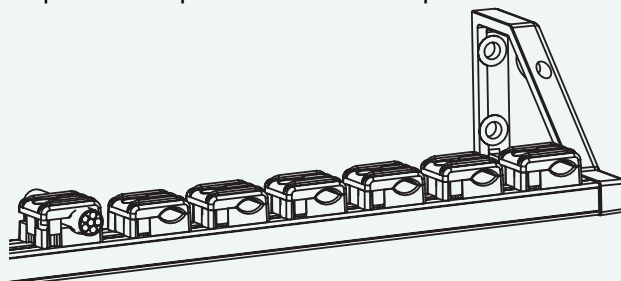

9.1.2 VSH Cable Guard 216 Clip

Technical data


Description	Set of four single clips for VSH Cable Guard 216 (see section VSH Cable Guard 216 on page 182). For single cables.
Part number	05148

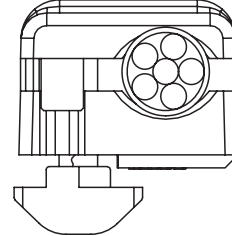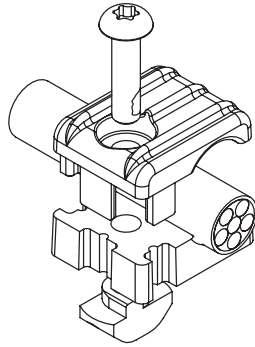

9.1.3 VSH Connection Kit 19"


Technical data

Description	Brackets for 19" rack mounting (front and back mounting plates required, see VSH Connection Kit Horizontal on page 188).
Part number	05151

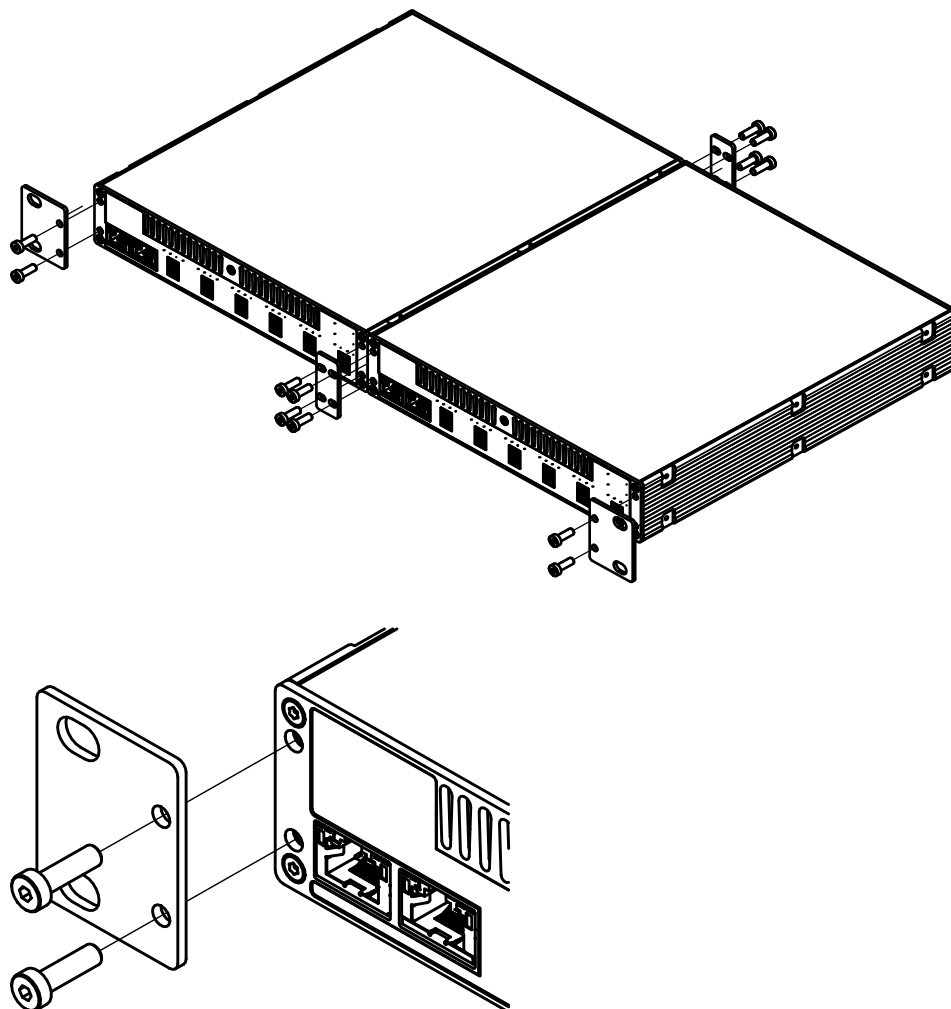

WARNING!



To avoid mechanical damage to the accessories, the unit or the installation, make sure that the two mounting brackets are always mounted in alignment (either top or bottom):

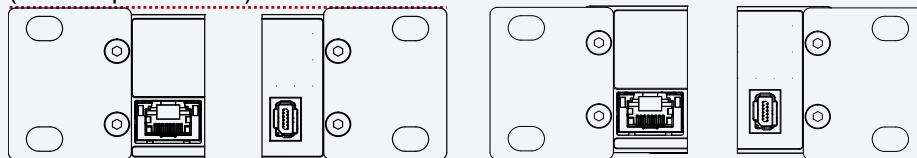



Note

For mounting two devices on top of each other, the rack brackets must be aligned accordingly. The rack brackets must not overlap between the devices!

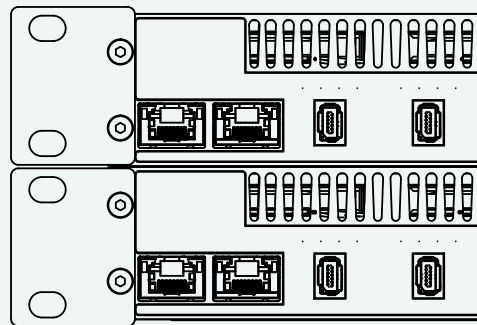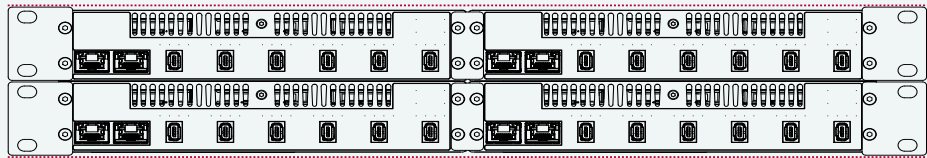


Note

- ▶ Elements may only be used for Vector devices in the Vector System Housing form factor.
- ▶ Always use both supplied elements and associated screws for mounting.
- ▶ For systems up to max. 20 kg.
- ▶ For mounting on a 19" rack, suitable screws must be selected to ensure permanent fixing according to the expected load (not included in the scope of delivery).
- ▶ In case of uncertainty and questions, please contact qualified personnel.
- ▶ Tightening torque: hexagon socket 3 mm, 1.7 Nm.

9.1.4 VSH Connection Kit Horizontal

Technical data

Description	Mounting plates for connecting two devices side by side (horizontally). The mounting is done on the front and back side of the devices.
Part number	05153

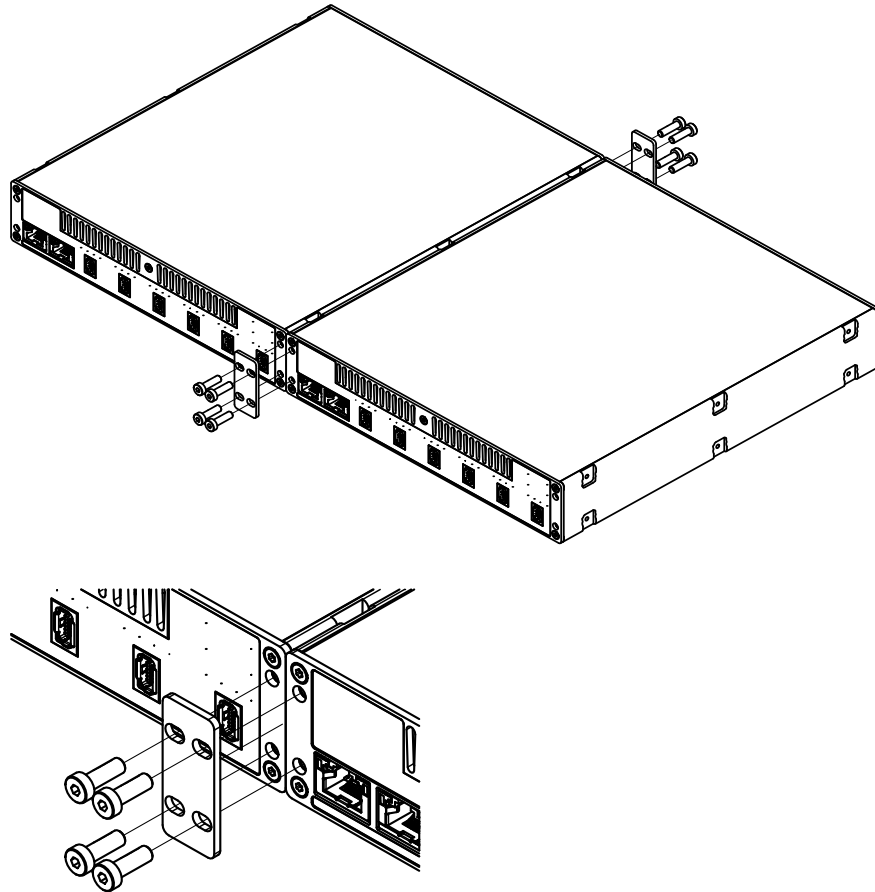


Note

- ▶ Elements may only be used for Vector devices in the Vector System Housing form factor.
- ▶ Always use both supplied elements and associated screws for mounting.
- ▶ For systems up to max. 20 kg.
- ▶ In case of uncertainty and questions, please contact qualified personnel.
- ▶ Tightening torque: hexagon socket 3 mm, 1.7 Nm.

9.1.5 VSH Connection Kit Vertical

Technical data

Description	Four small mounting plates for connecting two devices on top of each other (vertically). Mounting is done on the left and right side of the housing.
Part number	05152

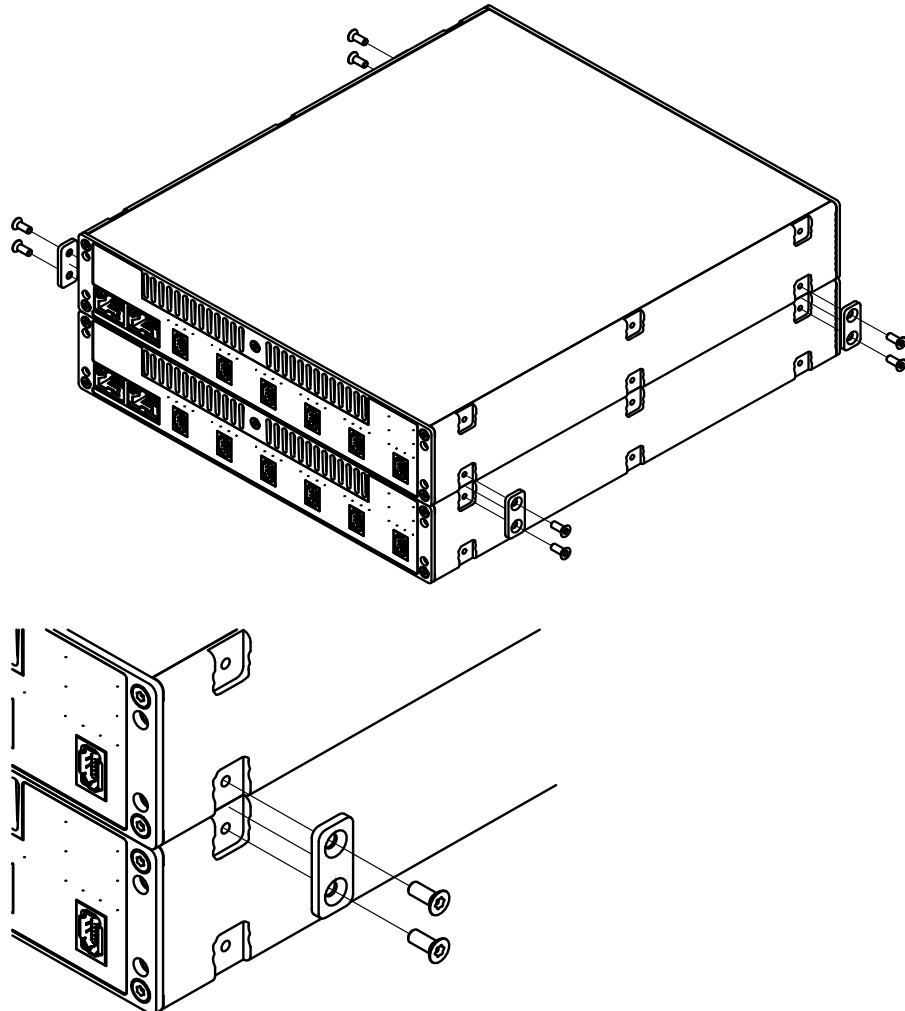


Note

- ▶ Elements may only be used for Vector devices in the Vector System Housing form factor.
- ▶ Always use all supplied elements and associated screws for mounting.
- ▶ For systems up to max. 20 kg.
- ▶ In case of uncertainty and questions, please contact qualified personnel.
- ▶ Tightening torque: Torx T10, 1.2 Nm.

9.1.6 VSH Equipment Foot Kit

Technical data

Description	Four spare mounting feet.
Part number	05150

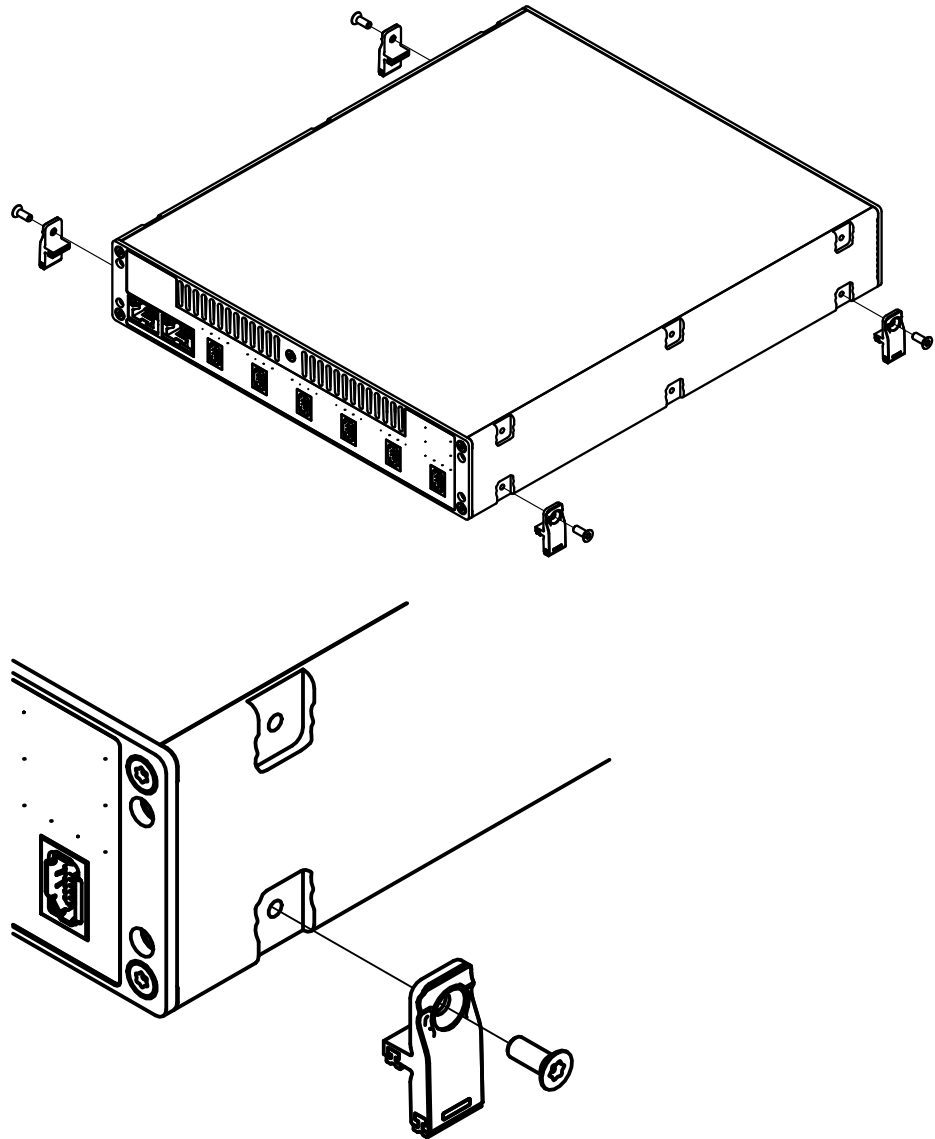


Note

- ▶ Elements may only be used for Vector devices in the Vector System Housing form factor.
- ▶ Always use all supplied elements and associated screws for mounting.
- ▶ For systems up to max. 20 kg.
- ▶ In case of uncertainty and questions, please contact qualified personnel.
- ▶ Tightening torque: Torx T10, 0.5...0.9 Nm.

9.1.7 VSH Mounting Flange Kit

Technical data

Description	Four mounting brackets. Allows fixing the device to a suitable surface.
Part number	05147

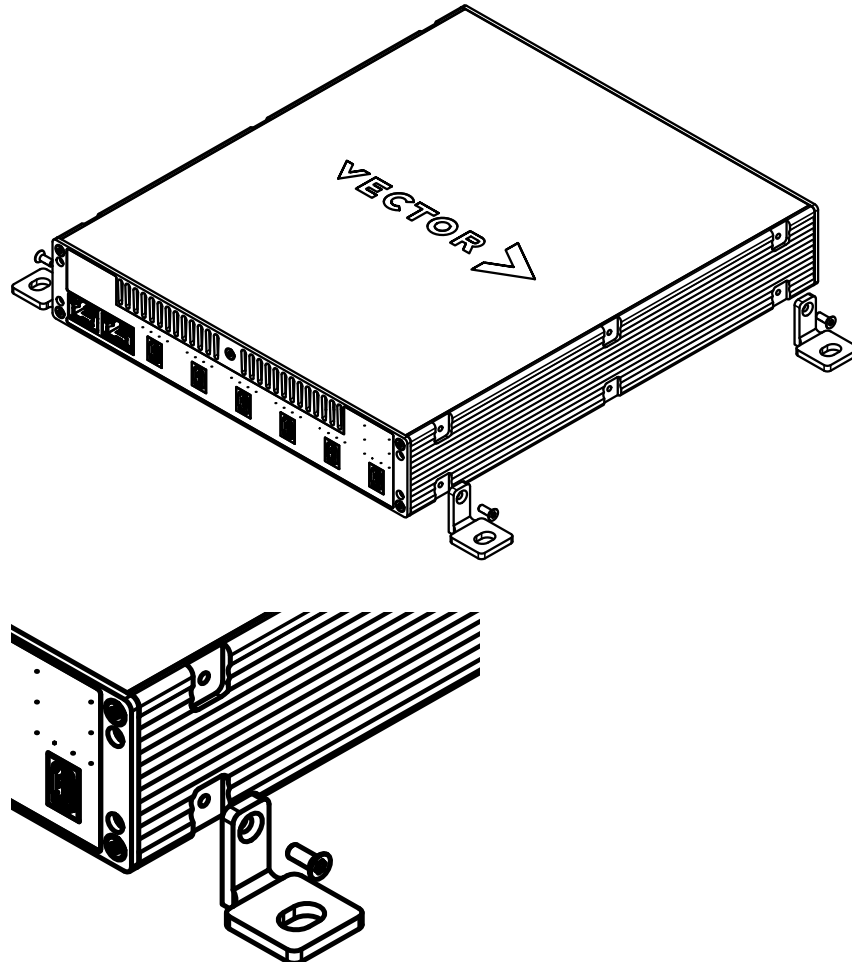

Note

- ▶ Mounting brackets may only be used for Vector devices in the Vector System Housing form factor.
- ▶ Always use all 4 brackets incl. screws for mounting.
- ▶ For systems up to max. 20 kg.
- ▶ For fixing the mounting brackets to the floor, wall or ceiling, suitable screws must be selected to ensure permanent fixing according to the expected load (not included in the scope of delivery).
- ▶ In case of uncertainty and questions, please contact qualified personnel.
- ▶ Tightening torque: Torx T10, 1.2 Nm.

9.1.8 Fix Kit 32mm Device

Technical data

Description	Fixing kit containing 4 pcs. of wall brackets for ALUbos housing incl. seals and screws. Suitable for VN1630A or VX1060 housing height.
Part number	07139



Note

- ▶ The Fix Kit may only be used for Vector devices.
- ▶ Always use all 4 brackets incl. screws for mounting.
- ▶ For devices up to max. 5 kg.
- ▶ For fixing the mounting brackets to the floor, wall or ceiling, suitable screws must be selected to ensure permanent fixing according to the expected load (not included in the scope of delivery).
- ▶ In case of uncertainty and questions, please contact qualified personnel.

9.1.9 Fix Kit 42mm Device

Technical data

Description	Fixing kit containing 4 pcs. of wall brackets for ALUbos housing 1040 incl. seals and screws. Suitable for VN1640A housing height.
Part number	07188



Note

- ▶ The Fix Kit may only be used for Vector devices.
- ▶ Always use all 4 brackets incl. screws for mounting.
- ▶ For devices up to max. 5 kg.
- ▶ For fixing the mounting brackets to the floor, wall or ceiling, suitable screws must be selected to ensure permanent fixing according to the expected load (not included in the scope of delivery).
- ▶ In case of uncertainty and questions, please contact qualified personnel.

9.1.10 Fix Kit Large Device

Technical data

Description	Fixing kit containing 4 pcs. of wall brackets for ALUbos housing 1600/1680 incl. seals and screws. Suitable for VN8900 or VX113x housing height.
Part number	07189



Note

- ▶ The Fix Kit may only be used for Vector devices.
- ▶ Always use all 4 brackets incl. screws for mounting.
- ▶ For devices up to max. 5 kg.
- ▶ For fixing the mounting brackets to the floor, wall or ceiling, suitable screws must be selected to ensure permanent fixing according to the expected load (not included in the scope of delivery).
- ▶ In case of uncertainty and questions, please contact qualified personnel.

9.2 Antennas

9.2.1 2.4 & 5 GHz Antenna SMA-R Std.

Technical data

Description	Standard antenna for EU, USA and other non-Asian countries. Suitable for 2.4 GHz and 5 GHz applications.
Part number	07169



Reference

A suitable antenna for Asian countries can be found section [2.4 & 5.2 GHz Antenna SMA-R Asia](#) on page 195.

9.2.2 2.4 & 5.2 GHz Antenna SMA-R Asia

Technical data

Description	Standard antenna for Asia. Suitable for 2.4 GHz and 5.2 GHz applications.
Part number	07170



Reference

A suitable antenna for EU, USA and other non-Asia countries can be found section [2.4 & 5 GHz Antenna SMA-R Std.](#) on page 195.

9.2.3 5.9 GHz DSRC Antenna SMA

Technical data

Description	Triton 5dBi DSRC 5.9GHz Dipole Terminal Antenna SMA(M). Hinged Connector for V2V and V2X Applications (5850-5925MHz DSRC band).
Dimensions	169 x 18 x 13 mm, Φ 13 mm
Part number	07204

9.2.4 GNSS Antenna SMA

Technical data

Description	Low profile magnet mounted GPS-GLONASS-GALILEO positioning antenna
Length	3 m (RG174 Coax cable)
Part number	07205



9.3 SDHC/SDXC Memory Cards

9.3.1 SDHC Memory Card (XQI8C016Z) 32 GB

Technical data

Description	32 GB SDHC flash card (industrial grade)
Part number	22370

9.3.2 SDXC Memory Card (GXQI8C016Z) 128GB

Technical data

Description	128 GB SDXC flash card (industrial grade) for: ▶ VN8911 ▶ VN8914
Part number	22371

9.4 CFast Card Reader USB 3.0 (external)


Technical data

Description	CFast Memory Card Reader USB 3.0
Part number	22268

9.5 Ser2K

Technical data

Description	Ser2K is an adapter cable for voltage level conversion from RS232 to K-Line (DIN9021)
Length	1.5 m
Connectors	1x female D-SUB9 connector 3x banana plugs
Properties	Integrated voltage level converter in D-SUB connector. Tolerant against ground offset between PC and K-Line up to 30 V.
Conversion	RS232-K-Line-RS232 0 ... 150 kBaud
Supply voltage V_{batt}	6 V... 30 V
Operating temperature range	-20 °C ... +50 °C
Pull up on K-Line	1.2 k
Trigger threshold	30 % and 70 % V_{batt}
Part number	05051

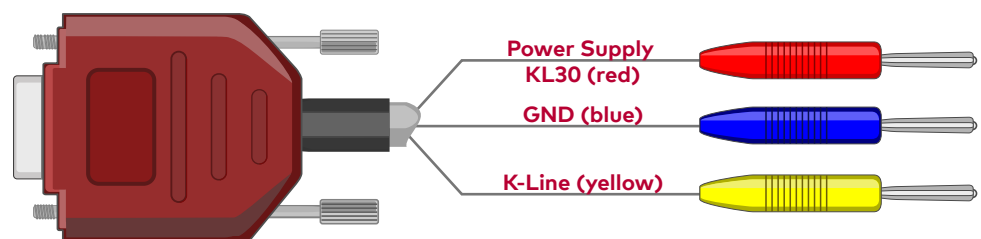

9.6 Protection

9.6.1 USB Protector Type 1

Technical data


Description	Protection against mechanical damages at the USB connector of VN1630, VN1630A, VN1640 or VN1640A.
Part number	05142



Step by Step Procedure

The following steps describe the mounting of the USB Protector:

1. Insert the USB cable into the USB Protector. Therefore, loosen the screw of the clamp.

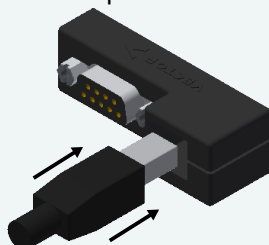

2. Attach the USB Protector to the Vector network interface and connect the D-SUB9 connector as well as the USB connector.




3. Tighten the screws of the D-SUB9 connector.
4. Tighten the screw to fix the USB connector.

9.6.2 Front Panel for VN8900

Technical data

Description	For use with VN8900 interface family without a slide-in module (e. g. VN8950, VN8970, VN8972)
Part number	07148

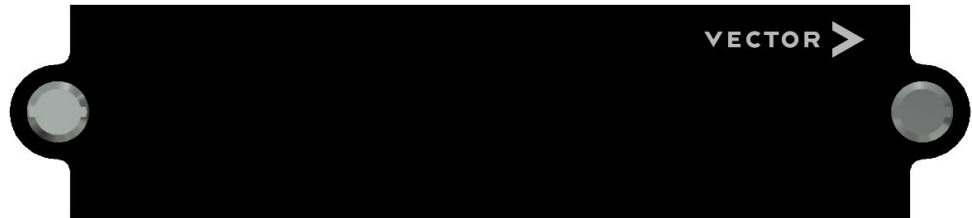

9.6.3 Protection Kit 1040

Technical data

Description	This protection kit contains two rubber bumpers which replace the standard seals of housing size 1040.
Part number	05110



Example



Figure 40: Top side



Figure 41: Bottom side

9.6.3.1 Mounting Instructions



WARNING!

To prevent electrical damage during assembly, you should avoid touching the lower and upper sides of the PC boards.



WARNING!


Always disconnect the power supply before assembling.




Step by Step Procedure

1. Remove all cables from the device.
2. Loosen the housing screws on the side with the four D-SUB9 connectors. This requires removing the two black decorative caps.


3. Carefully pull the PC-board out of the housing.

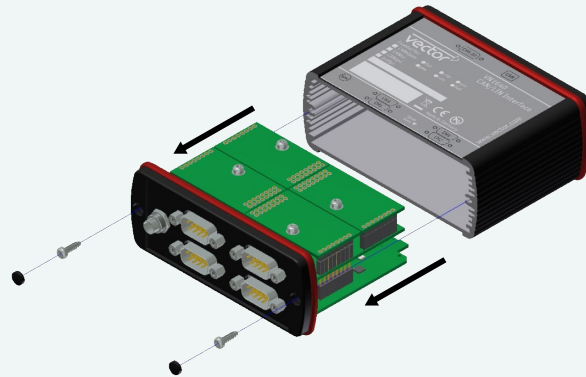


4. Remove the red standard sealing by pulling it over the black panel. Do not pull the sealing over the board to avoid damages on the components!

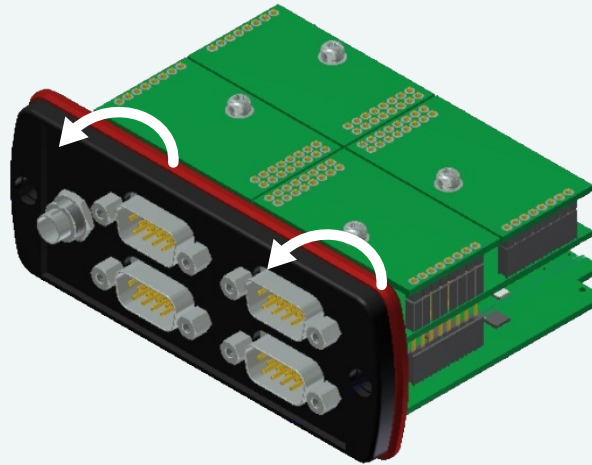


5. Pull the replacement rubber bumper over the black panel. Do not pull the sealing over the board to avoid damages on the components! Adjust the rubber bumper until it properly fits on the panel.

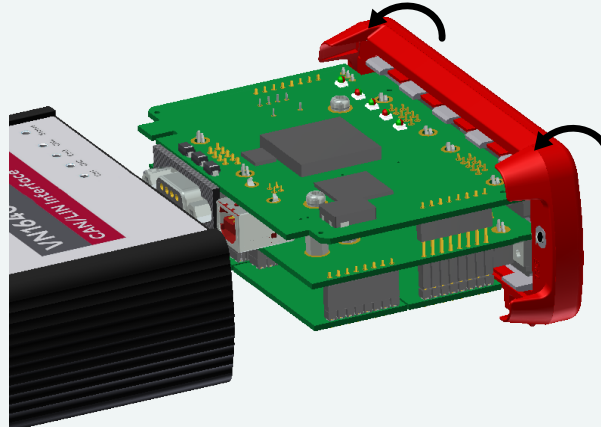

6. Place the board back in the housing. This operation involves placing the housing on a table with its back side (side with the bar code) facing upward. Then insert the board facing upward into the first guide rails. It should be possible to slide the board in the housing up to a few millimeters from the end without forcing it in.

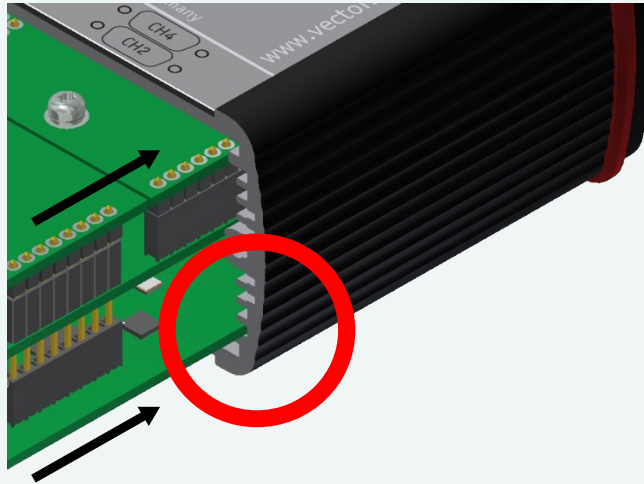

7. Close the housing by applying light pressure and then secure it with the appropriate screw fasteners. The screws should be secure but not excessively tight.
8. Please also attach the two black decorative caps.
9. Repeat the steps with the opposite panel.

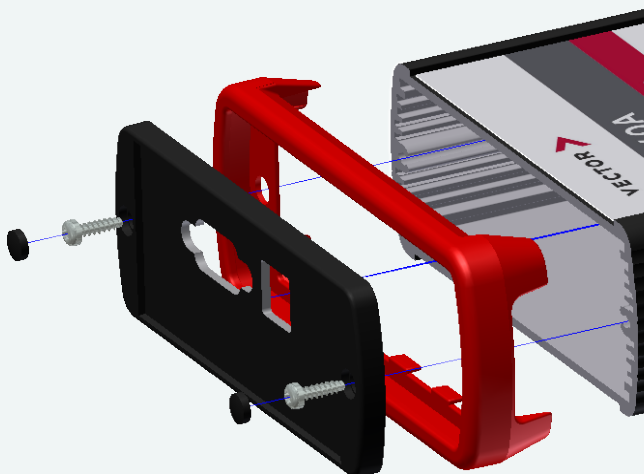

10 Important Notes - Details

In this chapter you find the following information:

10.1 Safety Instructions and Hazard Warnings	205
10.2 Disclaimer	206
10.3 Disposal of Vector Hardware	207

10.1 Safety Instructions and Hazard Warnings

**WARNING!**

This accessory is designed for the operation of a Vector interface which may control and/or otherwise influence the behavior of control systems and electronic control units. The operation of such interface may lead to serious hazards for life, body and property. In order to avoid personal injuries and damage to property, you have to read and understand the safety instructions and hazard warnings which are applicable for the interface prior to its installation and use. Keep this documentation (manual) and the documentation of the interface always near the interface.


10.2 Disclaimer

**WARNING!**

Claims based on defects and liability claims against Vector are excluded to the extent damages or errors are caused by improper use of the interface or use not according to its intended purpose. The same applies to damages or errors arising from insufficient training or lack of experience of personnel using the interface.

10.3 Disposal of Vector Hardware

Please handle old devices responsibly and observe the environmental laws applicable in your country. Please dispose of the Vector hardware only at the designated places and not with the household waste.

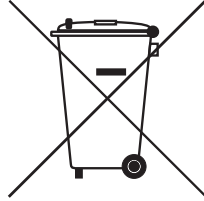

Within the European Community, the Directive on Waste Electrical and Electronic Equipment (WEEE Directive) and the Directive on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS Directive) apply.

For Germany and other EU countries, we offer free take-back of old Vector hardware.

Please carefully check the Vector hardware to be disposed of before shipping. Please remove all items that are not part of the original scope of delivery, e.g. storage media. The Vector hardware must also be free of licenses and must no longer contain any personal data. Vector does not perform any checks in this regard. Once the hardware has been shipped, it cannot be returned to you. By shipping the hardware to us, you have relinquished your rights to the hardware. Before shipping, please register your old device via:

<https://www.vector.com/int/en/support-downloads/return-registration-for-the-disposal-of-vector-hardware/>

11 Wichtige Hinweise

In diesem Kapitel finden Sie die folgenden Informationen:

11.1 Sicherheits- und Gefahrenhinweise	209
11.2 Haftungsausschluss	210
11.3 Entsorgung von Vector Hardware	211

11.1 Sicherheits- und Gefahrenhinweise



WARNUNG!

Dieses Zubehör dient dem Betrieb eines Vector Interfaces, welches das Verhalten von Regelsystemen und Steuergeräten steuern und in anderweitiger Weise beeinflussen kann. Dadurch können erhebliche Gefahren für Leib, Leben und Eigentum entstehen. Um Personen- und Sachschäden zu vermeiden, müssen Sie vor der Installation und dem Einsatz eines solchen Interfaces die für dieses geltenden Sicherheits- und Gefahrenhinweise lesen und verstehen. Bewahren Sie sowohl diese Dokumentation (Handbuch) als auch die Dokumentation des Interfaces stets in der Nähe des Interfaces auf.


11.2 Haftungsausschluss

**WARNUNG!**

Soweit das Interface nicht sach- oder bestimmungsgemäß eingesetzt wird, übernimmt Vector keine Gewährleistung oder Haftung für dadurch verursachte Schäden oder Fehler. Das Gleiche gilt für Schäden oder Fehler, die auf einer mangelnden Schulung oder Erfahrung derjenigen Personen beruhen, die das Interface einsetzen.

11.3 Entsorgung von Vector Hardware

Bitte gehen Sie verantwortungsvoll mit Altgeräten um und beachten Sie die in Ihrem Land geltenden Umweltgesetze. Entsorgen Sie die Vector Hardware bitte nur bei den dafür vorgesehenen Stellen und nicht über den Hausmüll.

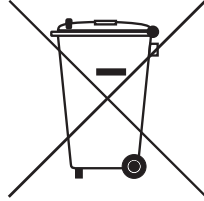

Innerhalb der Europäischen Gemeinschaft gelten die Richtlinie über Elektro- und Elektronik-Altgeräte (WEEE-Richtlinie) und die Richtlinie zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten (RoHS-Richtlinie).

Für Deutschland und andere EU-Länder bieten wir Ihnen eine kostenlose Rücknahme der alten Vector Hardware an.

Bitte überprüfen Sie die zu entsorgende Vector Hardware vor dem Versand sorgfältig. Bitte entfernen Sie alle Gegenstände, die nicht zum ursprünglichen Lieferumfang gehören, z. B. Speichermedien. Die Vector Hardware muss außerdem frei von Lizenzen sein und darf keine personenbezogenen Daten mehr enthalten. Vector führt keine Kontrollen diesbezüglich durch. Sobald die Hardware versandt wurde, kann sie nicht mehr an Sie zurück geliefert werden. Mit dem Versand der Hardware an uns haben Sie Ihre Rechte an der Hardware abgetreten. Bitte melden Sie vor dem Versand Ihr Altgerät an über:

<https://www.vector.com/de/de/support-downloads/return-registration-for-the-disposal-of-vector-hardware/>



Visit our website for:

- ▶ News
- ▶ Products
- ▶ Demo software
- ▶ Support
- ▶ Training classes
- ▶ Addresses